



WTS4 Series II Belt Scale

Operation and Installation Guide

Web Tech Australia Pty Ltd
PO Box 4006
11 Electronics St
Eight Mile Plains, QLD, 4113
Ph: 1800 777 906
Fax: 61 7 3841 0005
E-mail: info@web-tech.com.au

WTS4S2 – OPERATION AND INSTALLATION GUIDE

Contents

Introduction	1
Web-Tech Belt Scale Range.....	2
Theory of Operation.....	3
Theory of Operation – Weighframe	4
Pivoted Type Belt Scales.....	4
Fully Floating Weighframe	4
Theory of Operation – Speed Sensor	5
Belt Speed Sensor.....	5
Belt Travel Sensor.....	5
Theory of Operation – Integrator.....	6
Integrator Location.....	6
Theory of Operation – Calibration	7
Material Test	7
Calibration Chain / Train Test.....	7
Static Weight Test	7
Electronic Simulation Test.....	7
Theory of Operation – Conveyor Design	8
Weighframe Location	8
Conveyor Inclination	8
Concave and Convex Curves.....	8
Conveyor Take-up	8
Belt Loading.....	8
Belt Type.....	8
Belt Tracking.....	8
Conveyor Idlers.....	8
Theory of Operation – Conveyor Design	9
Idler Alignment.....	9
Conveyor Stringers	9
Environmental Protection	9
Theory of Operation – Calibration	10
Theory of Operation – Maintenance.....	11
Mechanical Installation	12
Refer to drawings:	12
Weighframe Location	12
Lifting of Belt	12
Weighframe Installation.....	12

Electrical Installation – Encoder Speed Sensor	18
Description	18
Mechanical installation	18
Electrical Installation	18
Part Number	18
Electrical Installation – Magnetic Pickup Speed Sensor	19
Description	19
Mechanical installation	19
Electrical Installation	19
Part Number	19
Electrical Installation – Proximity Switch	20
Description	20
Mechanical installation	20
Electrical Installation	20
Part Number	20
Electrical Installation – Integrator Masterweigh 6	21
Belt Scale Electronics	21
Enclosure Mounting	21
Cables	21
Cable Terminations	21
Start Up	21
Start Up Steps	21
Masterweigh 6 – Installation and Operation Manual	22
Appendix A – Belt Scale Arrangement GAs	A
Appendix B – Wiring Diagrams	B
Appendix C – Electrical Enclosure GAs	C
Appendix D – Belt Scale Positioning Guide	D
Appendix E – MW6 Datasheets	E

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Introduction

The model “WTS4S2” belt scale is one of Web-Tech’s “precision” type conveyor belt scales, and is suitable for applications including the measuring of material delivered to stockpiles, ship loading and rail loading. Accuracies in the order of $\pm 0.25\%$ are achievable. The WTS4S2 conveyor belt scale is a heavy-duty, four idler, fully suspended weighframe particularly suitable for the mining industry. Incorporating four (4) load cells, it is available to suit belt widths from 450mm to 2400mm. The weighframe can be supplied in either mild steel galvanised, or stainless steel construction. Standard idler spacing’s of 1000mm, 1200mm and 1500 mm are available.



WTS4S2 In-Situ in Conveyor
1000mm Idler Spacing, 1000mm Belt Width



WTS4S2 In-Situ



WTS4S2 In-Situ Billet

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Web-Tech Belt Scale Range

Model	Description	Typical Applications	Accuracy
E40	Universal type scale, simplest installation, dual load cell.	Aggregate plants, Feeder control	$\pm, 1 - 5 \%$
WTE11	Single idler, single load cell process scale with mechanical tare, belt widths up to 1050 mm.	Aggregate plants, Timber plants, Gold ore plants	$\pm, 1 - 3 \%$
WTE12	Single idler, dual load cell process scale with mechanical tare, suitable for belt widths up to 1600 mm.	Aggregate plants, Timber plants, Gold ore plants	$\pm, 1 - 3 \%$
WTE21	Dual idler, single load cell process scale with mechanical tare, belt widths up to 1050 mm.	Aggregate plants, Timber plants, Gold ore plants	$\pm, 0.5 - 1 \%$
WTE22	Dual idler, dual load cell process scale with mechanical tare, suitable for belt widths up to 1600 mm.	Aggregate plants, Timber plants, Gold ore plants	$\pm, 0.5 - 1 \%$
WTS1	Single idler, dual load cell heavy duty suspended weighframe, suitable for belt widths from 450 to 2400 mm.	All mining applications	$\pm, 1 \%$
WTS2	Dual idler, dual load cell heavy duty suspended weighframe, suitable for belt widths from 450 to 2400 mm.	All mining applications	$\pm, 0.5 \%$
WTS4	Four idler, four load cell, fully suspended weighframe, suitable for belt widths up to 2400 mm.	High accuracy loadouts, Material transfers	$\pm, 0.25 - 0.5 \%$
WTS6	Six idler, four load cell, heavy duty suspended weighframe, suitable for belt widths up to 2400 mm, high belt tension areas.	High accuracy product transfers such as shiploaders	$\pm, 0.1 - 0.25 \%$
WTS8	Eight idler, four load cell, heavy duty suspended weighframe, suitable for belt widths up to 2400 mm, high belt tension areas.	High accuracy product transfers such as shiploaders	$\pm, 0.1 - 0.25 \%$

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation

Belt scales enable material to be weighed on a conveyor whilst in motion. A belt scale differs from a static weighing system, such as a bin weighing system, in that the belt scale is required to measure two variables. The first variable is the weight on the conveyor belt, and the second variable is the belt speed or belt travel. The weight of material on the conveyor belt is obtained by measuring the load on one or more idlers. This load can then be expressed in terms of kg/metre of belt. The belt speed or belt travel is measured by using a device which gives an output proportional to the belt speed or belt travel. The flow "rate" of material passing over the belt scale can be expressed as:

$$\text{Flow Rate} = \text{Weight (Weighframe)} \times \text{Speed (Belt Speed Sensor)}$$

$$\text{Total Weight} = \text{Weight (Weighframe)} \times \text{Belt Travel (Belt Speed Sensor)}$$

Belt scale manufacturers use either the belt speed (flow rate) or belt travel (total weight) methods depending on their design philosophy. Those that use the belt speed (flow rate) method use a high frequency speed sensor (up to 1 kHz), the output of which is proportional to the belt speed. The integrator primarily calculates the "rate" passing over the belt scale, from which the "total" is then derived. Those that use the belt travel (total weight) method generally use a low frequency speed sensor, which delivers a number of pulses per unit of belt length. The integration primarily calculates the "total" weight, from which the flow "rate" is then derived. Due to the availability of high-speed processors, most modern belt scales use the "rate" method as the basis for their electronic design. Whilst the mathematics used by the belt scale electronics may appear to be relatively simple, the tasks required of the electronics are more complex. Not only must the electronics be capable of receiving and processing the signals from the weighing mechanism and belt speed / travel device, it must also be capable of the following:

- Display Rate and Total readings
- Provide stable power supplies to the weighing and belt speed / travel elements
- Provide analogue and digital outputs for remote equipment
- Provide Automatic Zero and Span calibration facilities
- Provide serial communications for remote computers
- Carry out "Auto Zero" routines when the belt is empty
- Provide alarm functions
- Provide control functions
- Interface with the operator

The measurement of the weight on the conveyor belt and the belt speed / travel also present some physical problems which must be overcome. The accuracy of the weight measurement is dependent on a number of factors such as belt tension, belt construction, weighframe location, troughing angle and material loading. The degree of accuracy and ways of improving the accuracy are discussed in further detail in the following sections.



WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Weighframe


Belt Scales consist of four main components these being:

1. Weighframe and associated weigh idlers
2. Belt speed / travel sensor
3. Electronic Integrator
4. Calibration device

The function of the weighframe is to support the weigh idler(s) and conveyor belt, and to convert the weight of the material within the weigh area to an electrical signal, which can be processed by the electronics. Weighframes are varied in design, however the majority of the designs incorporate one or more transducers, most typically strain gauge load cells. The weighframe is usually self-contained, low profile, and designed to be installed within the limits of the conveyor structure. The number of idlers used is dependent upon the accuracy required, and the conveyor parameters. Various weighframe designs exist, each with their own perceived advantages. Most belt scale manufacturers use either a "pivoted" design or a "fully floating" design. With a pivoted design, one or more idlers are mounted on a frame, which is pivoted at one end by some form of fulcrum point. The fulcrum point is designed to be as frictionless as possible and to require as little maintenance as possible. Early pivot designs included knife edges and bearings or ball bearings, however due to the perceived maintenance problems, and the advent of transducers with very small amounts of movement, these were replaced with components such as torque tubes, flexures or rubber trunnions. The "fully floating" design comprises one or more idlers mounted on frame, which is in turn supported at each corner by a transducer. Horizontal and transverse restrainers limit the movement of the weighframe in any direction, except that perpendicular to the belt line. The advantages of both types of design are as follows:


Pivoted Type Belt Scales

- Requires less transducers
- Better sensitivity from the transducers. As the pivoted design can be counterweighted allowing the "deadweight" of the belt and idles to be removed.
- Less calibration weights required

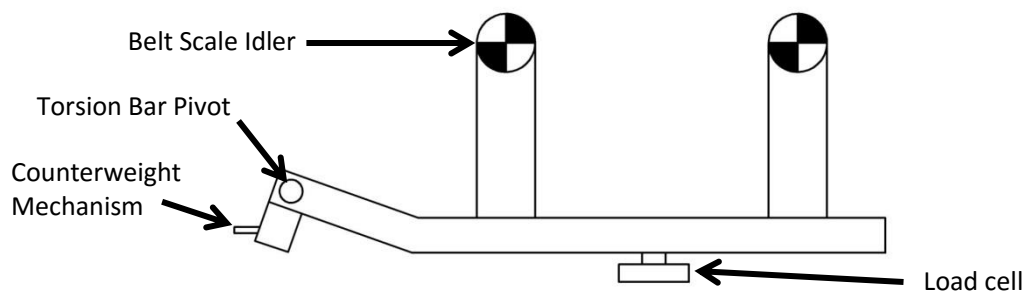

Fully Floating Weighframe

- Same design as used in high accuracy static weighing systems
- Do not use pivots, which could influence measurements
- Forces acting on weigh idlers act directly on transducers
- Calibration weights represent the same weight regardless of where they are placed on weighframe

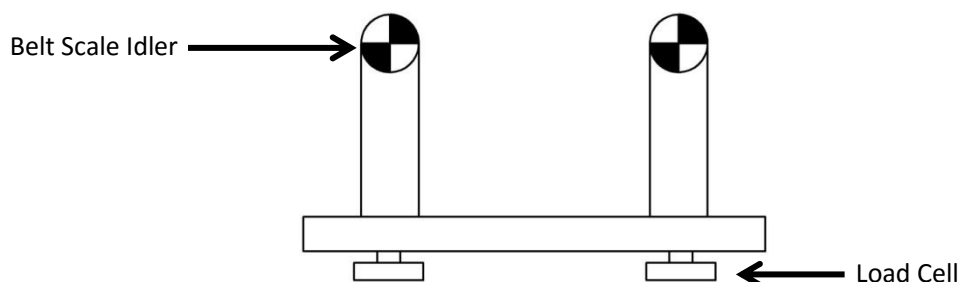

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Speed Sensor

As previously discussed, a sensor is supplied to provide a signal to the electronic integrator as to the actual belt speed or belt travel.

Belt Speed Sensor

Belt speed sensors can be supplied in several arrangements. The most common method is for a "rotary" type sensor to be mounted in an enclosure and then to be connected to a "live" shaft pulley, usually the tail pulley. As the pulley rotates, the speed sensor shaft is also rotated, which in turn produces a pulse output. The frequency of the pulse output is proportional to the rotational speed of the pulley. Typical frequencies fall within the range of 100 - 1000 Hz. Belt speed sensors should not be connected to the drive pulley, as any slippage between the drive pulley and conveyor belt will not be measured. A second type of belt speed sensor involves mounting a sprocket at the end of a conveyor roll, and sensing its rotational speed with the use of a "Magnetic Pick-up". The magnetic pick-up counts the number of sprocket teeth that pass by a sensing element, and therefore produces a frequency proportional to the speed. This system is not normally used on applications where the conveyor rolls are subject to material build-up, as this will change the diameter of the roll and therefore the indicated belt speed. However on some applications where the idler rolls appear to be carrying build-up, closer inspection will show that the area of idler roll in contact with the belt remains clean. The advantages of using the idler roll / sprocket type of sensor is that they are relatively simple and robust, and can be situated close to the weighframe. When installed close to the weighframe, the belt speed being measured is the actual belt speed at the weighframe.

A third type of system still popular with some manufacturers / customers is the use of a pivoted "trailing" arm with a wheel in contact with the return belt. The wheel is attached to a rotary sensor similar to that used with the tail pulley method. The disadvantages of this method are:

The wheel is prone to bounce when a disturbance in the belt surface such as a splice passes under it. This will cause a variation in frequency output, and therefore the measured belt speed.


The wheel is usually mounted on the return belt adjacent to the weighframe. This can be a long distance away from the weighframe (by belt travel), and therefore the belt speed measured may not be the same belt speed at the weighframe.

Belt Travel Sensor

A belt travel sensor usually consists of one or more "flags" welded to a pulley, usually the tail pulley, and a proximity probe. As the flags pass by the proximity probe they are counted, and this relates to the amount of conveyor belt that has passed around the pulley. The advantage of this type of system is that it is relatively simple and robust. However the disadvantage is that it is low frequency in output, and therefore the resolution can be coarse.



PXT Speed Sensor

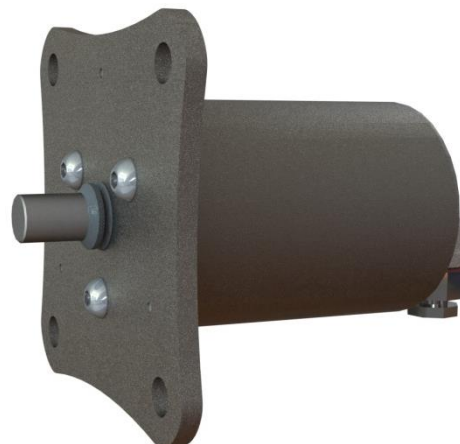

PXT Speed Sensor

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Integrator

The electronic integrator is designed to carry out the following basic functions:

- Provide supply voltages to weighframe transducers and belt speed / travel sensors
- Measure and integrate the instantaneous weight on weighframe and instantaneous belt speed / travel which calculates the mass rate and mass total passing over the conveyor respectively
- Provide analogue and digital outputs for remote equipment
- Provide facilities for calibration

The electronic integrator may also provide the following options:

- Provide P.I.D. control output
- Provide serial communications for remote computers
- Provide rate alarm outputs
- Provide batching facilities

Most modern integrators are microprocessor based with computing power similar to a personal computer. Each manufacturer engineers their own software, which incorporates their own design philosophies. Whilst all integrators may look similar at first glance, the methods used by the various manufacturers to achieve the end-result, can vary significantly. The current "state of the art" integrators are designed to make operation / calibration easier for site personnel, and great emphasis should be placed on the ease of use. Many sites will prefer the belt scale supplier to carry out routine maintenance and calibration, however in an emergency situation, there is nothing worse than having to wade through a manual, attempting to understand what a displayed code means.

Integrator Location

The electronic integrator does not have to be located adjacent to the weighframe. Some customers may wish to mount the integrator in a nearby motor control centre or in a control room. Whilst this is possible the following points should be considered when selecting the location:

- The weighframe transducers produce very low voltage levels and therefore if long cables are used voltage drops may occur
- The longer the cable run, the greater the chance of picking up electrical noise on the cables
- Long distances between weighframe and integrator increases the time required when carrying out calibrations
- Is the proposed area classified as Dust Ignition Proof or Hazardous?

It is Web-Tech's belief that the best location for the integrator is adjacent to the weighframe where possible. The output signals can be used to provide information to remote equipment. The integrator should be mounted so that it is free from vibration, not subject to direct sunlight and rain. If installed outdoors it is suggested that rain / sun hoods are used. When selecting a belt scale system, the following integrator features should be investigated:

- Are the operation /calibration functions displayed / entered in plain English or in code form?
- Is the circuit design truly digital or does it require potentiometer adjustments in its setup?
- Are service and fault finding functions available?
- Does the integrator maintain its accuracy over a wide temperature range, typically 0 to 40oC
- Are the analogue and pulse outputs "isolated"?
- Is the integrator enclosure suitable for the environment?
- Does the system provide automatic zero and calibration facilities?
- Are the integrator outputs compatible with remote equipment?
- Is the integrator supplied with filters on the mains input?
- Can the integrator be easily serviced?

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Calibration

There are basically four methods that can be used to calibrate a belt scale system:

- Material Test
- Calibration Chain / Train
- Static Calibration Weights
- Electronic Simulation

Material Test

A material test is the best form of test that can be done. The test involves collecting an amount of material that has passed over the belt scale, and weighing it on an accurate static weighing system such as a weighbridge or bin weighing system. Other methods of testing simulate material loading, however only a material test duplicates the actual operating conditions of the conveyor. With regard to the amount of material required for a test, a general rule of thumb is a test of 10 minutes duration. When considering the installation of a belt scale system, a method of diverting material from the process should be investigated. It is essential when carrying out a material test that it can be guaranteed that all of the material that has passed over the belt scale has been collected.

Calibration Chain / Train Test

A calibration chain / train is a device that sits on the conveyor belt above the weighframe approach and retreat idlers. It is restrained in position whilst the conveyor is run, and simulates material loading. A calibration chain consists of a series of interconnected steel rolls, which is manufactured to represent approximately 80 % of the maximum belt loading. A calibration train is similar to a chain, except that it consists of a series of interconnected carriages, which can be loaded with weights to simulate various belt loadings. The disadvantages of calibration chains / trains are as follows:

- They are generally expensive, sometimes more expensive than the belt scale they are testing
- They require additional personnel to set up
- They have to be stored above the conveyor and therefore a storage structure has to be built
- They require maintenance

Static Weight Test

Static weight tests are the most common form of testing carried out on Belt Scales. All belt scale manufacturers offer calibration weights as an option with the system, the weight and quantity sized to approximate 75 - 80 % of maximum belt loading. The calibration weights are applied directly to the weighframe, the belt is run, and material loading is simulated. This is the method Web-Tech generally uses to calibrate our belt scales. The advantages of this method are as follows:

- Can be applied by one person, and for high belt loadings, permanent weights that can be jacked on / off the weighframe can be installed
- If a material test can be initially carried out, they can be referenced to the material test results
- Repeatability tests are easy to carry out
- This is generally the cheapest method

The disadvantages of static calibration weights are as follows:

- They cannot exactly duplicate the running conditions of the conveyor
- They sit directly on the weighframe, and therefore do not duplicate the belt effects
- They tend to be lost

Electronic Simulation Test

Electronic Simulation tests are carried out without the use of weights, material or chains. When the test is initiated, a "shunt" resistor is applied across the transducer input, which creates an offset. The value of the resistor is usually calculated to represent approximately 75 - 80 % of maximum belt loading. A test value is initially established at the time of commissioning, which can then be used to check the repeatability of the system. This method of testing does not obviously take into account the belt effects or conveyor running conditions. Web-Tech provides this method of testing as a standard feature, however we do not place great emphasis on its use.

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Conveyor Design

Conveyors are designed to transport material from one location to another, and not specifically for the benefit of a belt scale. A belt scale is often an afterthought, and therefore the conveyor design may be less than ideal for accurate and repeatable results. The following is a summary of recommended conveyor design.

Weighframe Location

The weighframe should be located in a position where the belt tension and belt tension variations are minimal. Generally speaking this location is at the tail end of the conveyor at the loading point. However sufficient distance from the loading point should be provided to allow the material to be settled, and be travelling at the same velocity as the belt. Typically for most products, this is approximately 6 idler widths or from 6-9 metres.

Conveyor Inclination

Ideally the conveyor would be horizontal to provide for more consistent belt tensions, however this is not generally practical. The conveyor inclination angle should not be so great as to allow the product to roll back. This will cause a positive error (some material will be weighed twice) from the belt scale.

Concave and Convex Curves

Concave curves should be avoided where possible. The weighframe should be located as far away as possible from the tangent point of the curve, and no closer than 20 metres. Convex curves are less of a problem, however the weighframe should be located no closer than 6 metres from the tangent point of the curve.

Conveyor Take-up

The conveyor should preferably be fitted with gravity take-up on the return belt. Gravity take-ups located on the tail pulley are acceptable, however less desirable. Screw take-ups on short conveyors (less than 15 metres) may be acceptable, however not preferred.

Belt Loading

Belt loading should be uniform and consistent. Belts should be sized so that they are volumetrically 75 - 80 % full.

Belt Type

The selected belt type should use the minimum number of plies possible. Additional plies add to the stiffness of the belt and therefore reduce the achievable accuracy. Steel cored belts are the least desirable due to the stiffness of these belts. Conveyor belts should be uniform in weight, with a minimum of splices. Metal clip fasteners should not be used.

Belt Tracking

Belt tracking should be central to the idlers regardless of belt loading. Training idlers should not be used any closer than 5 idler spacings from the weighframe.

Conveyor Idlers

It is more desirable to use idlers with shallow troughing angles. Idlers with 20° angle are better than 30° angle, and 30° is better than 35°. Idlers with 45° troughing angle can be used, however errors due to belt tension changes are more significant. The steepness of the troughing angle determines the planar moment of inertia of the belt, which determines how susceptible the Belt Scale is to belt tension variations and misalignment. Idlers on the weighframe, two approach and two retreat idlers should be:

- In-Line "Weigh Quality"
- Rolls should be machined concentric to provide 0.13 mm Total Indicated Runout
- Rolls to be balanced within 0.011 Nm
- Rolls to be fitted with some form of height adjustment

On some low accuracy applications, some of the above requirements may not be required.

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Conveyor Design

Idler Alignment

The mechanical alignment of the weigh approach and retreat idlers is critical. The height misalignment in this area should be no greater than ± 0.4 mm. Mechanical misalignment of these idlers will cause the accuracy of the system to vary depending on belt tension variations. It is advisable to have the belt scale supplier assist in the mechanical installation.

Conveyor Stringers

The conveyor stringers should be rigid, free from vibration and capable of supporting the load without deflection. The weighframe's and approach / retreat idlers should not be installed where joins in the stringers exist if this is not possible, stringers should be welded together using "fish" plates. The stringers should be suitably supported in the area of the weighframe / approach / retreat idlers so that the total deflection within the weigh area does not exceed 0.25 mm.

Environmental Protection

Where the conveyor is exposed to the elements, errors may be induced by external influences such as wind. Errors equivalent to 30 tonnes per hour have been measured on large conveyors subject to high wind velocities. These errors can be minimised by installing guards, which protect the weighframe and 5 metres of conveyor in each direction. Where possible, supply the belt scale manufacturer with a detailed arrangement drawing of the proposed installation with as many parameters as known.



WTS1S2 Belt Scale in Operation

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Calibration

Most belt scale manufacturers can supply a number of different model weighframes and electronic integrators. Some models may appear to duplicate each other in regard to accuracy specifications and general features. For example, two different model weighframes may be specified at an accuracy of $\pm 0.5\%$. However one model may be designed for medium duties with relatively light belt loadings and the other for heavy-duty applications with high belt loadings. When you examine the construction of the weighframe, will it stand up to the duty?

The accuracy of the system will be determined by the weighframe type, as the same model electronics will normally be used regardless of the accuracy requirements. More than one model electronics may be available, however this is generally because they offer various options. When specifying a desired accuracy for the belt scale system, the application should be investigated thoroughly. Like most equipment, the higher the accuracy specified the more expensive the system will be.


Belt scale accuracy depends on a number of factors such as belt tension, belt type, location and belt loadings. However they are usually categorised into one of three groups.

SINGLE IDLER Used for general purpose process scales, with typical accuracies in the order of 1% to 3%.

DUAL IDLER Used for inventory purpose scales with typical accuracies of 0.5%.

MULTI IDLER Used for high precision systems such as ship loaders and scales for payment purposes. Accuracies typically 0.25% or lower.

However in some applications it may be necessary to use a four idler weighframe to achieve 1% accuracy. On other applications, a single idler weighframe may achieve 0.5% accuracies. The belt scale supplier will require certain information regarding the application, which should be detailed on their "Application Data" sheets. It may be preferable to allow the supplier to review the data and advise what options are available in regard to the possible accuracy versus the costs, rather than specifying the accuracy.

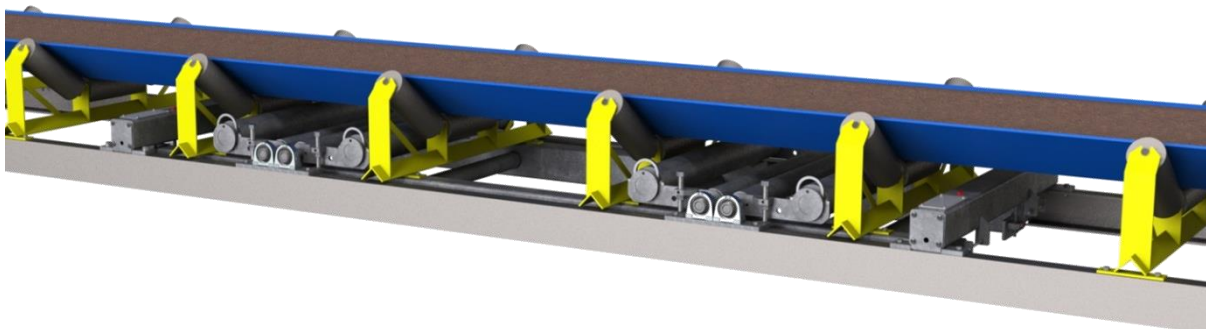

WTS4S2 in Operation
4 Idler Precision Belt Scale

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Theory of Operation – Maintenance

Many belt scale installations are ignored until a problem exists. Like all equipment a minimum of maintenance will assist in providing long-term reliability. For multiple installations at the one site it may be worth contracting the Belt Scale supplier to carry out the maintenance and regular calibrations. These visits can also be used to provide basic training for the site personnel in the event of an emergency breakdown situation. These site visits are normally scheduled at three monthly intervals.


The following work should be carried out on a regular basis:

- Clean down of build-up on weighframe and removal of spillage
- Inspection and cleaning of idler rolls
- Zero calibrations
- Inspect belt tracking
- Inspect belt wear

The following work can be carried out less frequently:

- Span calibrations
- Check mechanical alignment
- Balance transducers (where necessary)
- Check cabling and junction boxes

Apart from the general housekeeping of the installation, the other important aspect that should be addressed is the record keeping for each installation. Most modern belt scale electronics store all data in battery backed or non-volatile memory, however in the case of catastrophic failure this data will probably be lost or not accessible. At these times it is essential that accurate records be available for reprogramming purposes. Accurate records also allow review of the belt scale performance and possible problems that may require attention.

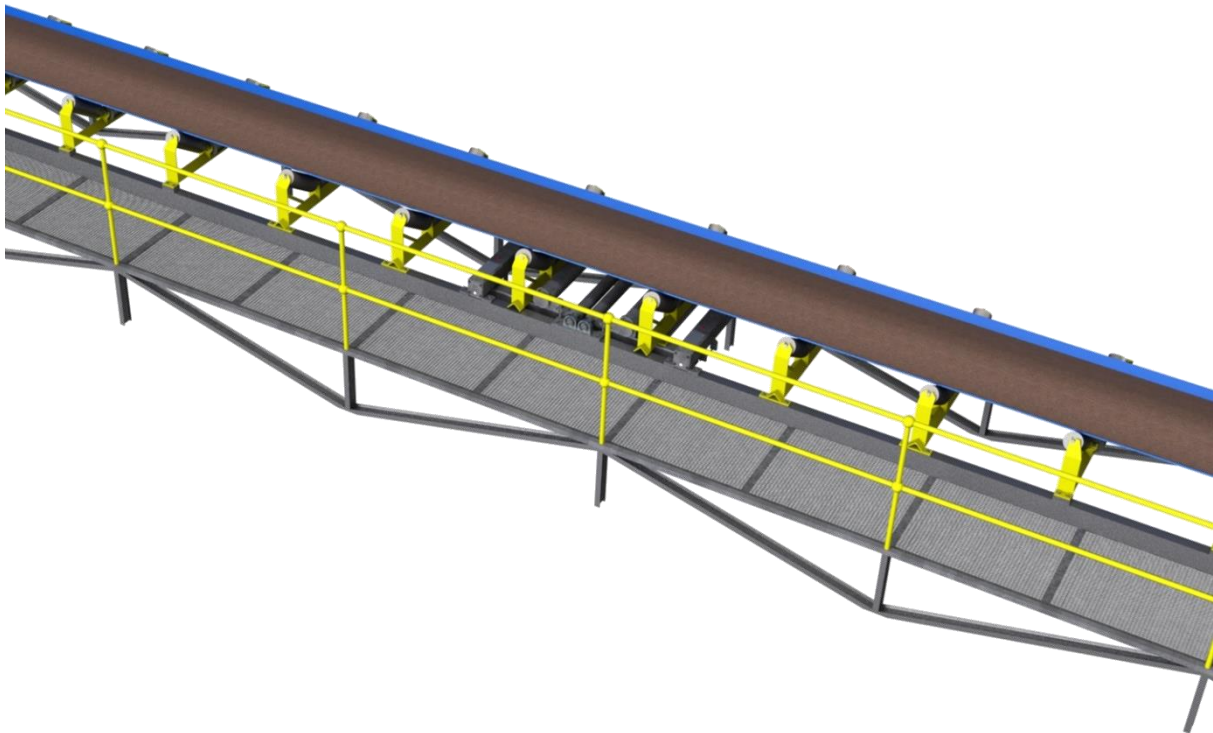

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Mechanical Installation

The model WTS4 Series II weighframe is a four idler, four load cell, fully floating design. The mechanical installation comprises of the following work:

- Lifting of conveyor belt in proposed weighframe location
- Installation of weighframe and support beams
- Installation of weigh idlers on weighframe
- Installation of approach and retreat idlers
- Aligning the height of the weigh, approach and retreat idlers

Refer to drawings:

Calibration Bars

WTS4S200 & WTS4S210

In situ Calibration Weight

WTS4S211 & WTS4S212

In situ Calibration Weight Billet

WTS4S213 & WTS4S214

Weighframe Location

The weighframe location may have been previously nominated after discussions with Web-Tech. If not refer to Appendix D Belt Scale Positioning Guide for help, or contact Web-Tech to confirm the position.

BEFORE CARRYING OUT ANY WORK ON THE CONVEYOR, ISOLATE THE CONVEYOR DRIVE AS REQUIRED.


Lifting of Belt

The conveyor belt (if fitted) will be required to be lifted off the idlers in the area of the installation. The belt should be lifted so that access is available for approximately 5 metres either side of the weighframe centre. The belt should be lifted approximately 600 mm above the idlers, and the belt should be lifted by means of placing pipe or timber under the belt, which will keep the belt flat. If the conveyor is fitted with a gravity take-up, it will be necessary to lift the take-up weight first. Ensure that the belt is supported securely before commencing any work.

Weighframe Installation

The weighframe is robust in design, however care should be exercised when lifting and installing it into position. **The weighframe should be lifted with web slings, do not use chains.**


- 1) If standard idlers already exist, remove eight sets from the conveyor.

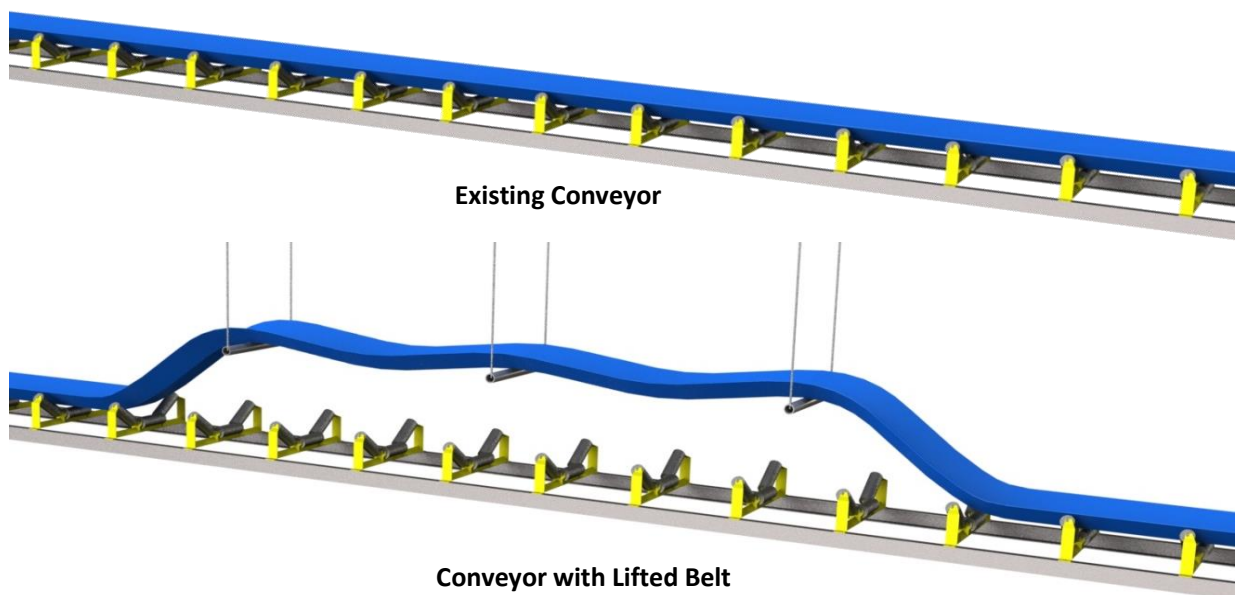

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Mechanical Installation

- 2) Mark out the centre of the space created, and this will be the centre of the weighframe.

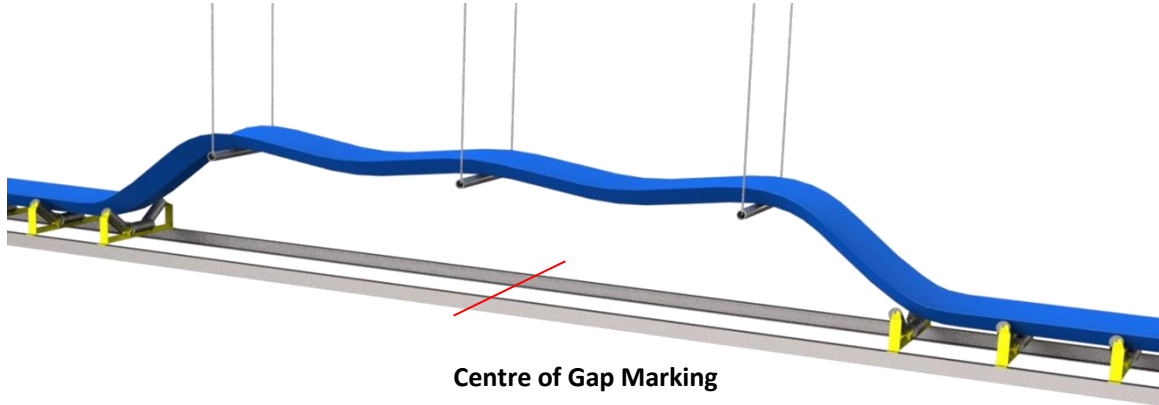


- 3) Remove the weighframe from the packing crate.

- 4) Lift the weighframe into the conveyor so that the weighframe mounting feet are sitting on the stringers. Position the weighframe so that the centre of the weighframe is in line with the previously marked out centre of the space.

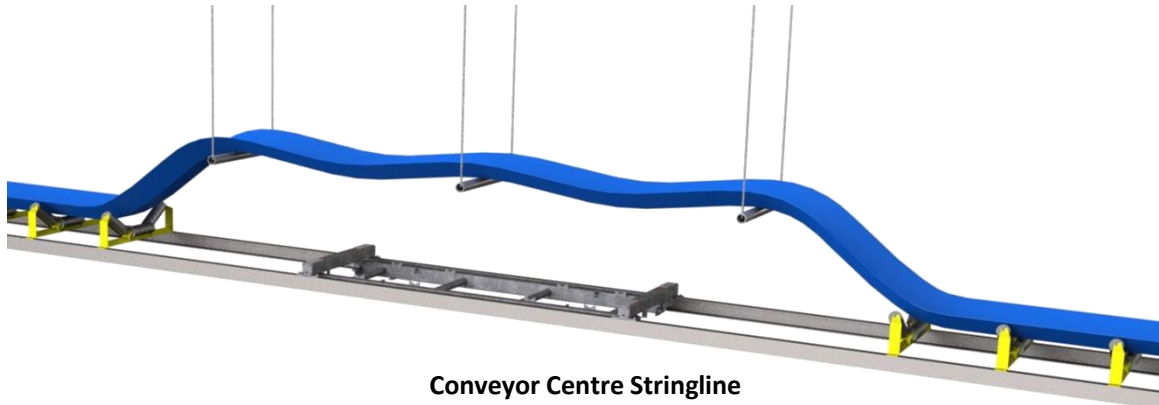

- 5) Measure and mark the centre of the centre (horizontal) roll on the first of the existing idlers in each direction. Tie a stringline between these centre points.

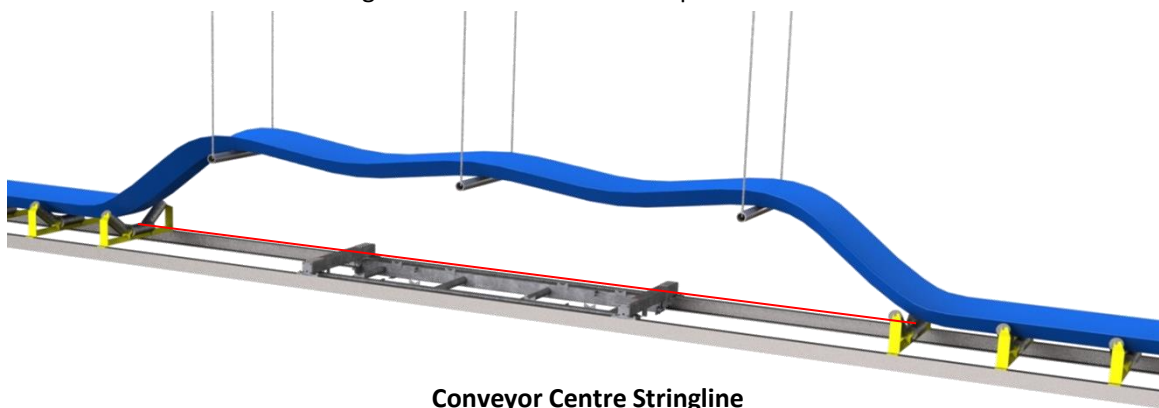


- 6) Measure and mark the centre of the weighframe crossbeams. Square the weighframe up so that the centre of the crossbeams are in line with the stringline.
- 7) Mark out the position of the weighframe mounting holes on the conveyor stringers. Drill 18 mm holes, for M16 bolts. Install bolts, washers and nuts and tighten down. Ensure that spring washers are used.

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Mechanical Installation

- 8) Web-Tech supplies a custom set of calibration weights for each belt scale. Install the calibration weight bearings as specified by Web-Tech. The actual weights will be installed later. It is important to bearings are aligned so that they enable to the calibration weights to make clean contact with the “V” blocks welded to the weighframe.

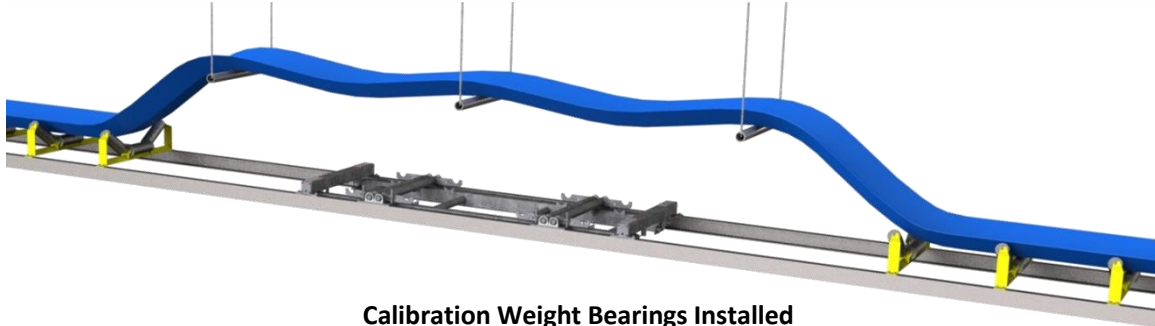


Calibration Weight Bearings Installed

- 9) Locate four of the In-Line Weigh Quality idlers. Sit the idler frames across the weighframe on the idler mounting plates. Install centre rolls into the idler frames (wing rolls not required at this stage). Ensure that grub screws in roll shafts are not protruding from the bottom of the shaft. Measure and mark the centre of the centre roll face.

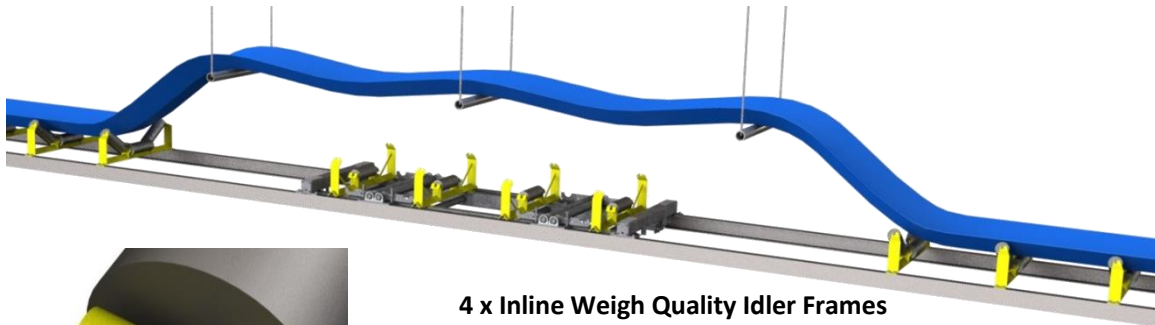


**4 x Inline Weigh Quality Idler Frames
With Centre Roll Installed**

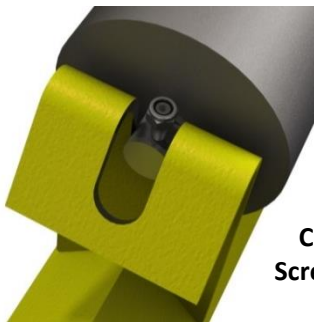

**Centre Roll Grub
Screw and Nyloc Nut**

- 10) Position the idlers so that they are:
- In line with the stringline
 - Are dimensionally laid out as shown on the installation drawing. When the idlers are positioned correctly, the idler base is to be welded to the mounting plates on the weighframe.

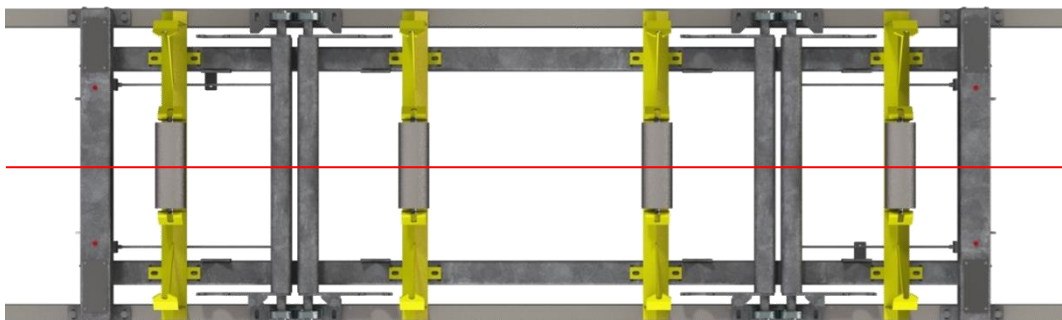

NOTE: THE LOADCELLS ARE PREINSTALLED IN THE WEIGHFRAME AND COULD BE DAMAGED BY IMPROPER WELDING PRACTICES. ENSURE THAT WELDING EARTH STRAP IS CONNECTED AT THE POINT OF WELDING.

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Mechanical Installation

- 11) Now that the idler frames have been welded into position the calibration weights can be installed. The bar type of calibration weights do not need to be installed at this time.




**Calibration Weights Installed
onto the Calibration Weight Bearings**

- 12) Locate the remaining in-line weigh quality idlers, and sit frames across the conveyor stringers, with two sets upstream and two sets downstream of the weighframe. Install centre rolls in these frames. Measure and mark the centre of the centre roll face on these idlers.

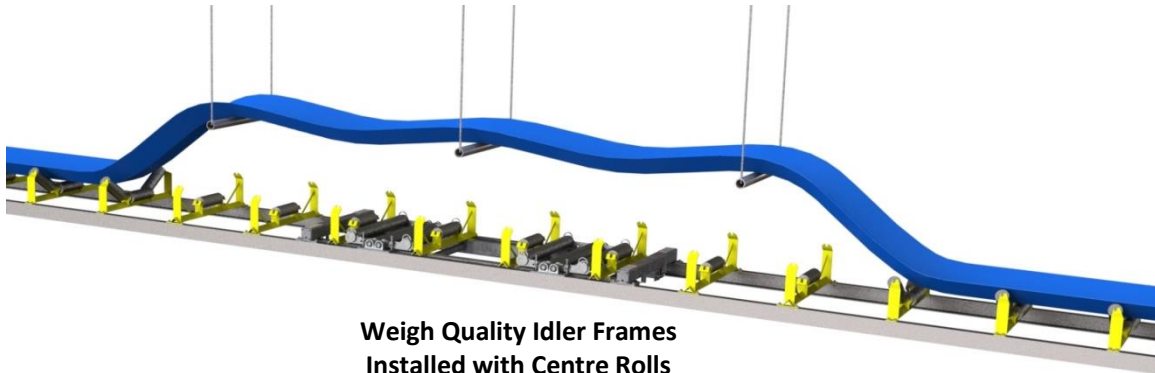

**Weigh Quality Idler Frames
Installed with Centre Rolls**

- 13) Position the idlers so that they are:
- In line with the stringline
 - Are dimensionally layed out as shown on the installation drawing

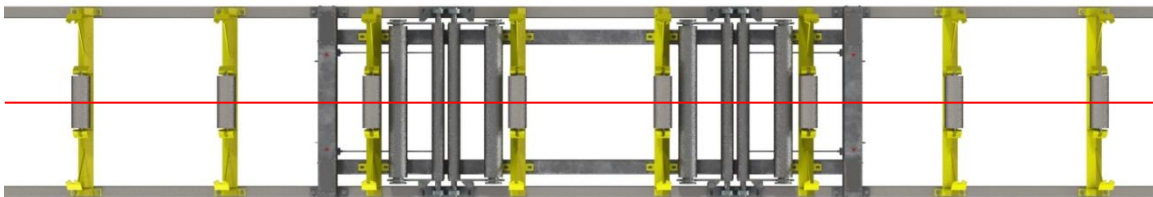

- 14) Mark out mounting holes on stringers and drill holes to suit the idler mounting feet. Install bolts, washers and nuts and tighten down. Ensure spring washers are used.
- 15) Re-check idler spacing and centres. Adjust if necessary.
- 16) Run a further two stringlines (30 lb fishing line) from the same existing idlers as the centre line was tied off to. The stringlines should be approximately 12 mm in from each edge of the roll.


WTS4S2 – INSTALLATION AND OPERATION MANUAL

Mechanical Installation

- 17) Carefully lower the weighframe shipping bolts so that the weighframe now sits on the load cells.



- 18) Go to the first in-line idler (shown as +C2). Place a spirit level across the top of the centre roll. Adjust the idler roll using the grub screws, so that it is level. If the amount of adjustment required is more than approximately 5 mm, it is better to use a packer under the idler mounting foot.
- 19) Go to the last in-line idler (shown as -C2) and level centre roll.
- 20) The in-line idlers should be higher than the existing offset idlers due to their design. The levelled centre rolls should already be in contact with the two stringlines at the edge of the rolls. The in-line idlers should **never** be lower than the standard existing idlers. If they are, they will require packers to be installed under all mounting feet.

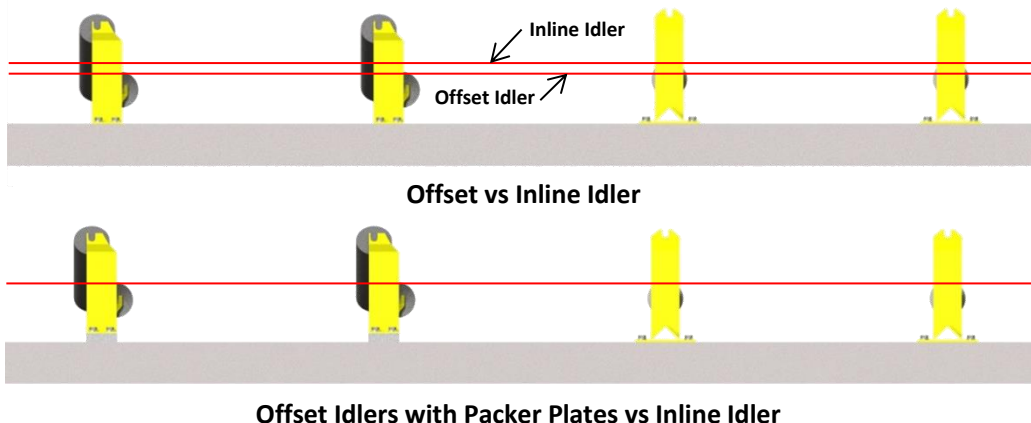

Offset Idlers with Packer Plates vs Inline Idler

- 21) The two reference stringlines should be clear of the centre rolls in the other idler frames (+C1, W1, W2, W3, W4 & -C1). If not, adjust the grub screws on +C2 and -C2 idlers by equal amounts until both stringlines are clear of all centre rolls. When this has been completed, ensure locknuts are tightened. Permissible tolerance is +0.4, -0.0 mm.
- 22) Proceed to adjust the remaining centre rolls until they just touch the stringlines. Ensure all locknuts have been tightened after adjustment. After all rolls have been adjusted, recheck all rolls are still in contact with the stringlines.

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Mechanical Installation

- 23) Locate the remaining idler rolls and install all wing rolls. Ensure that grub screws in roll shafts are not protruding from the bottom of the shaft.




All Wing Rollers Installed

- 24) Run a further two string lines on both sides of wing rolls similar to the centre rolls.

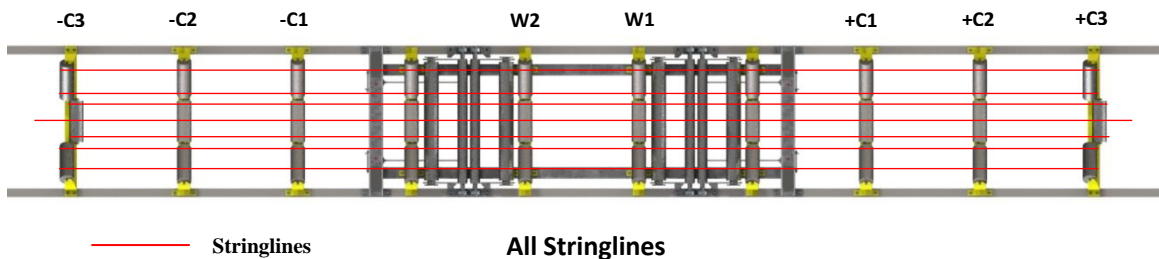

All Stringlines

- 25) Starting on one side of wing rolls, the same procedure is required to be carried out as the centre rolls. Adjust the wing rolls on +C2 and -C2 idlers evenly so that they are clear of all remaining wing rolls.
- 26) Go through and adjust all rolls so that they are just touching the stringlines. When this has been completed, ensure that all locknuts are tightened. Permissible tolerance is +0.4, 0.0 mm.
- 27) Review all adjustments, and if satisfied, remove all stringlines.
- 28) Carefully lower the conveyor belt. **Do not drop the belt onto the weighframe.**

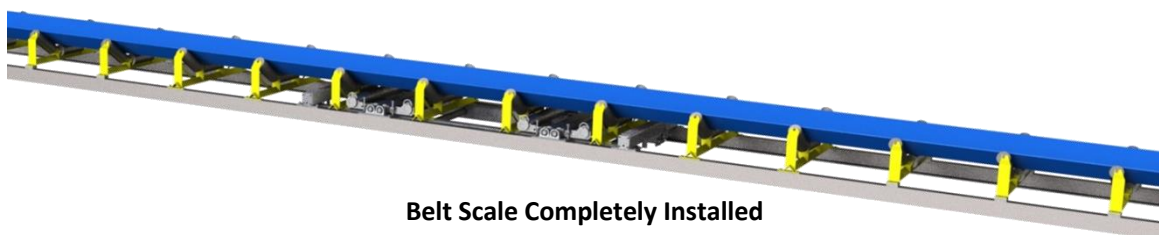

Belt Scale Completely Installed

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Electrical Installation – Encoder Speed Sensor

Description

The belt speed sensor supplied with the belt scale is a digital incremental encoder. It produces a square wave output, the frequency of which is proportional to the belt speed.

The encoder should be connected to a non-driven pulley i.e. not a drive pulley. This is because there could be some slippage between the drive pulley and the belt. The encoder is typically connected to the tail pulley or a “snub” pulley.

The encoder is available in the following models:

100 PPR

200 PPR

500 PPR

The model supplied for your application has been based on the belt speed, and pulley diameter information that was provided. For slower belts, an additional pulse multiplier board may be supplied. This board is located in the belt speed sensor junction box. It allows the pulses from the encoder to be multiplied X1, X2 or X4. The frequency range is typically 80 to 500 Hz.

Mechanical installation

The installation of the encoder can be either by direct connection to the pulley shaft using a solid coupling, or on a separate bracket and spring coupling.

If using a solid coupling, the encoder must use a restraining arm, which is in contact with a fixed part of the conveyor. This will prevent the encoder from rotating with the pulley shaft.


If using the spring coupling method (most common), the spring coupling alignment must be within 1 mm in all axes. If the coupling is not correctly aligned, it will eventually break. Provision must be made so that if the pulley position is changed, the encoder bracket can also be moved to maintain accurate alignment. See drawing “WTMW6” in Appendix B to see typical installation arrangements.

Electrical Installation

The encoder is provided with a three (3) core cable approximately 1 metre long. Therefore the belt speed sensor junction box must be installed within its reach. The cable should be mechanically protected. Refer to drawing “JB010015” (Appendix B) for termination details.

Part Number

The part number(s) for the encoder include the PPR output of the encoder. The typical P/No. is “WXT-XXX” where “XXX” is the PPR. Therefore a 100 PPR encoder would have the P/No. “WXT-100”.

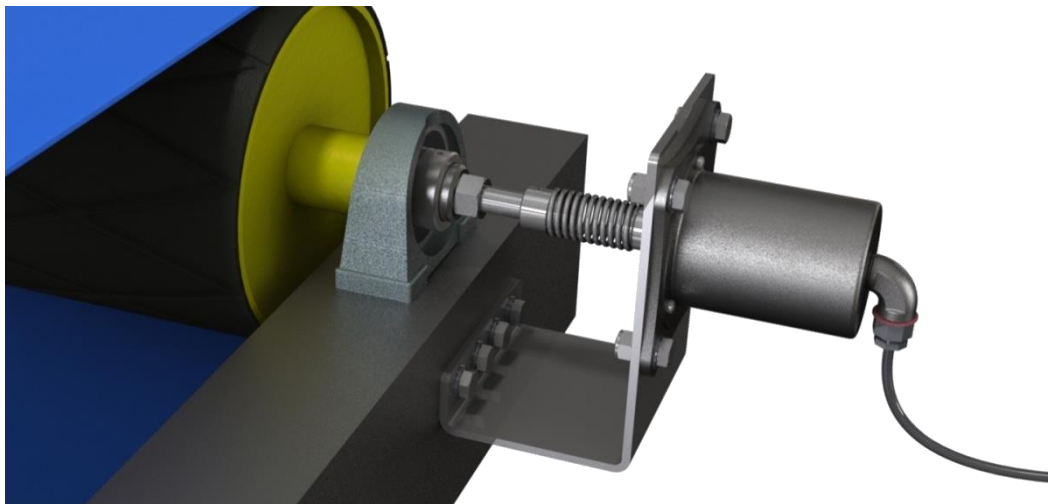

WXT Encoder with Spring Coupling on Tail Pulley

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Electrical Installation – Magnetic Pickup Speed Sensor

Description

The belt speed sensor supplied with the belt scale is a stainless steel magnetic pick-up. It is not a proximity switch, and does not require a supply voltage. It produces a sinusoidal output, the frequency of which is proportional to the belt speed. The amplitude of the voltage output is proportional to the rotational speed of the idler roll/sprocket, and the proximity of the magnetic pick-up to the sprocket. A sprocket is also supplied with the sensor, which is installed on the end of an idler roll. If the sprocket has not been fitted by Web- Tech, it is extremely important that the sprocket be fitted centrally to the idler roll. We suggest that the sprocket be fitted, then rotated in a lathe to check its concentricity.

Mechanical installation

The installation of the magnetic pick-up should be on an idler adjacent to the weighframe. The idler roll used should be the horizontal centre roll. The magnetic pick-up should be adjusted so that the sensor “nib” is 0.5 mm from the sprocket tooth. After adjustment and the locknut tightened, the idler roll should be rotated by hand to ensure that no teeth on the sprocket come into contact with the sensor nib.

Electrical Installation


The magnetic pick-up is provided with a two (2) core cable approximately 2.5 metres long. Therefore the belt speed sensor junction box must be installed within its reach. The cable should be mechanically protected.

Part Number

The P/No. for the magnetic pick-up is:

BS-013-01

BS-013-02

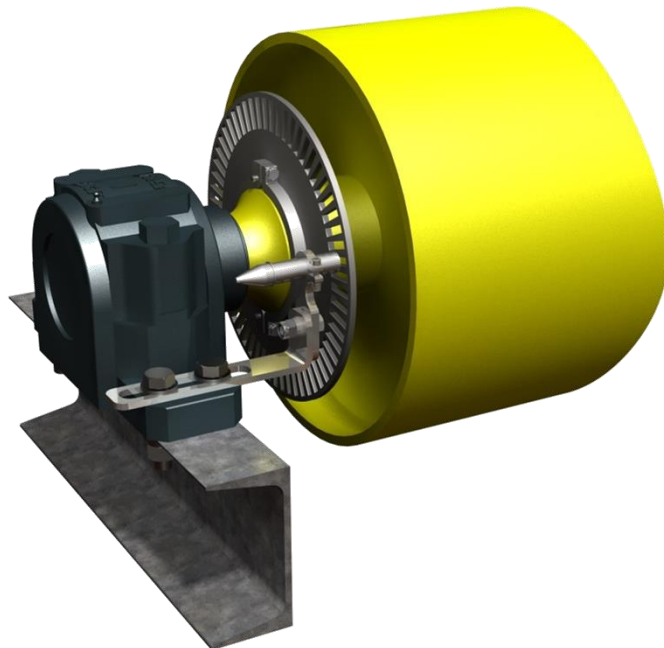

Mag Pickup and Target Disk on Pulley

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Electrical Installation – Proximity Switch

Description

The belt speed sensor supplied with the belt scale is a proximity switch. It is used in conjunction with “flags” on a pulley, or specifically designed sprocket. It produces a square wave output, the frequency of which is proportional to the belt speed. A “pull-up” resistor is provided, which is installed in the belt speed sensor junction box. Sufficient flags must be installed so that the frequency output is not less than 10Hz at the slowest belt speed.

Mechanical installation

The installation of the proximity switch should be typically 3 mm to 5 mm from the metal flags. The maximum sensing distance of the switch supplied is 15 mm. The minimum clearance between the face of the switch and any metal past the flags should be twice the sensing distance (30 mm). Ensure that the face of the proximity switch will not come in contact with any of the flags. After adjustment tighten any locknuts.

Electrical Installation


The proximity switch is provided with a three (3) core cable approximately two (2) metres long. Therefore the belt speed sensor junction box must be installed within its reach. The cable should be mechanically protected.

Refer to drawing “WTMW6-01-13” for termination details.

Part Number

The part number for the switch supplied is as follows:

BS-014-02

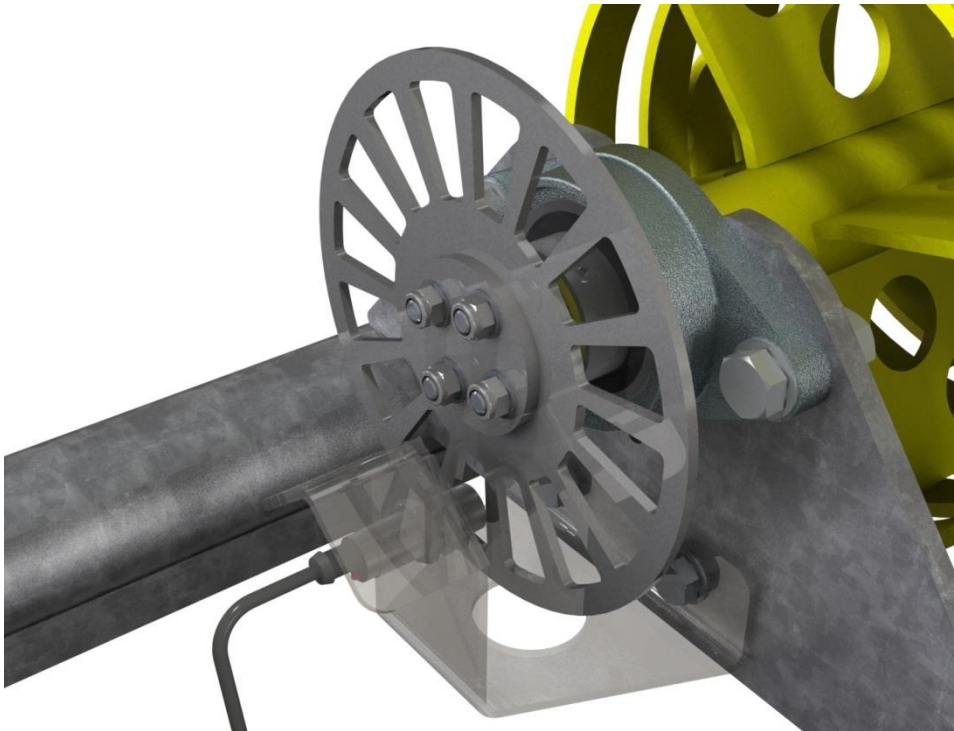

Proximity Switch and Stainless Steel Target Disk Installed on Spiral Tail Pulley

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Electrical Installation – Integrator Masterweigh 6

Electrical connection diagrams for the belt scale electronics, load cell and belt speed sensor junction boxes are located in Appendix B of this manual. Electrical installation comprises the following work:

- 1) Install and connect the “Novus” integrator to mains supply (See “WTMW6”, Appx. B).
- 2) Install and connect load cell wiring between weighframe and load cell.
- 3) Install and connect cable between load cell junction box and electronics.
- 4) Install and connect cable between belt speed sensor junction box and electronics.
- 5) Install cable between electronics and PLC (if required) for output signals.

Belt Scale Electronics

The belt scale is supplied with the following model electronics:

The appropriate electrical connection drawing or the electronics supplied is located in the drawings section of the manual.

Enclosure Mounting

The electronics enclosure is an IP66 RFP or stainless steel enclosure.

The enclosure should be located so that:

- 1) It is not in direct sunlight (install sunshield if located outdoors).
- 2) Is not subject to direct washdown.
- 3) Is not installed in close proximity to high power cables, variable speed drives or vibratory feeder controllers.
- 4) Not more than 5 metres from the weighframe. Having the electronics located close to the weighframe reduces the chances of electrical interference on the cables. It also makes it easier when carrying out calibrations and fault finding. The weighframe has been supplied with an integral 5 metre cable for connection to the electronics.

Cables

All cables between the load cell/belt speed sensor junction boxes and the electronics should be proper screened instrumentation quality. As the signal levels from these devices are very low, any cable runs between the weighframe/speed sensor and electronics should be carried out so that these cables are not installed close to power cables.

Suggested cable type for each application is as follows:

Load Cell – 4 core overall screened, Belden type 8723 or equivalent.

Belt Speed Sensor – 3 core overall screened, Belden type 8770 or equivalent. Ensure that all cable entries into the electronics enclosure and junction boxes use the correct size waterproof glands.

Cable Terminations

Load Cell junction box – Refer to drawing “SMLCJB-02” in Appendix B of this manual.

Speed sensor junction box – Refer to drawing “JB10015-67” in Appendix B of this manual.

Start Up

Prior to turning on the equipment, or operating the belt scale, ensure the following has been done:

- Double check all electrical connections are correct.
- All mechanical installation has been completed and no tools have been left on the belt.

Start Up Steps

When starting up the system for the first time, use the following steps:

- 1) Turn on the electronics, and ensure it displays the Mass Rate, Mass Total (MRMT).
- 2) Start the conveyor. If using variable speed drive, set it in local and ramp the frequency up to 50Hz.
- 3) The load cell output can be directly read from the electronics. Refer to the electronics manual for the appropriate menu for reading the load cell voltage.
- 4) The belt speed sensor output can be read directly from the electronics. Refer to the electronics manual for the appropriate menu for reading the belt speed sensor frequency output. Run the conveyor and ensure that there is a stable output from the speed sensor ± 3 Hz



Masterweigh 6

Operation and Installation Manual

Web Tech Australia Pty Ltd
PO Box 4006
11 Electronics St
Eight Mile Plains, QLD, 4113
Ph: 1800 777 906
Fax: 61 7 3841 0005
E-mail: info@web-tech.com.au

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Contents

Keyboard Layout and Key Functions	26
MASTERWEIGH 6.....	26
Keyboard Layout	26
Security Codes	26
Key Functions	26
Keyboard Layout and Key Functions	27
Speed Keys	27
Numeric Keys.....	27
Menu Entry 1 – Parameter Setup.....	28
Menu Entry 1 – Parameter Setup.....	29
To modify factory calibration data:.....	29
Menu Entry 2 – Pulses Per Revolution Calibration.....	30
Menu Entry 3 – Load Zero Calibration	31
Menu Entry 3 – Load Zero Calibration	32
Menu Entry 4 – Fixed Weight Calibration	33
Menu Entry 4 – Fixed Weight Calibration	34
Calibration Methods:	34
Menu Entry 4 – Fixed Weigh Calibration.....	35
Menu Entry 5 – Empirical Span Calibration.....	36
Menu Entry 6 – Null Level	37
Menu Entry 7 – Auto Zero Tracking	38
Menu Entry 7 – Auto Zero Tracking	39
Menu Entry 8 – Load Cell Inputs	40
Menu Entry 9 – Tacho Frequency	41
Menu Entry 10 – Modification of Filter Constants.....	42
Menu Entry 11 – Modification of Displayed Units	43
Menu Entry 12 – Modification of Belt Speed Indication	44
Menu Entry 13 – Clearing Mass Total	45
Menu Entry 14 – Real Time Clock (Optional)	46
Menu Entry 15 – Access Code Menu.....	47
Menu Entry 16 – Report Printing Menu (Optional).....	48
Re-Configuring Masterweigh 6.....	49
Facilities Available	50
Introduction	50
Load Cell Input and Excitation.....	50
Facilities Available	51
Tacho Input and Supply.....	51
Electrical Characteristics	51

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Contents

Frequency Selection	51
Pulse Output.....	51
Facilities Available	52
Analogue Output.....	52
Earthing	52
Display Backlighting.....	52
System Output Status.....	52
User Configuration	53
Power Supply PCB (Lower Board).....	53
LK1 Grounding.....	53
LK2, LK3, LK3, LK4 Current loop supply	53
LK6, LK7 Totaliser Pulse Output	53
Potentiometer Adjustments.....	54
Excitation Level Adjustment.....	54
Power Supply PCB (Bottom Board)	54
Contrast & Analogue Output Adjustment.....	54
CPU PCB (Top Board).....	54
Field Terminal Strips.....	55
J3 – Power supply input	55
J5 – System Status Relay	55
J6 – Pulse counter outputs	55
J7 – Auxiliary 24V DC output	55
J8 – Tachometer inputs	55
J9 – Load cell inputs	55
J10 – Analogue Rate output	55
Fieldbus – Profibus.....	56
Connectors:	56
J2	56
J3	56
J4	56
Link LK1.....	56
Status Indicators:.....	56
D1	56
D2	56
D3	56
D4	56
Fieldbus – Profibus.....	57
Node Address:	57
Profibus Connector (DB9F).....	57
Fieldbus – Profibus.....	58

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Contents


Masterweigh 6 Profibus Interface.....	58
Variable Data Format	58
Profibus Module Data	58
Fieldbus – Ethernet / Modbus TCP.....	59
Connectors:	59
J2	59
J3	59
J4	59
Link LK1.....	59
Status Indicators:.....	59
D1	59
D2	59
D3	59
D4	59
D5	59
D6	59
D7	59
Fieldbus – Ethernet / Modbus TCP.....	60
Setup in MW6 Menu:	60
Masterweigh 6 Modbus TCP Interface.....	60
Variable Data Format	60
Modbus TCP Data.....	60
Fieldbus – DeviceNet.....	61
Pin outs:.....	61
MW6 DeviceNet:	61
Connectors	61
J2	61
J3	61
J4	61
Link LK1.....	61
Fieldbus – DeviceNet.....	62
MW6 DeviceNet Setup:.....	62
Node Address	62
Masterweigh 6 DeviceNet Interface	62
Variable Data Format	62
DeviceNet Data.....	62
Fieldbus – DeviceNet.....	63
Zero Calibration.....	64
Span Calibration	65

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Keyboard Layout and Key Functions

MASTERWEIGH 6

Keyboard Layout

TOTAL RESET	1	2	3	4
ZERO	5	6	7	8
CAL	9	0	C	MENU
	-	./+	A ABORT	E ENTER

Masterweigh 6 can operate in a protected security, or open mode depending how the user has configured it. See "Security" for set up details. The following text assumes that the operator has gained access to the system.

Security Codes

If a user has entered security codes into the Masterweigh 6, entry to the menus will be restricted. Two four-digit codes can be entered – (see Menu 15 for details). One code (Operator Access) allows the code holder limited access to any data in the menus, for checking only. The other code (Configuration Access) is needed for access to menus and to make changes to calibration and program parameters etc. Note that no access will be given if no code is entered. If security codes have been activated, on pressing the Menu key, the computer asks for the four-digit code. If no attempt is made to enter a code then the display returns to the Mass Rate Mass Total (MRMT) format after 30 seconds. If an invalid code is detected, the display returns to MRMT format immediately. If a security code is detected then limited or complete access is gained to the menus, as appropriate. Once the menu format is exited the code will have to be re-entered for further access.


Key Functions




This key switches between the main display mode showing "Mass Rate/Mass Total" (MRMT) and the "Menu" mode.



And




When in "Menu" mode, pressing the (+) or (-) key once will go forward or backward one menu entry. If either key is held down, the menu changes will repeat at a rate of approx. 5 per second. When entering the data, the (./+) key is the decimal point.



When in the "Menu" mode and entering changes or new data, this key enables the user to abort the changes and restore the existing entries. The top level menu screen is then displayed.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Keyboard Layout and Key Functions



Similar to "Abort", except that the current screen data only is cancelled and the existing entries restored. The display remains at the current screen.




In menu mode, the key accepts the default setting or confirms any data entered and moves to the next level in the operating sequence. In MRMT display mode, if the "Enter" key is pressed, the current CPU (central processor unit) status is displayed, and also the number of times the CPU has been restarted.

If the display is flashing, the CPU fault status may be viewed by pressing the Enter key whilst in the MRMT display mode.

Speed Keys



When this key is pressed MW6 clears the accumulated mass total.



Activation of this key takes the operator directly to the belt zero function without having to scroll through the menu structure.



When this key is pressed, the operating display jumps to the fixed weight calibration function, ready to span the system



When this key is pressed, the display display backlighting operates.

Numeric Keys

These keys are used to enter calibration data.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 1 – Parameter Setup

Menu 1 is used firstly to enter the maximum capacity of the scale and the increment size.

Menu 1 can also be used to access and modify the precision zero reference and reference voltage, by pressing the "C" key. This data has been factory set, and does not reprogramming unless the unit has been reconfigured.

- 1) At Menu Entry 1, press Enter to examine or modify the maximum capacity of the scale, the precision of the increment size, and the remote counter pulse width.

Menu Entry: 1
Parameter Setup

- 2) At this step, the current scale capacity is displayed. A new value may be keyed-in, then press Enter to continue. Otherwise press Enter with no data entry to retain existing values and continue. This value sets the 100% point for the 4-20mA mass rate output signal. Note that the system can measure mass rates above this value (assuming the instruments remain within their normal operating range), and higher values will be shown on the screen and totalised. However, the 4-20mA mass rate output signal will show 20mA for all mass rates above this value.

NOTE: If units can be changed to tons, lbs, or kg if preferred, within Menu Entry 11.

Current Capacity = 1000.000 tonnes/hr
Enter new capacity:

- 3) This step displays and allows alteration to the mass total increment. This increment is used for both the mass rate and the mass total displays. Enter the new value required and press the Enter key. No change is made if Enter is pressed without data entry. Note that the increment size programmed is also the increment size to cause one pulse output from the totaliser. Also, do not change the increment size during normal operation, as the change in setting will invalidate any existing accumulated mass total.

Mass total increment = 1.000 tonnes
Enter new inc. (10--0.001): 0.000

- 4) This step displays and allows alteration to remote counter pulse width; this value is limited to between 20ms and 1000ms. Note the value entry should be in multiple of 10ms, ie: 20, 30 ... 990, 1000. No change is made if Enter is pressed without data entry. One pulse is outputted each time the mass total increases by one increment (as set in step 3 above).
Enter a pulse width that will match with the remote counter, or PLC response time, but keep the following in consideration when selecting this value: The pulse output can go no faster than the value you just selected, but the accumulation of the mass total may, and so the remote totaliser will fall behind the actual mass total. e.g. if the pulse width is set to 100mS, then at it's fastest rate, the output will be "on" for 100ms, then "off" for 100ms. This will give a maximum output of 5 complete pulses per second (100mS on and 100mS off = 200mS per total pulse cycle). Therefore, if the feeder is running faster than 5 increments per second (= 18000 increments per hour), then the remote total will be wrong. E.g. for an increment value of 0.01tonnes, the limit will be 180tph.

Remote Totaliser Pulse Width = 100ms
Enter new value: (20-1000):

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 1 – Parameter Setup

To modify factory calibration data:

Menu Entry: 1
Parameter Setup

- 5) At Menu Entry 1, press the "C" key to gain access to the factory calibration data. The correct values for these calibration constants have been engraved onto the main board of the Masterweigh 6 stack (the top board). Check that the values that are programmed are the same as the engraved values, and modify the values in the menu as required. This is normally factory set, and is only to be programmed if the electronics is re-configured.

WARNING Calibration Data
Do not modify -- Press A to continue

- 6) The display will warn the operator not to modify data and to press A to exit and to continue. Press the Enter key at this point for access to the "Zero Reference".

Calibration zero = x.xxx mV
Enter new zero ref.: 0.000

- 7) Enter new data and/or press the Enter key to proceed.

Precision ref. = x.xxx mV
Enter new precision ref.: 0.000

- 8) Now access to the precision reference has been gained. Enter new data and/or press the Enter key again.

Press E for Rate O/P span calibration
Else press A

- 9) Either exit at this step by pressing the "A" key, or press Enter to access the menu which exercises the 4-20mA circuit.

Rate O/P = x.xxmA
C for Next, E to reset unit

- 10) Pressing "C" steps through the Rate O/P's to the desired value namely: 20.0, 10.04, 5.02, 7.53, 6.27, 5.645, 5.335, 5.178, 5.099, 1.790mA. Press Enter to reset unit. (A current meter needs to be connected across pins 1 & 2 of J10, or in series with the load if connected).

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 2 – Pulses Per Revolution Calibration

This calibration is carried out with the belt moving. The number of complete belt revolutions over a time period is counted by the operator, and the Masterweigh counts the pulses returned from the speed sensor device. The revolutions are then entered using the keypad and the pulses/rev calculated by the Masterweigh and then saved.

To enable the revolutions to be counted, a point on the belt should be marked with paint, and a suitable point on the framework chosen close to the belt. The count is then started as the belt mark passes this point and stopped as the mark again passes this point after the greater of 5 minutes or 5 belt revolutions.

- 1) At Menu Entry 2, press Enter to proceed with calibration.

Menu Entry: 2 Pulse per rev = 1000 Revs=5
--

- 2) If the pulses per rev are known, then manually key in the number of pulses and press Enter. Otherwise simply press Enter to continue.

Manual Entry of Pulse/Rev Or press Enter to continue

- 3) Manually key in the number of revs (for the above number of pulses) and press Enter. Otherwise press Enter to continue.

Manual Entry of N. of Revs Or press Enter to continue
--

- 4) At the moment the belt mark passes the fixed point chosen, press Enter to start the Masterweigh counting pulses, and start counting revolutions. Note that the display panel will show the counting.

To start belt pulse count, Press E Pulse counted = Time =

- 5) After at least 5 minutes, press Enter again to stop the count as the mark passes the fixed point.

To stop belt pulse count, Press E Pulse counted = Time =
--

- 6) Key in the number of revolutions counted, and press Enter to confirm.

Enter number of belt revolutions: Pulse counted = Time =
--

- 7) Press Enter to save the number of pulses/rev just calibrated, otherwise press A to abort and return to the original values (if any).

Pulse per belt revolution = Press E to save, otherwise press A

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 3 – Load Zero Calibration

This menu entry enables the operating zero to be calibrated. A specified number of belt revolutions are run (as determined by Menu 2), with no material or calibration weights on the belt. If the zero is correct then the mass total accumulated over the period will be zero.

The display shows the currently stored value in millivolts, as read at the load-cell input including any contribution made by the autozero function.

NOTE: The zero value is automatically adjusted if the excitation voltage changes.

- 1) At Menu Entry 3, press Enter to proceed.

Menu Entry: 3
Zero cal. = 2.563mV 2.563mV Ztrack

- 2) (Optional) Using a digital voltmeter, measure the belt zero error value (in millivolts) at the loadcell, or read the mV level displayed in Menu 8.

Manually key in the value to the Masterweigh and press the Enter key to accept, or press Enter with no data entered to continue and allow Masterweigh to automatically carry out a zero calibration.

NOTE: Entering this value does not negate the need to perform a zero calibration.

Manual entry of Zero Error, 0.000mV Or press Enter to continue

- 3) The current zero error is now displayed as a mass rate. Press Enter for the loadcell calibration procedure.

Press E to continue Mass Rate = 0.000
--

- 4) The mass total will now display zero. Check that the belt is empty, then press the Enter key to begin the zero calibration test.

(Zero Reset) To Start zero cal, Press E
Mass Rate = 0.000 Revs = 0.0

- 5) The difference between the current loadcell zero and the actual load reading is accumulated over the test duration, which is the total number of belt revolutions specified in menu 2.

To Abort zero calibrations, Press A
Mass rate = 0.000 Revs = 0.0

The test can be aborted at any time by pressing the Abort key. If the test is aborted, the existing value of the zero calibration is used. This zero calibration value normally includes contributions from both the load zero calibration (as carried out in this menu entry) and the auto zero tracking function. It is thus possible by entering the menu to this level and then aborting to reinitialise the working copy of the zero calibration and remove any auto zero tracking contribution.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 3 – Load Zero Calibration

- 6) This display will come up automatically when the belt has completed the required number of revolutions. The measuring phase of the test has finished and the resulting mass total is displayed. This mass total should be approximately zero, however if non, zero then a new loadcell zero may be required.

To calculate new calibration, Press E Mass Total = 1.150 Revs = 10

- 7) The new loadcell zero, or offset, is displayed in millivolts. Press the Enter key to save this value as the new loadcell zero, or press Abort to exit without saving.

Zero Error = 2.756 mV Press E to save, otherwise press A

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 4 – Fixed Weight Calibration

This menu entry allows the automatic calibration of the load cell span. The test is run over a pre-set number of belt revolutions, as in Menu 2, during which calibration weights (or weigh chains) are placed on the belt or weighframe. A mass total is accumulated in the course of the test. This total is then compared with an expected or "target" weight and the span adjusted accordingly. The display shows the currently stored load cell span value. The span number shown is just an engineering number proportional to the "gain" required i.e. the higher the number, the higher the reading.

1. Press Enter when at Menu Entry 4 to proceed.

Menu Entry: 4 Fixed weight calibrate, span = 222.1

2. At this stage the span factor can be set manually by entering the desired span factor and pressing the Enter key. If no value has been entered, then no change is made to the stored value and the next level is entered.

Manual entry of span factor, 0.000 Or press Enter to continue
--

3. Masterweigh 6 has been provided with two methods of spanning (calibrating). Fixed Weight or Empirical (Menu 5). After initial calibration, the user can, by toggling "Fixed Weight" to "R-Cal", perform a calibration verification. An explanation of this procedure follows this text. For initial calibration, toggle this menu step to Fixed Weight by pressing the Clear "C" button, if R-Cal has been selected.

Span Cal Mode = Fixed Weight Press Clear to Change, Enter to accept
--

4. The target weight is the mass total that is expected over the number of belt revolutions as currently set. (Menu 2). This target weight may at this point be changed to suit the calibration weights being used. Note that this value will generally be determined by running this procedure and recording the result, immediately after performing an empirical calibration. (Menu 5). A load zero calibration should generally be performed (Menu 3) before running this procedure. If a new value is entered then pressing the Enter key will save this as the new target weight. If the Enter key is pressed without entering a target weight, then no change to the stored value occurs.

Current Weight = 120.8 tonnes Enter target weight: 0.000 tonnes
--

5. The current mass rate is shown; the number of belt revolutions is zeroed. Press the Enter key to start the test.

Press E to continue Mass Rate = 0.000
--

6. Once started the test will run until the currently specified number of belt revolutions has been counted. (Refer to Menu 2).

To Start span calibration, Press E Mass Rate = 0.000 Revs = 0.0

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 4 – Fixed Weight Calibration

- 7) During this step the weight is totalised over the specified number of belt revolutions, after which time the totalisation is automatically stopped. If the Enter key is pressed during the test, then the totalisation will be terminated, with a mass total of zero. The test can be aborted at any time by pressing the Abort key.

To abort span calibration, Press A	
Mass Rate = 1543.000	Revs = 1.507

- 8) The resulting mass total is displayed along with the number of belt revolutions counted. Press the Enter key to calculate the new span calibration factor.

To calculate new calibration, Press E	
Mass total = 120.000	Revs = 10

- 9) The new derived load cell span is displayed. Press the Enter key to save this value as the new loadcell span. Press the Abort key if this value is not to be stored.

New span factor = 223.580	
Press E to save, otherwise press A	

- 10) Should the span value calculated be outside the range 0.1 to 3000 then the Masterweigh will display a warning message. Under these circumstances the new span will not be saved, and the unit will revert to the value previously stored.

Span of 345678.123 is invalid	
Press A to continue	

Calibration Methods:

- 1) Ideally conveyor belt scales should initially be calibrated using empirical data obtained from accurate static scales. However, in most situations this task is impossible to achieve, but the fact remains that there is no substitution for data being input to Masterweigh 6 that has been derived from actual material bearing down on the load cell via the weighframe/carriage at normal conveyor speeds.
- 2) A calibration chain, a device that rolls on top of the belt provides the next best method of calibration. It imparts load to the load cells through the belt, but can not simulate belt tensions as a fully loaded belt does.
- 3) Static calibration weights are often used where a chain is impractical to use. Bars of a known weight are loaded directly onto the weighframe and hence simulate a load. This method does not take into consideration belt tension or weight transfer through the belt. It does however, exercise the weighframes mechanics.
- 4) R-Cal is an electronic method of checking the calibration. A simulated loadcell signal is created by running the belt empty and electronically unbalancing the load cell by switching in a reference signal across one arm of the Loadcell Bridge.

This method provides a reasonable method of quickly checking a weightometer but is no substitution for the aforementioned calibration methods.

The software required to implement this function is supplied in all Masterweigh 6 units but the hardware required for the use is an optional extra and therefore only supplied to order.

Assuming that your system is rigged for R-Cal, proceed as follows.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 4 – Fixed Weigh Calibration

Initially, calibration Menu 4 should be accessed and the Enter key pushed until the sub menu Span Cal Mode is reached.

Menu 4:

Span Cal Mode = R-Cal Press Clear to change, Enter to Accept

Toggle the clear key until R-Cal has been selected.

Now proceed as for normal calibration which is performed as described under Menu Entry No. 4.

When Masterweigh 6 completes the test, note the number but do not accept it by pressing enter. Press the Abort key.

The total achieved should be logged and future R-Cal tests reference to it. If the value recorded in subsequent tests exceeds +/- 0.5% of the original value perform a full calibration using weights etc.

NOTE: Zero system prior to R-Cal test.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 5 – Empirical Span Calibration

This menu entry enables the manual entry of totalisations and the resultant recalculation of the load cell span. To use this calibration facility, it is necessary to weigh a quantity of material with the belt scale and then to accurately determine the actual mass of that material by independent means (i.e. via a weighbridge or static scale). The two totals are then entered and the Masterweigh computes the new span factor.

- 1) At menu Entry 5, press Enter to proceed.

Menu entry: 5
Empirical calibration, span = 211.7

- 2) Enter the exact mass total, as measured by the weighbridge. Press Enter when the data is correct.

Enter weigh bridge total: 0.000

- 3) Enter the mass total as measured by the weigher. Press Enter.

Enter belt scale total: 0.000

- 4) Press Enter to store the new span value as the load cell span calibration factor. Press Abort if no update is required. Press Menu and Enter to save.

New span = 205.6, previous = 211.7

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 6 – Null Level

This entry displays the level at which the load is considered to be zero. This allows any variations in belt weight to be shown as zero. Below this level, the mass rate display will show zero, no increment of the mass total will occur, no pulses will be output to remote counters and the mass rate analogue output will be set to 4.0mA.

1

Menu Entry: 6
Null Level = 20.000 tonnes/hour

2

Max Mass Rate: 23.195
Press C to Clear, Press E to Continue

3

Enter a new null level? 0.000
Mass rate = 23.2 tonnes/hour

- 1) At Menu Entry 6, press Enter to proceed.
- 2) Max Mass rate will latch on the highest mass rate value recorded automatically.
- 3) Key in the new Value as observed in menu no.2. Press Enter when the data is correct.

Note on selecting the null level: This entry is used to mask variations in mass rate caused by variations in the belt weight, caused by the belt splice etc. To select the null level, observe the mass rate shown over several belt revolutions with the belt running completely empty (no product or calibration weights).

Take note of the highest equivalent mass rate reached, and then enter a value slightly higher than this level. E.g. if the mass rate was swinging from -20 to 0 to +20 select 22 as the null level. On a correctly installed and aligned weigher, this figure should be approximately 1% of capacity.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 7 – Auto Zero Tracking

This entry specifies the mass rate level below which automatic zero tracking occurs and the number of belt revolutions required before a new zero calibration value is established. Control of the Autozero Alarm relay is achieved from this menu. The auto zero mode will not be entered, or continue unless the mass rate remains below the specified level. The value is normally set at approximately 1.5% of capacity. A qualifying time delay period is also provided to ensure that the belt is completely free of material. Should it be necessary to clear the present auto zero value, then this can be done by entering Menu 3 (load zero calibration), then aborting after starting the test. A "z" will be displayed at the right hand side, bottom line, of the main mass rate/mass total display, when the auto zero conditions are met and the Masterweigh is collecting data for a possible new zero level.

NOTE: The auto zero tracking procedure is inhibited under the following conditions:

- Masterweigh not in the mass rate / mass total display mode
- Input tach frequency less than 5Hz.

It may be required that the user wishes to know if the Autozero function is being forced to zero out, belt zero errors which could be considered as abnormal. This is achieved by setting a window around the signal from the load cell during any period that the belt is considered to be running empty by Masterweigh. The window is set in this menu at step 5 & 6. If the signal from the load cell falls outside these 'user preset' levels then the Autozero limit alarm relay will energise.

Under some circumstances it may be necessary to increase the tolerance at which Masterweigh flags in the display that a negative loadcell excursion has taken place which is greater than the level set in the Auto zero x 2.

The error is only flagged in the local display in the form of an "E" at the right hand side of the display where the "Z" is normally shown.

Step 7 allows the user to increase the tolerance before displaying the "E". At step 8 the user can toggle the above function on or off depending on preferences.

NOTE: Under normal running conditions negative loadcell excursions should not be occurring! Check the weigh area for abnormalities.

- 1) At Menu Entry 7, press Enter to proceed.

Menu Entry: 7 Zero Track if greater than 20.0 for 5 revs

- 2) Enter the new autozero level in mass rate units and press the Enter key. If the Enter key is pressed with no data entry then the stored value remains unchanged.

Auto Zero Level = 20.0000 tonnes/hr Enter New Level = 0.00000
--

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 7 – Auto Zero Tracking

- 3) Enter the period required (in belt revolutions) over which autozeroing occurs. Note that the number of belt revolutions should be chosen such that the total zeroing period is of the order of 5 minutes or more. This will ensure that accurate zero levels are produced. Note that the actual zero level used by the Masterweigh will not be updated until a zeroing period has been completed. If a new value is entered and the Enter key is pressed then that value is saved, otherwise no update occurs.

Auto zeroing period = 5 revs
Enter new period: 0

- 4) This step enables the qualifying delay time to be set. Choose a time that will ensure that all material is off the belt. The delay time commences when the mass rate falls below the minimum level set above.

Delay before auto zeroing = 60s
Enter new level:

- 5) Step five allows the user to enter the value in mV below which it may be considered that an invalid Autozero is taking place.

Auto Zero high Limit – 0.000mV
Enter new level: 0.000mV

- 6) Step six allows the user to enter the value in mV above which it may be considered that an invalid Autozero is taking place.

Auto Zero high Limit – 0.000mV
Enter new level: 0.000mV

- 7) Increase this factor if the letter "E" is being encountered in the main display.

Auto Zero Error Level = 2 times Auto Zero
Enter new value: 0

- 8) The function of displaying the letter "E" can be switched on or off here by pressing the "C" button.

Autozero Error Display is : On
Press Clear to Change, Enter to Accept

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 8 – Load Cell Inputs

This entry displays the load cell input in millivolts. The displayed value is unaffected by the load zero, load calibration, and zero tracking functions. The entry also displays the excitation voltage as currently sensed by the Masterweigh. It is displayed to the nearest volt only, ie. 10V is in the range 9.501 to 10.5V. It is updated once every 3 minutes.

This display enables a user to confirm that the Masterweigh is correctly sensing the excitation voltage and thus that all links etc. are correctly installed. Incorrect excitation sensing will result in inaccurate and unstable mass rate measurements. Access is also available to the output of the voltage to frequency converters.

- 1) Menu Entry 8 displays the load-cell millivolt output and excitation voltage.

Menu Entry: 8 Loadcell = 16mV, (Extin. = 10V)
--

- 2) Press Enter to access the current V to F output.

V to F = xxxxx Press Enter to Continue

- 3) Press Enter again to return to Menu Entry 8.

This facility is for technician's use only.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 9 – Tacho Frequency

This entry displays the current tacho frequency in hertz, (the input range is 5Hz to 1000Hz) and switches between software or hardware inputs.

- 1) Press "E" to enter the menu to select the source of the tachometer signal.

Menu Entry: 9 Tacho Frequency = 250.005Hz
--

- 2) Press "C" to change (or toggle) between the available pulse sources which are :
 - Hardware – input signal to the system as generated by the speed sensor (magnetic pick-up or optical tachometer)
 - Simulated – an internally generated 100Hz signal that is always on.
 - Ext.Con – an internally generated signal that is only on when an external contact is closed between terminals "TG" and "T In" on terminal strip J8.

Tacho Source = Hardware Press Clear to Change, Entry to Accept

- 3) Press Enter to accept and return to the Menu Entry 9.

Tacho Source = Software Press Clear to Change, Enter to accept

- 4)

Tacho Source = Ext. Con Press Clear to change, Enter to Accept

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 10 – Modification of Filter Constants

Filtering can be applied to the following functions:

- Displayed mass rate
- 4-20mA mass rate output
- Tacho input

The level of filtering is specified by a constant that may be in the range 1 second to 120 seconds. Time constants greater than 120 seconds have the same effect as a 120-second constant.

A time constant of 1 second is equivalent to no filtering. Time constants greater than 1 second introduce a delay in the rate of change of the filtered function.

- 1) Press Enter to modify the display filter time constant.

Menu Entry: 10
To modify Filter factors press Enter

- 2) The display mass rate filter time constant is shown. When a time constant of greater than 1 is selected, the main mass rate display is damped. A new value for the display filter constant may be entered.

Display Time Constant is: 2s
Enter a new Time Constant:

- 3) The 4-20mA mass rate output filter time constant is now displayed. A new value for the mass rate output filter constant may be entered.

Rate O/P Time Constant is: 4s
Enter a new Time Constant:

- 4) The tachometer input filter is displayed here and a new constant applied if necessary.

Tacho I/P Time Constant is: 1s
Enter and new Time Constant:

Note: At each step, pressing the Enter key will save the new value. If a new value has not been entered, then the current value is unchanged.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 11 – Modification of Displayed Units

The displayed units for mass rate and total may be selected from tonnes, lbs, tons or kgs. The displayed units for mass rate will be the same as those selected for mass total, ie. tonnes/hour, lbs/hour, tons/hour or kgs/hour.

- 1) Pressing the Enter key will advance to select mass units.

Menu Entry: 11 To modify display units, press E
--

- 2) At this stage the mass units which can be displayed are shown. To select the mass unit required press the number key associated with it, then press the Enter key. The units number selected will be shown in the lower right hand corner of the display. Numbers greater than 4 will not change the currently displayed mass total and mass rate units. Pressing the Enter key without entering a new unit number, or pressing Abort, will not change the currently displayed units.

1 = ton	2 = lbs
3 = kgs	4 = tonnes

- 3) Press Menu and Enter to save.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 12 – Modification of Belt Speed Indication

This entry displays the current belt speed in metres/second (or feet/minute if the mass rate unit is in tons or lbs) based on the total belt length in metres. This Menu does not need to be programmed, however it may be useful.

- 1) This entry shows the current calculated belt speed. Press Enter once view the current belt loading.

Menu Entry: 12
Belt speed = 3.10m/s

- 2) The current calculated belt loading will be displayed in the appropriate units (kg/m or lb/ft, depending on the mass units selected). This belt loading is calculated from the current Mass Rate and belt speed.

Belt Load = 75.015 kg/m
Press E to continue

- 3) The current value for the belt length is shown. If the belt length is known, enter it here.

Current belt total length = 200.000m
Enter new belt total length:

- 4) If the belt length is not known, and an accurate belt speed has been physically measured from the belt itself, the Masterweigh can calculate the belt length. Enter the measured belt speed in the units shown then press Enter to calculate the new belt length.

Enter measured belt speed in metres/min:
Press E for belt length

- 5) If you entered a belt speed, this value will be the calculated belt length. If it appears correct, Press enter to save the value, or abort to ignore the calculation. Note that if you entered a belt length in step 3 and not a belt speed in step 4, this value will be meaningless.

Calculated belt length = 0.000 metres
Press E to save, otherwise Press A

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 13 – Clearing Mass Total

- 1) When the mass total on the "mass rate/mass total" display (MRMT) is to be zeroed, press C at Menu Entry 13. All totalised figures are then cancelled by the integrator.

Menu Entry: 13 Press C to clear Mass Total

Press Menu, then Enter to return to the MRMT display.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 14 – Real Time Clock (Optional)

This menu controls the operation of the Masterweigh 6 real time clock. The real time clock is a separate module with its own battery power source that will continue to keep accurate time, even in the case of power loss to the Masterweigh 6 unit. This menu is only accessible if the real time clock module has been installed. Step 1 displays the following current time, date and day-of-week information.

- 1) Pressing Enter advances to:

Menu Entry: 14	Wed
Time = 09:12:43am	Date =

- 2) Here a free running elapsed time count is displayed. Pressing clear will reset the elapsed time counter. Pressing Enter advances to:

Elapsed Time = Press clear to reset	
0 days	00:19:58 hours

- 3) The Masterweigh 6 real time clock can be configured to display the current time in 12 or 24-hour mode, the selection is made in this menu. Pressing Enter advances to:

Clock is currently in 12-hour mode
Press ± to change, Enter to accept

- 4) Here the current time is displayed and may be modified. A 4-digit time string of the form "HHMM" needs to be entered. Where HH is the desired hours, ie. "12", "03", etc, and MM is the desired minutes, ie. "45", "07", etc. E.g. to enter 9:30, press 0,9,3,0,E. Pressing Enter advances to:

Time = 09:13:56am
Enter new time (HHMM):

- 5) Here the current 12 hour time format postfix is displayed, and may be modified. The user can select either "am" or "pm". Pressing Enter advances to:

Time is currently: am
Press + / - to change, Enter to accept

- 6) Here the current date is displayed and may be modified. A 6-digit time string of the form "DDMMYY" needs to be entered. Where DD is the desired days, ie. "27", "04", etc. MM is the desired months, ie. "11", "05" etc and YY is the desired years, ie. "94", "01"etc. E.g. to enter 12 Feb 2000, press 1,2,0,2,0,0,E. Pressing Enter advances to:

Date = 29/06/94
Enter new date (DDMMYY)

- 7) Here the current day of the week is displayed and may be changed by the user. Pressing the "+" or "-" key toggles through the days of the week. Pressing Enter advances to:

Day of the Week = Wednesday
Press + / - to change, Enter to accept

- 8) Here a count of power-on hours since the last unit re-configuration is displayed. This display is provided for information only, it is not user adjustable. Pressing Enter returns to step 1.

Power of hours = 1
Press Enter to continue

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 15 – Access Code Menu

Masterweigh 6 provides for 2 levels of user configurable access code. If no access codes are activated, all Masterweigh 6 menus are accessible all the time. An “Operator” and a “Configuration” access code may be entered. As soon as an access code is activated, the user cannot leave the main mass rate/total menu and gain entry to the menu system without entering a valid/correct access code.

Entering the correct Configuration access code allows full access to all Masterweigh 6 menus and parameters. Entering the correct Operator access code allows limited access to the Masterweigh 6 menu system.

- 1) Unless the special security key has been installed in link 3 of the CPU PCB, the following menus cannot be accessed. If the security key is installed, then pressing Enter advances to:

Menu Entry: 15
Press Enter to modify access codes

- 2) Here a new Operator access code may be entered; this can be a number in the range 1 to 32766. Note that entering an Operator access code of 0 (zero) clears the Operator access code. If the security key is installed, then pressing Enter advances to:

Operator Access Code:
Enter Access Code:

- 3) Here a new Configuration access code may be entered, this can be a number in the range 1 to 32766. Note that entering a Configuration access code of 0 (zero) clears the Configuration access code. Pressing Enter returns to step 1.

Configuration Access Code:
Enter Access Code:

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Menu Entry 16 – Report Printing Menu (Optional)

This menu controls the automatic report printing function of the Masterweigh 6. This menu is only accessible if the real time clock module has been installed. It is possible to configure the Masterweigh 6 to automatically produce a report, via the RS232 serial port, on either a time or mass total basis. It is also possible to manually command a report at any time. The format of the report is:

Masterweigh Report

Date = 29/06/00

Time = 12:01:41

Mass total = 2474450 tonnes

Mass rate = 5380 tonnes/hour

- 1) Menu step 1 displays the following. Pressing Enter advances to:

Menu Entry: 16
Automatic report printing Off

- 2) Pressing Clear will cause a report to be immediately printed via the RS232 serial port. Pressing Enter advances to:

Press Clear to print report NOW
Press E to continue

- 3) Pressing Clear toggles the report mode between: Off, Time based, or Total based
Pressing Enter when report mode is Off, returns to Step 1 above.
Pressing Enter when report mode is Time based advances to:

Report Mode = Off
Press Clear to change, Enter to Accept

- 4) Here the time based reporting period is displayed and may be modified. The time period entered here will cause the Masterweigh 6 to automatically print a report via the serial port every time the period expires, ie. a report period of 4 hours will cause a report to be automatically printed at midnight, 4 am, 8 am, noon, 4 pm, 8 pm, etc. Pressing enter here returns to step 1 above.
Pressing Enter when report mode is Total based advances to:

Report every 1 Hour
Enter new value: 0 Hours

- 5) Here the total based reporting increment is displayed and may be modified. The mass total increment entered here will cause the Masterweigh 6 to automatically print a report via the serial port every time the increment is added to the mass total, ie. a total increment of 2500 tonnes will cause a report to be automatically printed at 20000 tonnes, 22500 tonnes, 25000 tonnes, 27500 tonnes, etc. Pressing Enter here returns to step 1 above.

Report every: 100 tonnes
Enter new value: 0 tonnes

The RS232 Parameters are:

Baud	19200 bps
Data bit	8 bits
Stop bit	2 bits
Parity	None

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Re-Configuring Masterweigh 6

Under some circumstances Masterweigh's memory can be corrupted so that correct operation of the unit is not possible. This condition can occur if Masterweigh has been subjected to severe electrical noise or spikes.

This phenomenon usually occurs on 240/110V AC power lines; however they can also appear on the load cell input cables as well as the tachometer cables. Masterweigh has been protected as far as possible; however, severe noise or spikes can get through.

Once any part of memory has been corrupted Masterweigh will detect it and automatically flag an error. If the corruption has only changed data, an error may not be detected and some erroneous results may occur. The only way to clear the memory of this data is by re-configuring.

Switching the power off and on will not clear the memory. The act of re-configuring causes all the calibration data to be lost and replaced by factory data. The calibration data specific to your application can easily be re-entered if you have kept a note of what was in the menus.

Menu 1 however, does have specific data that is logged on the main PCB under Calibration zero and Precision ref.

NOTE: LOG ALL CALIBRATION DATA, AS YOU MAY NEED TO MANUALLY REENTER IT AT A LATER DATE.

To Re-configure Masterweigh 6 Proceed as Follows:

- 1) Switch off Masterweigh.
- 2) Simultaneously press the "Backlight" and "Abort" keys.
- 3) With both the above keys pressed switch Masterweigh on.
- 4) The display will now show the message: Press C to Configure Any other key to continue
- 5) Now press the C key and Masterweigh will return to normal running mode.
- 6) Masterweigh is now configured to factory defaults.
- 7) Press Menu to enter Menu entry 1, then press C to enter the calibration data section. The display will warn you not to continue. Press Enter to continue.
- 8) The display will request a new Calibration Zero to be entered. Enter the value that is engraved onto the right hand side of the main PCB under the label "Cal Zero", then press E.
- 9) The display will request a new Precision Reference. Enter the value that is engraved onto the right hand side of the main PCB under the label "Prec. Ref.", then press Enter.
- 10) Press M then E to return to normal running mode.

Remember: If MW6 is re-configured all calibration data is lost! Keep Notes.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Facilities Available

Introduction

The Masterweigh is a precision microprocessor based instrument for accurate integration of mass totals in belt scale applications. The "core" of the highly successful Masterweigh design has been in operation for many years and has been proven in the field and tested by the National Standards Authority of Australia. The tests on the core proved that the instrument is accurate to 0.1% over its operating range. The operating environment is based on a series of discrete Menus. Each menu allows the user to set up a working environment or calibrate the system. For a detailed description of each menu, refer to Section OP-3 - OP-22 of the manual. Note that detailed information relating to the keyboard operating command procedures is to be found earlier in this manual.

Load Cell Input and Excitation

The Masterweigh is designed to accept a loadcell millivolt signal in the range 0 to 32 millivolts with a resolution of approximately 4 microvolts. An on-card voltage source provides excitation for the load cell. This source can provide excitation for up to four 350 ohm load-cells in parallel. The excitation is not precisely controlled, but is maintained within approximately 1 percent of the set value. The Masterweigh monitors the excitation voltage and automatically compensates for any voltage change that may occur. The excitation is adjustable over a wide range to enable optimum performance to be obtained from a wide variety of load cells and is normally set for 10.00V. The Masterweigh is configured to provide a positive excitation voltage referenced to ground (unipolar). The positive voltage is continuously adjustable from +4 to +12 volts. The Masterweigh is factory set for a unipolar excitation of 10 volts. Following adjustment of the excitation, allow a minimum of 30 seconds for the Masterweigh to update its internal excitation reading before proceeding with calibration functions. The approximate value of the excitation voltage sensed by the Masterweigh is displayed in Menu 8. This should match the voltage sensed at terminals J9 pin 1 and 2. i (Allow 30 seconds for update of display after adjusting the excitation). Incorrect configuration of excitation sensing will cause erratic mass rate readings. The millivolt input accepts a differential millivolt signal, and will operate accurately over a common mode range of minus 8 to plus 8 volts. The input is overload protected to plus or minus 35 volts on either terminal with the Masterweigh energised, and plus or minus 20 volts on either terminal when not energised. Transient overload capacity is much higher than this continuous rating, and depends on the duration of the overload. The analogue to digital conversion is performed using voltage to frequency conversion techniques, thereby providing excellent rejection of signal noise over a wide frequency range. With the exception of short periods allocated to self-calibration, the Masterweigh is continuously monitoring the load cell input rather than periodically sampling, as is the case for systems which use dual-slope integrating converters. This results in a more accurate measurement of the rapidly fluctuating input signal from the load cell. Careful design of the input circuitry ensures excellent rejection of common-mode signals both AC and DC. Note: The excitation voltage regulators are overload and short-circuit protected, however, short circuiting of the excitation output will interfere with normal operation of analogue input circuitry and the RS232 interface.

CAUTION: Application of an external voltage source to the excitation terminals may cause serious damage to the Masterweigh.

No calibration or adjustment of the Masterweigh analogue inputs is required. Gain and zero are automatically adjusted by the reference. This automatic calibration is repeated once every 30 seconds, whenever the Masterweigh is energised. After energising the Masterweigh, always allow a minimum of thirty (30) seconds for this automatic calibration to be performed before initiating a span or zero calibration sequence. (Note: If Masterweigh has not been energised for some time, allow 3 minutes before initiating the above).

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Facilities Available

Tacho Input and Supply

Electrical Characteristics

The tacho input is designed to accept a voltage input of 2.5 to 50 volts peak and so will accept either a TTL or sinusoidal voltage input. The input threshold voltage is +1.2 volts at the positive input with respect to the negative input. The negative input is directly connected to the Masterweigh grounds. Avoid earthing this input in the field as it will create ground loops. The tacho input will not accept frequencies in excess of 800 Hz (approx.). A regulated +5 volt supply is provided for energising a digital pulse generator. This supply is rated at 200mA maximum, and is overload and short-circuit protected. It may be necessary to briefly remove all load after removing a short circuit in order to reset the protection circuit. Short-circuiting of the tacho +5 volt supply will not affect the Masterweigh CPU operation. Masterweigh is fitted with a potentiometer (RV2) to adjust the tachometer's 5V rail if required. (Normally only used when the tacho supply drops to a voltage where the tachometer ceases to work owing to significant voltage drop from long cable runs, IS barriers or the like.

CAUTION: Application of an external voltage source to the tacho supply terminals may cause damage to the Masterweigh.

Frequency Selection

The tacho generator should be selected and fitted to provide a frequency input to the Masterweigh within the range 5 to 1000 Hz, to ensure compatibility & accurate measurement. The tachometer is normally selected for the user by the factory. Selection depends on the rotational speed of the pick up pulley, which in turn is supplied by the user. Note that the tacho frequency has no affect on the rate at which the load cell signal is sampled.

Pulse Output

The Masterweigh provides a pulse output for external accumulation of the mass total. Masterweigh provides for three methods of indicating when a change in Masterweigh's total has occurred.

- 1) An Internally Generated + 5VDC Pulse
- 2) An Internally Generated + 24VDC Pulse
- 3) Contact closure from an internal relay

(providing voltage free contacts). Which of these options is used can be selected from links LK6 and LK7 as shown in the USER CONFIGURATION section. The pulse duration is adjustable in Menu 1. One pulse is output each time the least significant mass total digit displayed is incremented by 1 count. A minimum of 20 milliseconds is guaranteed between pulses, thereby providing a maximum pulse rate of 25 pulses per second (20 milliseconds on, plus 20 milliseconds off). The internal +5V supply is regulated to +5V. It is not isolated from ground. External load resistance should not be lower than 50 ohms. The internal +28V is unregulated and may vary over the range 25-35V. It is isolated from ground to allow configuration of a fully isolated pulse output. This +28V supply is shared with the 4-20mA analogue loop output, and is rated at 400mA continuous maximum current. The contact closure is completely isolated and is rated at 32V maximum and 500mA maximum. It must not be used for 110V or 240V operation. All pulse outputs are protected by 2 of 500mA fast blow fuses, F2 and F3.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Facilities Available

Analogue Output

The Masterweigh provides one 4-20mA analogue output channel, with a resolution of better than 0.5%. It operates as a loop powered configuration and therefore derives its operating power from the 4mA residual loop current. A minimum of 20 volts is required to operate with zero ohms load, rising by 1 volt for every 50 ohms of load, ie. 30 volt

supply required for 500 ohm load. An isolated 24VDC regulated supply is provided on the Masterweigh power supply board, which can be used to energise the analogue loop. Links LK2 and LK3 on the bottom power supply board, select either the onboard supply or an external supply connected in series with the analogue loop. Span calibration of the output is readily performed by accessing the analogue calibration in the Menu 1 set up. There is no provision for zero adjustment on the analogue output.

Earthing

This is achieved by installing the shunt on LK1 (link) located on the lower pcb above the capacitors. Installing this link will connect the Masterweigh's digital and analogue grounds to power earth.

Display Backlighting

The liquid-crystal display used in the Masterweigh provides LED backlighting for improved readability under adverse light conditions. If the unmarked key has not been activated then the display will switch off if any key has not been used within 5 minutes.

System Output Status

A voltage free contact has been provided for remote monitoring of the Masterweigh autozero function. If the autozero function returns a value that is outside the "high and low" limits that were set in Menu 7, the relay will energise. It will remain energised until an operator initiated zero is performed in Menu 3.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

User Configuration

Power Supply PCB (Lower Board)

LK1 Grounding

When the shunt is in position Masterweigh is referenced to ground. When open Masterweigh is floating.

LK2, LK3, LK4 Current loop supply

These links select the power supply for the analogue output current loop. The supply can be an internally generated isolated 24VDC supply, or an external supply of 20 to 50VDC.

Set the links to select the appropriate power source as follows:

Internally generated:

LK2 LK3
A A

Externally generated:

LK2 LK3
B B

LK6, LK7 Totaliser Pulse Output

These links select whether the totaliser relay is potential free or switches the internal 24Vdc.

Set the links to suit the external counter device.

Internally generated +24 VDC (Isolated):

LK6 LK7
A A

Voltage free contacts:

LK6 LK7
B B

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Potentiometer Adjustments

Excitation Level Adjustment

Power Supply PCB (Bottom Board)

- RV1:** Used to adjust the load cell excitation used in conjunction with a digital meter.
- RV2:** Used to adjust the tachometer supply voltage. The voltage can be adjusted 5- 23V and is set to 5V at the factory. The voltage can be adjusted when there is a voltage drop at the tachometer due to long cables, or Intrinsic Safety Barriers are used. If a Proximity switch is used the voltage can be adjusted to the correct supply voltage.

Contrast & Analogue Output Adjustment

CPU PCB (Top Board)

- VR1:** Adjusts the LCD display viewing angle so that the display can be easily read.
- VR2:** Used to span the 4-20mA analogue output channel. Connect a digital current meter in series with the analogue output. Set the analogue output to 20mA (see Menu 1). Adjust the output using VR2 until the current meter shows 20.00

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Field Terminal Strips

J3 – Power supply input

- | | | |
|------|---------------|---------|
| 1) A | 240VAC/110VAC | Active |
| 2) N | 240VAC/110VAC | Neutral |
| 3) E | 240VAC/110VAC | Earth |

J5 – System Status Relay

- | | |
|--------|-------------------------|
| 1) COM | Common contact |
| 2) NO | Normally open contact |
| 3) NC | Normally closed contact |

J6 – Pulse counter outputs

- | | |
|--------|----------------------|
| 1) P+ | Pulse Counter Output |
| 2) P- | Pulse Counter Output |
| 3) SLD | Screen |

J7 – Auxiliary 24V DC output

- | | |
|--------|------------|
| 1) GND | 24V ground |
| 2) 24V | 24V |

J8 – Tachometer inputs

- | | |
|--------|------------------|
| 1) TG | Tacho Ground |
| 2) TIN | Tacho Signal In |
| 3) TE | Tacho supply +5V |
| 4) SLD | Screen |

J9 – Load cell inputs

- | | |
|--------|-----------------------------|
| 1) L+ | Load cell signal output +ve |
| 2) L- | Load cell signal output -ve |
| 3) E+ | Load cell excitation +ve |
| 4) E- | Load cell excitation -ve |
| 5) SLD | Load cell Shield |

J10 – Analogue Rate output

- | | |
|--------|---------------------|
| 1) - | Analogue output -ve |
| 2) + | Analogue output +ve |
| 3) SLD | Screen |

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – Profibus

The Profibus card for MW6 functions as a Profibus DP-V0 slave. The card also has a standard RS232 interface to transmit data to a printer or a computer. Data on the Profibus interface is exchanged as cyclical I/O. The interface supports all the standard baud rates up to 12Mbps. The Profibus interface supports DP features such as Freeze mode, Sync mode, Auto baud detection and Set slave address.

Connectors:

J2 is the standard MW6 RS232 interface used to transmit ASCII data to a computer or other device such as a printer.

J3 is an RS232 interface which provides an easy way to monitor and access parameters on the Profibus interface.

J4 is the Profibus interface connector and is a standard DB9 connector which is the preferred and most commonly used connector. There are no terminating or biasing resistors on the interface and it is suggested that standard Profibus connectors containing both terminating and biasing resistors are used.

Link LK1 switches the RXD pin between the Profibus module and the normal RS232 communications see FIG 1C below


Status Indicators:

D1 shows activity on the TX line of the standard RS232 interface.

D2 shows activity on the RX line of the standard RS232 interface.

D3 indicates the 5V supply is on.

	STATUS	DESCRIPTION
D4	Off	Off-line or no power
	On	Data Exchange mode
	Flashing	Clear mode

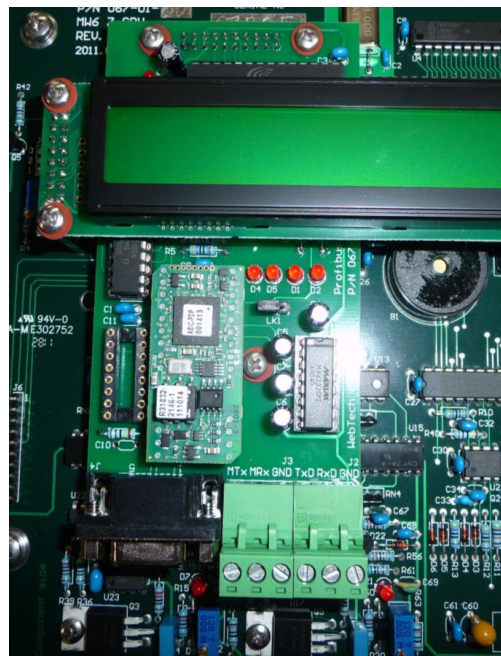

MW6 with Profibus Card Installed

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – Profibus

Node Address:

MENU 14

Profibus address = 1

Press ENTER

Enter new address here.

Press ENTER

Baud rate is auto detect


DB9F Pinout

The Pinouts for the Profibus connector are as below:

Profibus Connector (DB9F)	
Pin	Singal
1	
2	
3	B-Line
4	RTS
5	GND BUS (isolated)
6	+5V BUS (output, isolated, 100mA max)
7	
8	A-Line
9	
Housing	Shield

The +5V BUS and GND BUS are supplied by the Profibus module, and are normally used for the RS485 bus biasing resistors.

LK1

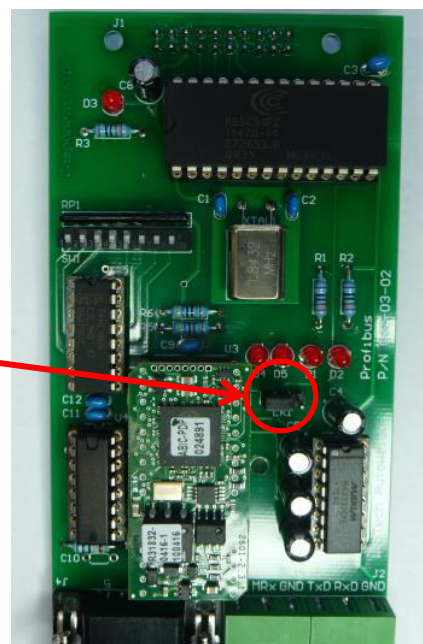

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – Profibus

Masterweigh 6 Profibus Interface

Variable Data Format

All 32-bit variables (floating-point and unsigned long) are stored in a six byte format to allow for data using two different byte orders. If the variable is expected to be encoded with a byte order from bytes 0-3, four bytes should be read starting at offset 0 of the six byte block. If the byte order is expected to have the two 16-bit words reversed, four bytes should be read starting from offset 2 of the six byte block.

0	1	2	3	4	5
Byte 0	Byte 1	Byte 2	Byte 3	Byte 0	Byte 1

Profibus Module Data

The data provided by the Profibus interface is sent as a 42-byte block containing the following seven variables in order:

Variable	Code	Type
Mass Rate	MR	IEEE float
Mass Total	MT	DWORD (32-bits)
Load Cell	LC	IEEE float
Tacho Frequency	TF	IEEE float
Belt Speed	BS	IEEE float
Load cell zero	LZ	IEEE float
Load cell span	LS	IEEE float

As each variable is stored in the six-byte format, the 42-byte block is encoded as follows:

0	1	2	3	4	5	6	7
MR0	MR1	MR2	MR3	MR0	MR1	MT0	MT1
8	9	10	11	12	13	14	15
MT2	MT3	MT0	MT1	LC0	LC1	LC2	LC3
16	17	18	19	20	21	22	23
LC0	LC1	TF0	TF1	TF2	TF3	TF0	TF1
24	25	26	27	28	29	30	31
BS0	BS1	BS2	BS3	BS0	BS1	LZ0	LZ1
32	33	34	35	36	37	38	39
LZ2	LZ3	LZ0	LZ1	LS0	LS1	LS2	LS3
40	41						
LS0	LS1						

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – Ethernet / Modbus TCP

Connectors:

J2 is the standard MW6 RS232 interface used to transmit ASCII data to a computer or other device such as a printer.

J3 is an RS232 interface which provides an easy way to monitor and access parameters on the Ethernet interface.

J4 is the Ethernet interface connector and is a standard CAT5E connector which is the preferred and most commonly used connector.

Link LK1 switches the RXD pin between the Ethernet module and the normal RS232 communications

Status Indicators:

D1 shows activity on the TX line of the standard RS232 interface.

D2 shows activity on the RX line of the standard RS232 interface.

D3 indicates the 5V supply is on.

D4-7 are as shown in below:

LED	State	Status
D4	Off	No power or no IP address
	Green	EtherNet/IP connection/s established
	Green, Flashing	No EtherNet/IP connection/s established
	Red	Duplicate IP address detected
	Red, Flashing	One or several EtherNet/IP connections has timed out
	Alternating Red/Green	Self test in progress
D5	Off	Device not powered
	Green	Device has an Ethernet/ip connection
	Green, Flashing	Device has no Ethernet/ip connection
	Red	Major fault (unrecoverable)
	Red, Flashing	Minor fault (recoverable)
	Alternating Red/Green	Self test in progress
D6	Off	10 Mbps
	Green	100 Mbps
	Alternating Red/Green	Self test in progress
D7	Off	Device not powered
	Green	Module connected to an Ethernet network
	Green, Flashing	RX / TX Activity
	Alternating Red/Green	Self test in progress

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – Ethernet / Modbus TCP

Setup in MW6 Menu:

- 1) Select menu 14 in the Masterweigh 6 setup menu, and press enter to configure the Modbus TCP interface.
- 2) Configure the system using the following settings:

Setting	Value
DHCP Enabled	0
IP Address	010000000025 (Four 3 digit numbers 010.000.000.025)
Subnet Mask	255255255000 (Four 3 digit numbers 255.255.255.000)
Gateway	010000000138 (Four 3 digit numbers 010.000.000.138)

To setup the interface, the device's IP address, subnet mask and gateway will have to be configured. This can be entered statically, or received dynamically using DHCP. After entering menu 14, the user can first configure DHCP by entering 1 for enabled or 0 for disabled.

If the user selects 1, the configuration is completed and the user can exit the menu to save changes.

If the user selects 0, they will then be prompted to enter the IP address, subnet mask and gateway. These values need to be entered in a 12-digit format (AAABBBCCDDDD) where, for example, the IP address 192.168.0.1 is entered as 192168000001. After these values are entered, the user can exit the menu to save changes.

Address	Variable	Type
Base + 0	High Value	IEEE float/DWORD
Base + 1	Low Value	IEEE float/DWORD
Base + 2	High Value	IEEE float/DWORD

Masterweigh 6 Modbus TCP Interface

Variable Data Format

All 32-bit variables (floating-point and unsigned long) are stored in a six byte format using three consecutive registers to allow for data using two different byte orders. If the variable is expected to be encoded with a byte order from bytes 0-3, two registers should be read starting from the base register. If the byte order is expected to have the two 16-bit words reversed, two registers should be read starting from register offset 1.

Modbus TCP Data

The registers provided by the Modbus TCP interface can be seen to the left:

Address	Variable	Type
1	Mass Rate High	IEEE float
2	Mass Rate Low	IEEE float
3	Mass Rate High	IEEE float
4	Mass Total High	DWORD (32 bits)
5	Mass Total Low	DWORD (32 bits)
6	Mass Total High	DWORD (32 bits)
7	Load Cell High	IEEE float
8	Load Cell Low	IEEE float
9	Load Cell High	IEEE float
10	Tacho Freq. High	IEEE float
11	Tacho Freq. Low	IEEE float
12	Tacho Freq. High	IEEE float
13	Belt Speed High	IEEE float
14	Belt Speed Low	IEEE float
15	Belt Speed High	IEEE float
16	Load Cell Zero High	IEEE float
17	Load Cell Zero Low	IEEE float
18	Load Cell Zero High	IEEE float
19	Load Cell Span High	IEEE float
20	Load Cell Span Low	IEEE float
21	Load Cell Span High	IEEE float

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – DeviceNet

Pin outs:

The pin-outs for the DeviceNet connector are shown in the figure below.

DeviceNet Connector	
Pin	Signal
1	V-
2	CAN L
3	Shield
4	CAN H
5	GND BUS (isolated)
6	V+

You must ensure that 120Ohm 0.5W termination resistors are installed between CAN HI and CAN LO at the two ends of the DeviceNet network.

MW6 DeviceNet:

The DeviceNet card for MW6 functions as a DEV-V0 slave. The card also has a standard RS232 interface to transmit data to a printer or a computer.

Data on the DeviceNet interface is exchanged as cyclical I/O. The interface supports all the standard baud rates up to 12Mbps. The

DeviceNet interface supports DP features such as Freeze mode, Sync mode, Auto baud detection and Set slave address.

Connectors

J2 is the standard MW6 RS232 interface used to transmit ASCII data to a computer or other device such as a printer.

J3 is an RS232 interface which provides an easy way to monitor and access parameters on the DeviceNet interface.

J4 is the DeviceNet interface connector

Link LK1 switches the RXD pin between the Profibus module and the normal RS232 communications.

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – DeviceNet

MW6 DeviceNet Setup:

Node Address

MENU 14

DeviceNet address = 1

Press ENTER

Enter new address here.

Press ENTER

Baud rate is auto detect

Status Indicators:

D1 shows activity on the TX line of the standard RS232 interface.

D2 shows activity on the RX line of the standard RS232 interface.

D3 indicates the 5V supply is on.

	STATUS	DESCRIPTION
Module Status D5	Off	Off-line or no power
	On	Data exchange mode
	Flashing	Auto Baud in progress
Network Status D7	Off	Off-line
	On	Online – Connected
	Flashing	Online – Not Connected

Masterweigh 6 DeviceNet Interface

Variable Data Format

All 32-bit variables (floating-point and unsigned long) are stored in a six byte format to allow for data using two different byte orders. If the variable is expected to be encoded with a byte order from bytes 0-3, four bytes should be read starting at offset 0 of the six byte block. If the byte order is expected to have the two 16-bit words reversed, four bytes should be read starting from offset 2 of the six byte block.

0	1	2	3	4	5
Byte 0	Byte 1	Byte 2	Byte 3	Byte 0	Byte 1

DeviceNet Data

The data provided by the DeviceNet interface is sent as a 42-byte block containing the following seven variables in order:

Variable	Code	Type
Mass Rate	MR	IEEE float
Mass Total	MT	DWORD (32-bits)
Load Cell	LC	IEEE float
Tacho Frequency	TF	IEEE float
Belt Speed	BS	IEEE float
Load cell zero	LZ	IEEE float
Load cell span	LS	IEEE float

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Fieldbus – DeviceNet

As each variable is stored in the six-byte format, the 42-byte block is encoded as follows:

0	1	2	3	4	5	6	7
MR 0	MR 1	MR 2	MR 3	MR 0	MR 1	MT 0	MT 1

8	9	10	11	12	13	14	15
MT 2	MT 3	MT 0	MT 1	LC 0	LC 1	LC 2	LC 3

16	17	18	19	20	21	22	23
LC 0	LC 1	TF 0	TF 1	TF 2	TF 3	TF 0	TF 1

24	25	26	27	28	29	30	31
BS 0	BS 1	BS 2	BS 3	BS 0	BS 1	LZ 0	LZ 1

32	33	34	35	36	37	38	39
LZ 2	LZ 3	LZ 0	LZ 1	LS 0	LS 1	LS 2	LS 3

40	41
LS 0	LS 1

MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL

Zero Calibration

- 1) Acquire correct Calibration Data Sheet and Design Data Sheet for belt scale/feeder.
- 2) Allow conveyor/feeder to run for at least ½ hr prior to calibration.
- 3) Remove feed from conveyor/feeder.
- 4) Press 'MENU' key.
- 5) Press '3' (or '+' key 2 times) to get to menu 3 "Zero Calibration". There will be 2 values displayed. 1st is "Zero Cal = xx.xxxmV the 2nd value is xx.xxxmV Ztrck.
- 6) Record BOTH values for future reference.
- 7) Press '8' key (or + key 5 times). This will bring you to MENU 8 "Loadcell Input".
- 8) Check that loadcell voltage is close to that last recorded in the calibration data sheet "DYNAMIC (No Load)" mV, and is relatively stable.
- 9) Press '9' key (or + key 1 time). This will bring you to MENU 9 "Tacho Frequency".
- 10) Check that the frequency displayed is close to that last recorded in the Calibration Data Sheet, and is relatively stable.
- 11) Press "Menu" key, then press "Abort" key. Masterweigh should return to the normal operating display.
- 12) With the belt running empty, press the "ZERO" key.
- 13) The display should read "To Start Zero Cal Press E".
- 14) Press "E". The belt should complete a full number of revolutions as indicated on the Calibration Data Sheet ('Menu 2' No of Belt revs:) Watch conveyor to ensure no product flows over the weigher and nothing is fouling the weigh frame while the calibration takes place.
- 15) When the calibration is complete, the display will read "To calculate new calibration press E" "MASS TOTAL = xx.xxx." Where xx.xxx is the actual number of tonnes the belt scale/feeder has weighed during the calibration.
- 16) If the Mass Total value is $< \pm 0.2\%$ of capacity, Press "A", Masterweigh will return to the normal operating display and Zero calibration is complete! If not press "E".
- 17) The display will now read "Zero Error = xx.xxxmV Press E to save Otherwise press A". (This value should be close to those recorded in step 7). Record this value & press "E". The Masterweigh will return to the normal operating display.
- 18) Steps 14 through to 19 should be repeated until the value in step 19 is $< \pm 0.2\%$ of capacity.
- 19) If the zero calibration is changed, the new value should be recorded and the Calibration Data sheet updated.


MASTERWEIGH 6 OPERATION AND INSTALLATION MANUAL


Span Calibration

- 1) Acquire correct Calibration Data Sheet and Design Data Sheet for belt scale/feeder.
- 2) Allow conveyor/feeder to run for at least 20 minutes prior to calibration.
- 3) Remove feed from conveyor/feeder.
- 4) Perform Zero calibration before span calibration is attempted.
- 5) Ensure correct amount of calibration weight is used. (Design Data Sheet)
- 6) With the conveyor/feeder running empty, apply calibration weights.
- 7) Press 'MENU' key.
- 8) Press '4' key (or + key 3 times). This will bring you to menu 4 "Fixed Weight Calibrate Span".
- 9) Check that the Span value is the same as that last recorded in the calibration data sheet.
- 10) Press 'E' key 3 times. The display will read "Target weight = XX.XXXt". Check that this value is the same as that last recorded in the Calibration data sheet Target Weight.
- 11) Press 'A' key. This will return to start of menu 4.
- 12) Press '8' key (or + key 4 times). This will bring you to MENU 8 "Loadcell Input".
- 13) Check that loadcell voltage is close to that last recorded in the calibration data sheet "DYNAMIC (With Weights)" mV, and is relatively stable.
- 14) Press '9' key (or + key 1 time). This will bring you to MENU 9 "Tacho Frequency".
- 15) Check that the frequency displayed is close to that last recorded in the Calibration Data Sheet, and is relatively stable.
- 16) Press "Menu" key, then press "Abort" key. Masterweigh will return to the normal operating display.
- 17) With the feeder running empty, and calibration weights in place, press the "CAL" key.
- 18) The display should read "To Start Span Calibration Press E".
- 19) Press "E". The belt should complete a full number of revolutions as indicated on the Calibration Data Sheet ('Menu 2' No of Belt revs:). Watch feeder to ensure no product flows over the weigher and nothing is fouling the weigh area while the calibration takes place.
- 20) When the calibration is complete, the display will read "To calculate new calibration press E" "MASS TOTAL = xx.xxx." Where xx.xxx is the actual number of kg the scale/feeder has weighed during the calibration.
- 21) The Mass Total value should be close to the target weight. If it is $< \pm 0.5\%$. Press "A", Masterweigh will return to the normal operating display and the Span calibration is complete! If not press "E".
- 22) The display will now read "New Span Factor = xx.xxx Press E to save Otherwise press A". (The span value should not change by more than around $\pm 1\%$. If the span change is greater than $\pm 1\%$, Abort the calibration & check the feeder for mechanical problems / changes). If the span change is within $\pm 1\%$, record the new value & press "E". The masterweigh will return to the normal operating display.
- 23) Steps 19 through to 24 should be repeated until the value in step 24 is $< \pm 0.5\%$ of the Target Weight.
- 24) If the span value is changed, the final value should be recorded and the Calibration Data sheet updated.

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Appendix A – Belt Scale Arrangement GAs

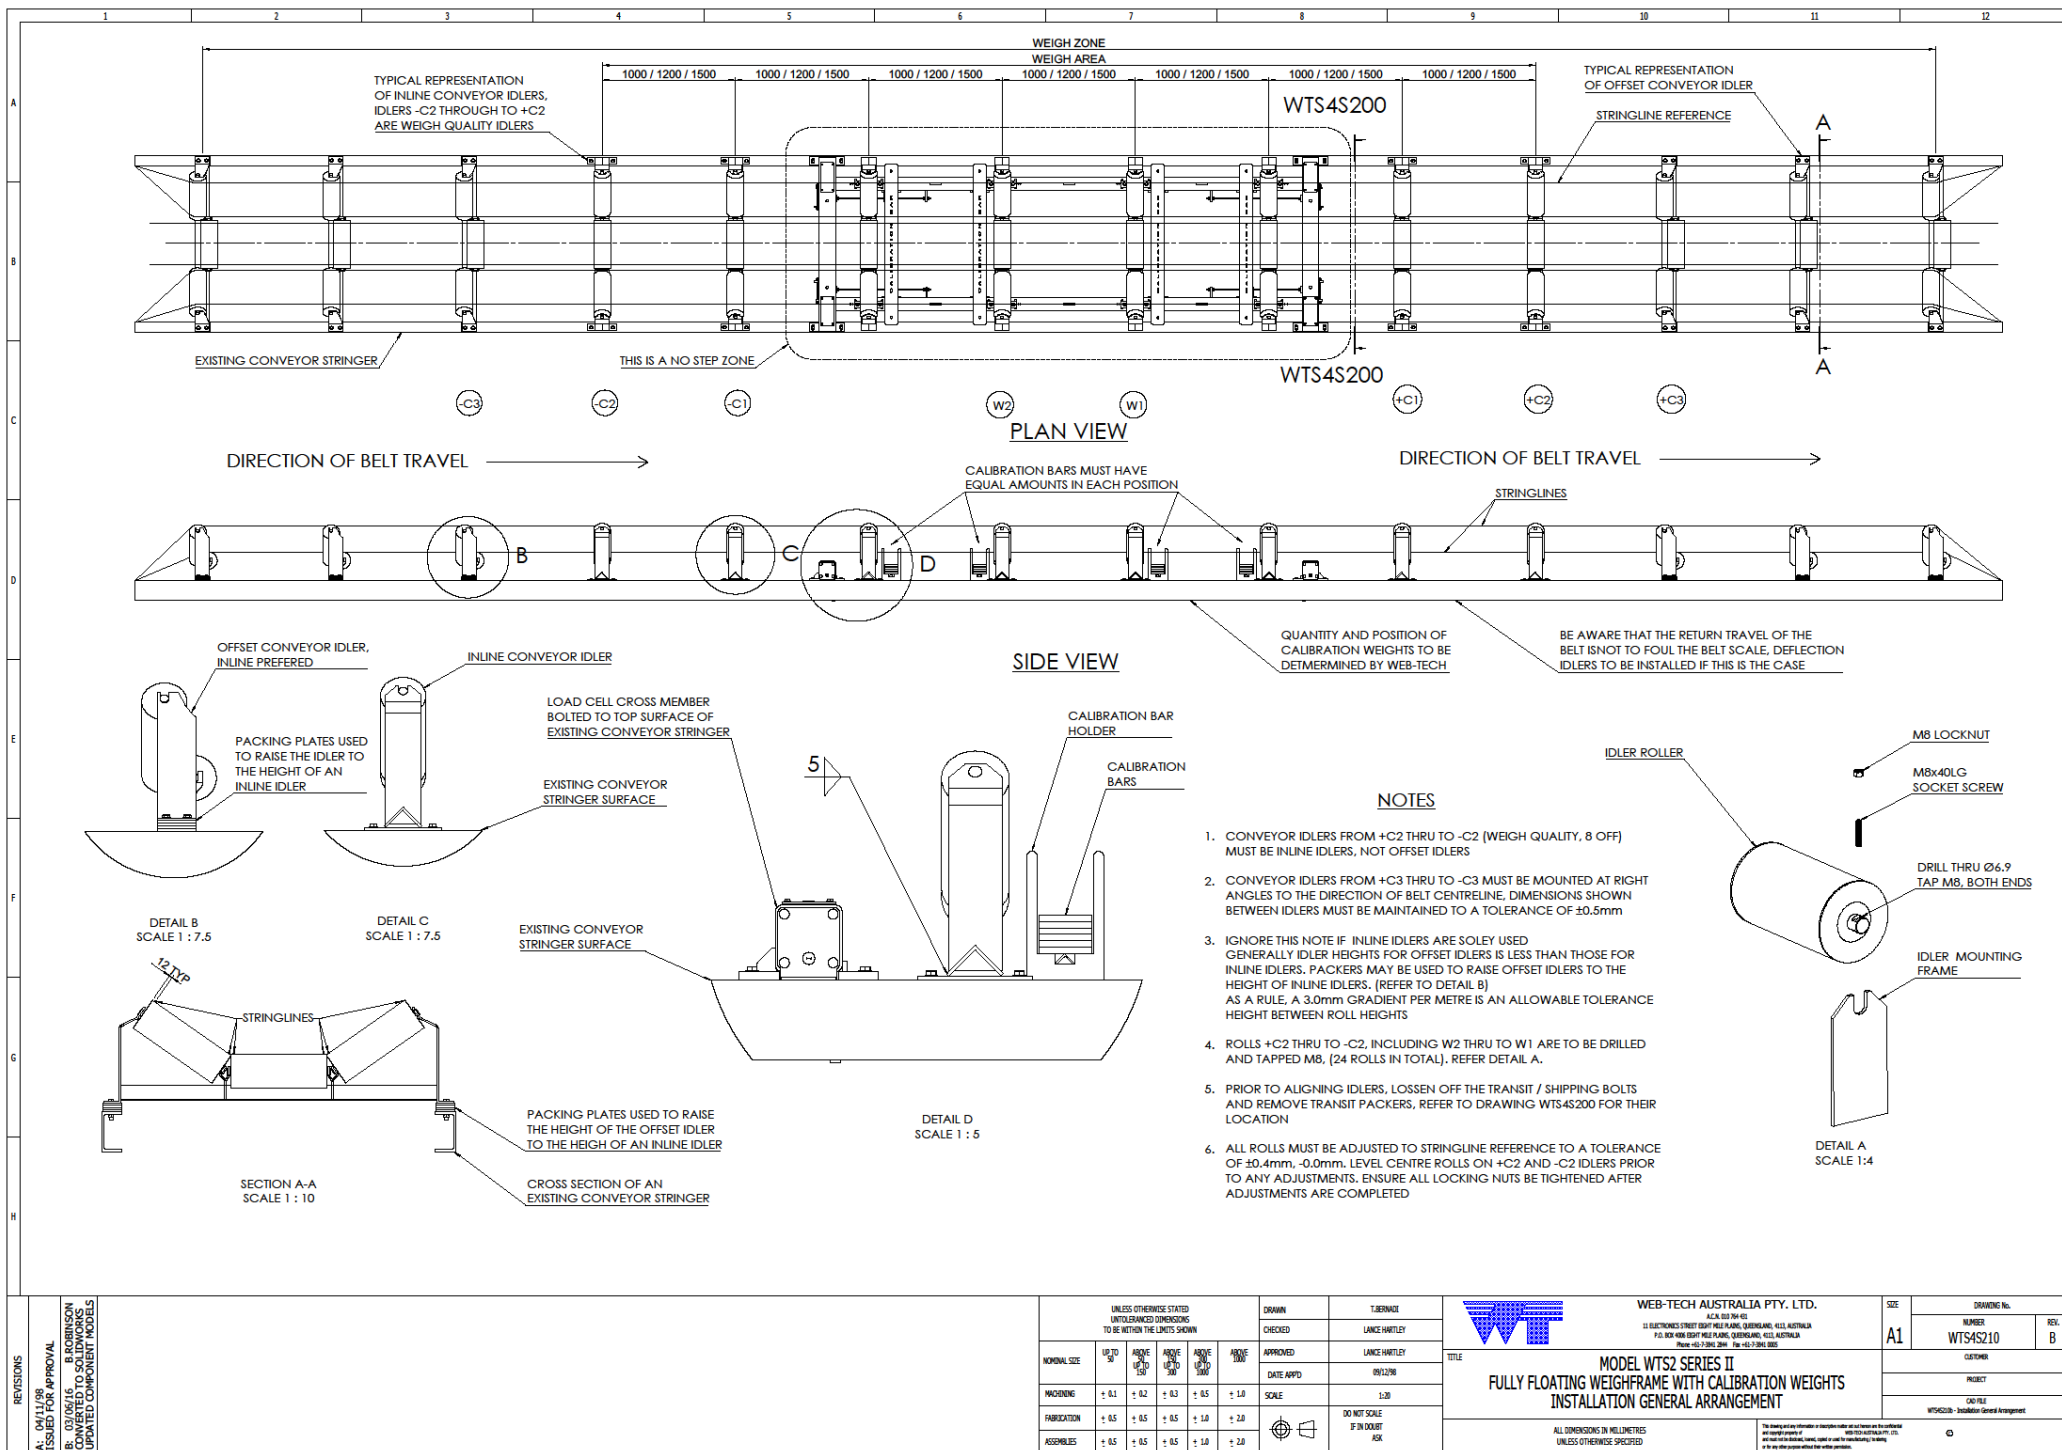


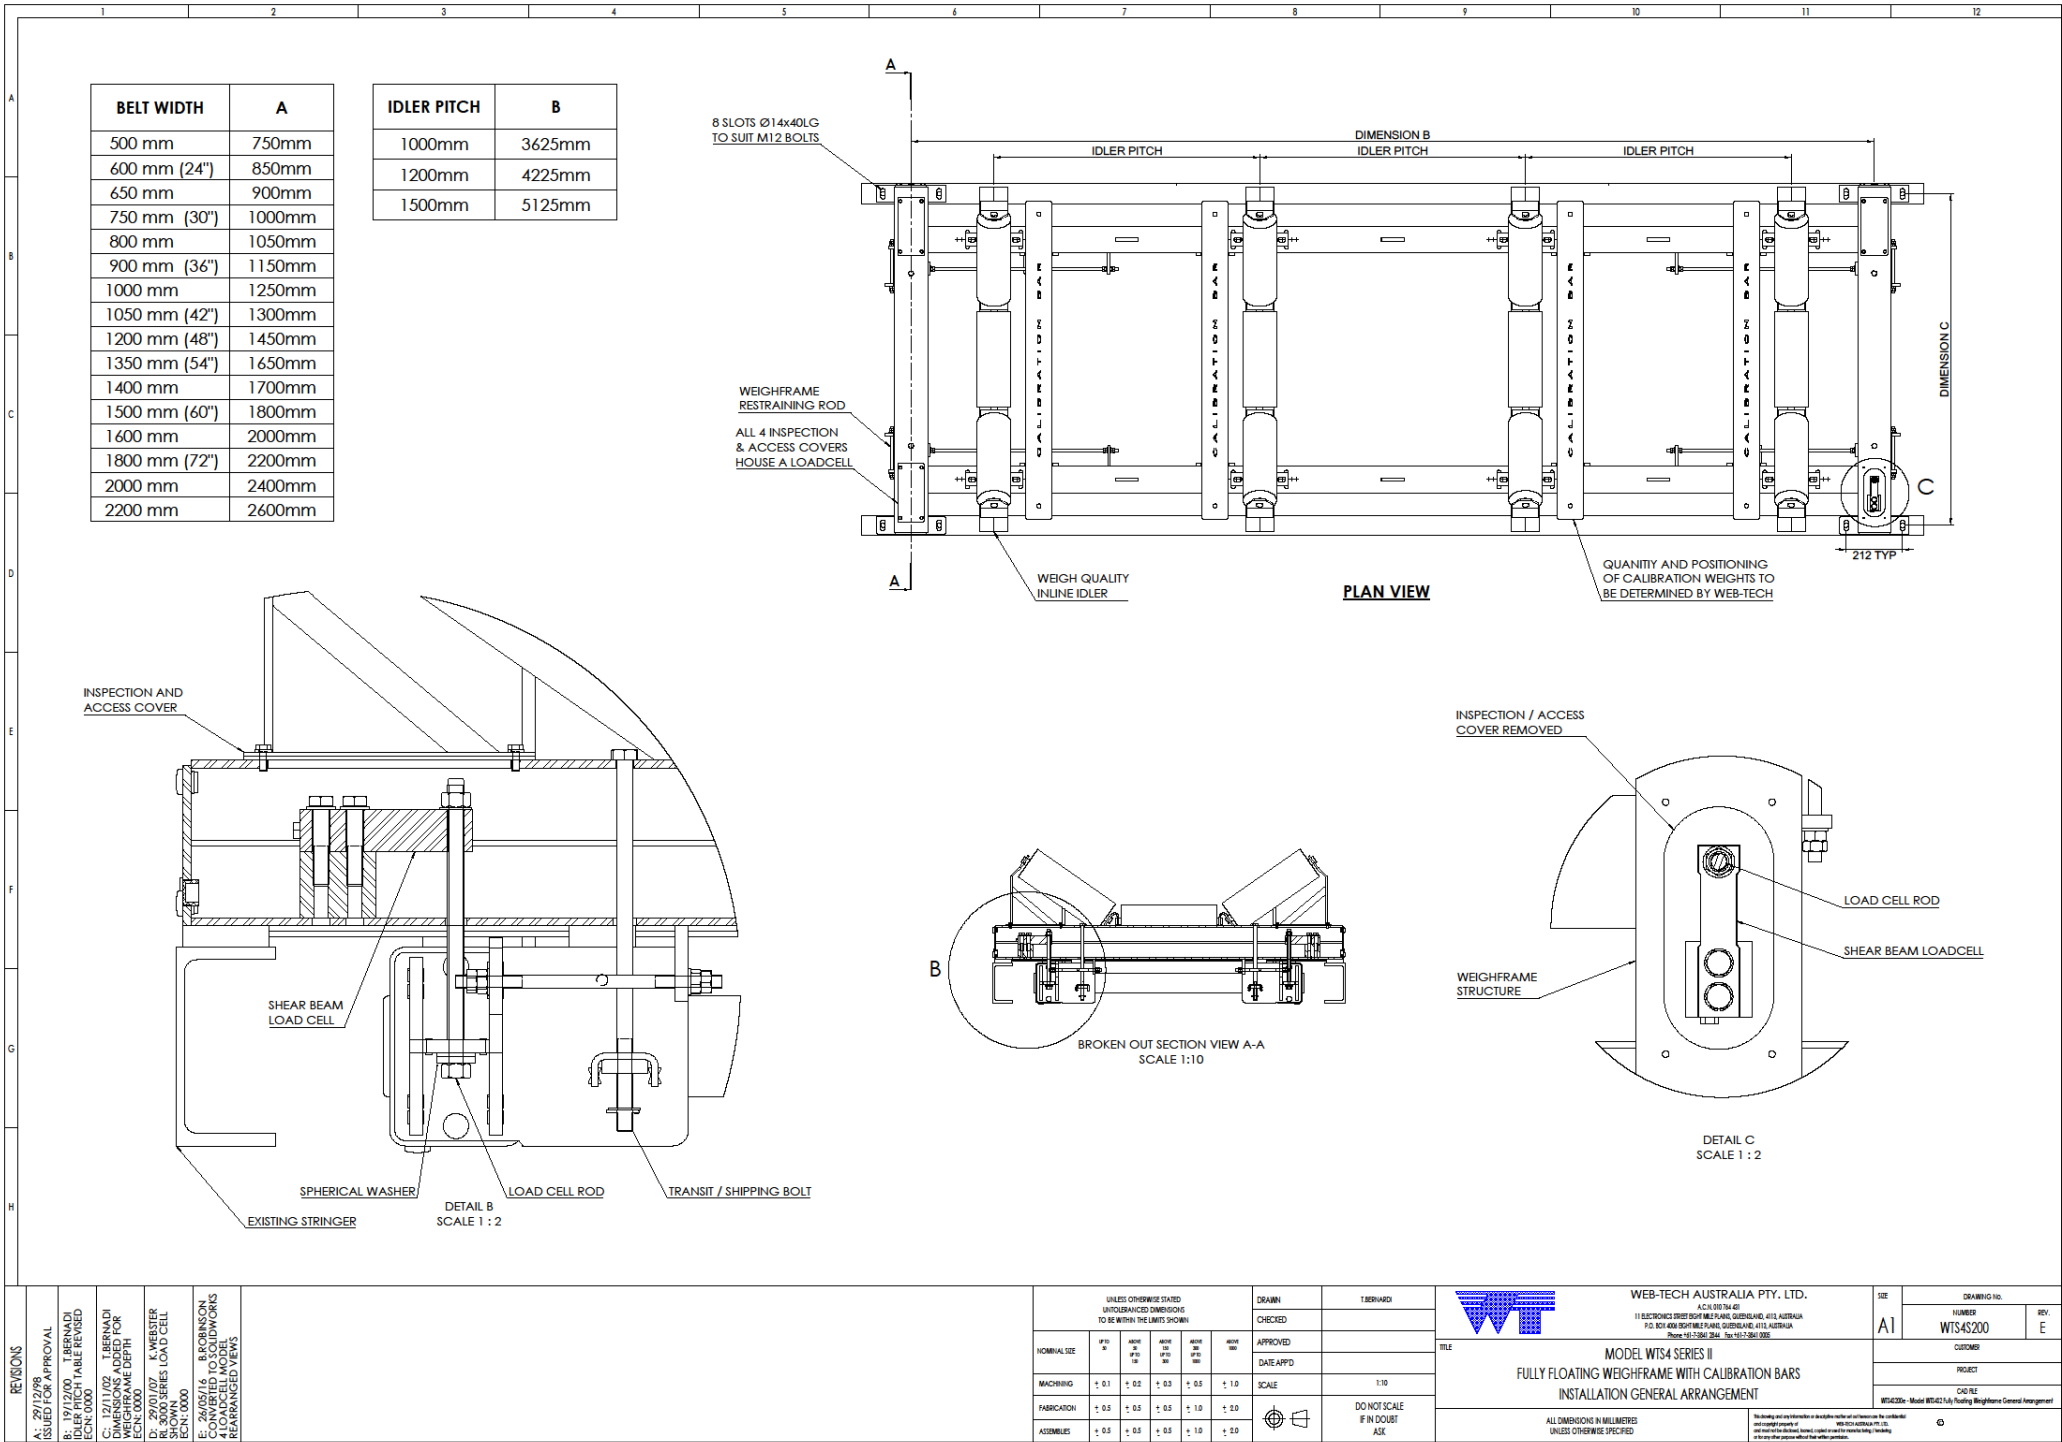


REVISIONS	
A	29/11/2018
B	19/12/2020
C	12/11/2022
D	29/01/2027
E	26/05/2026

UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN		DRAWN		T.BERNARDI	
HOMINAL SIZE		CHECKED		APPROVED	
MACHINING		DATE APP'D		SCALE	
FABRICATION		DO NOT SCALE IF IN DOUBT ASK		1:10	
ASSEMBLY					





WEB-TECH AUSTRALIA PTY. LTD.		DRAWING NO.	
11 ELECTRONICS DRIVE SOUTH COAST PARK, QUEENSLAND, 4111, AUSTRALIA		NUMBER	
P.O. BOX 400 SOUTH COAST PARK, QUEENSLAND, 4111, AUSTRALIA		CUSTOMER	
Phone: 08 55385384 Fax: 08 55386086		PROJECT	
MODEL WTS4 SERIES II		DATE	
FULLY FLOATING WEIGHFRAME WITH CALIBRATION BARS		WTS4S200	
INSTALLATION GENERAL ARRANGEMENT		REV.	
ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED		E	

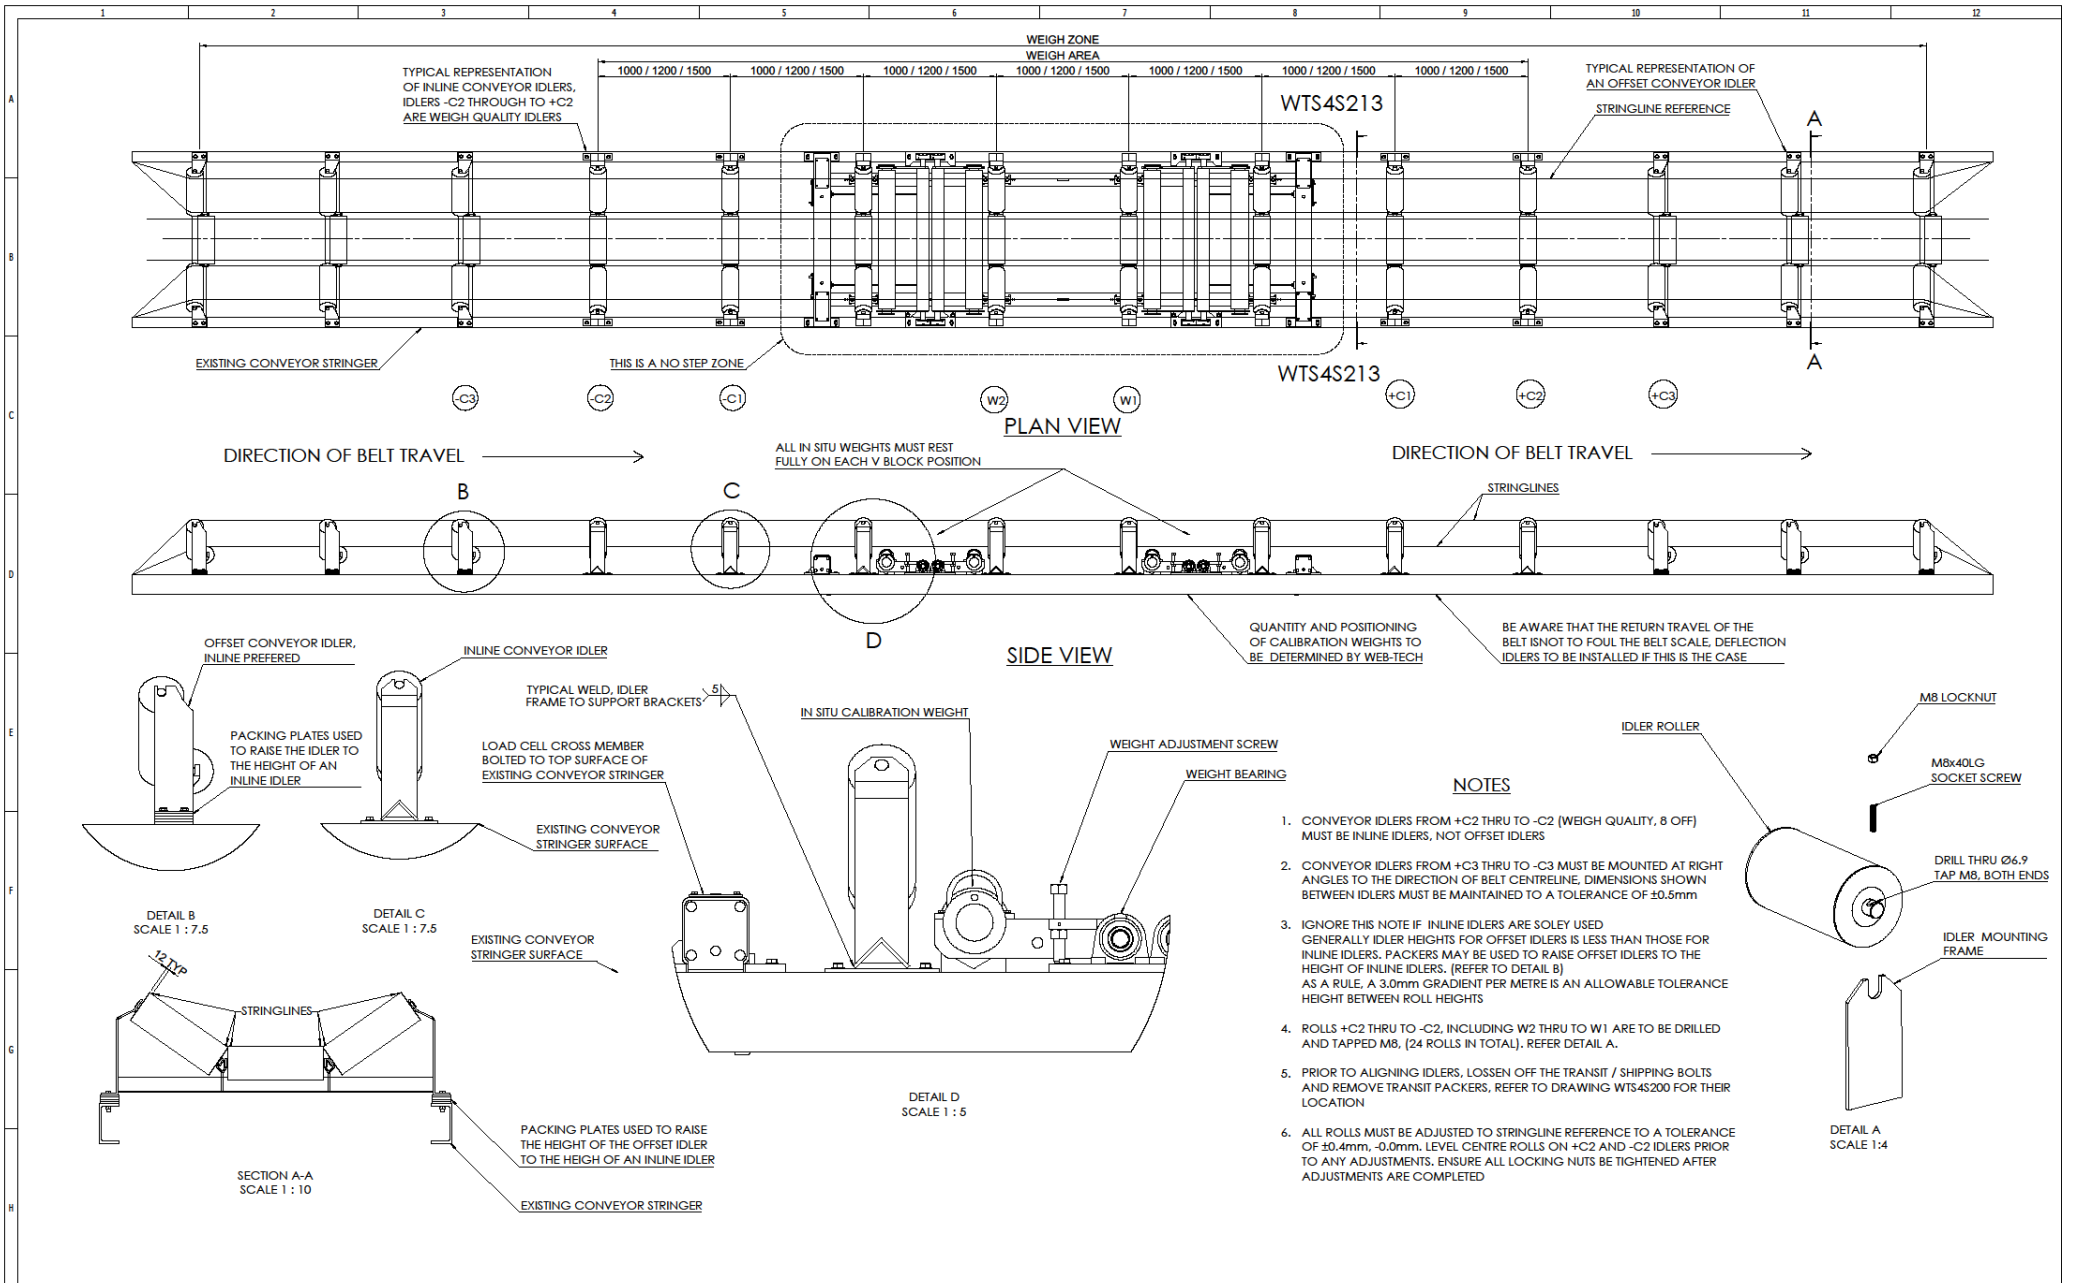


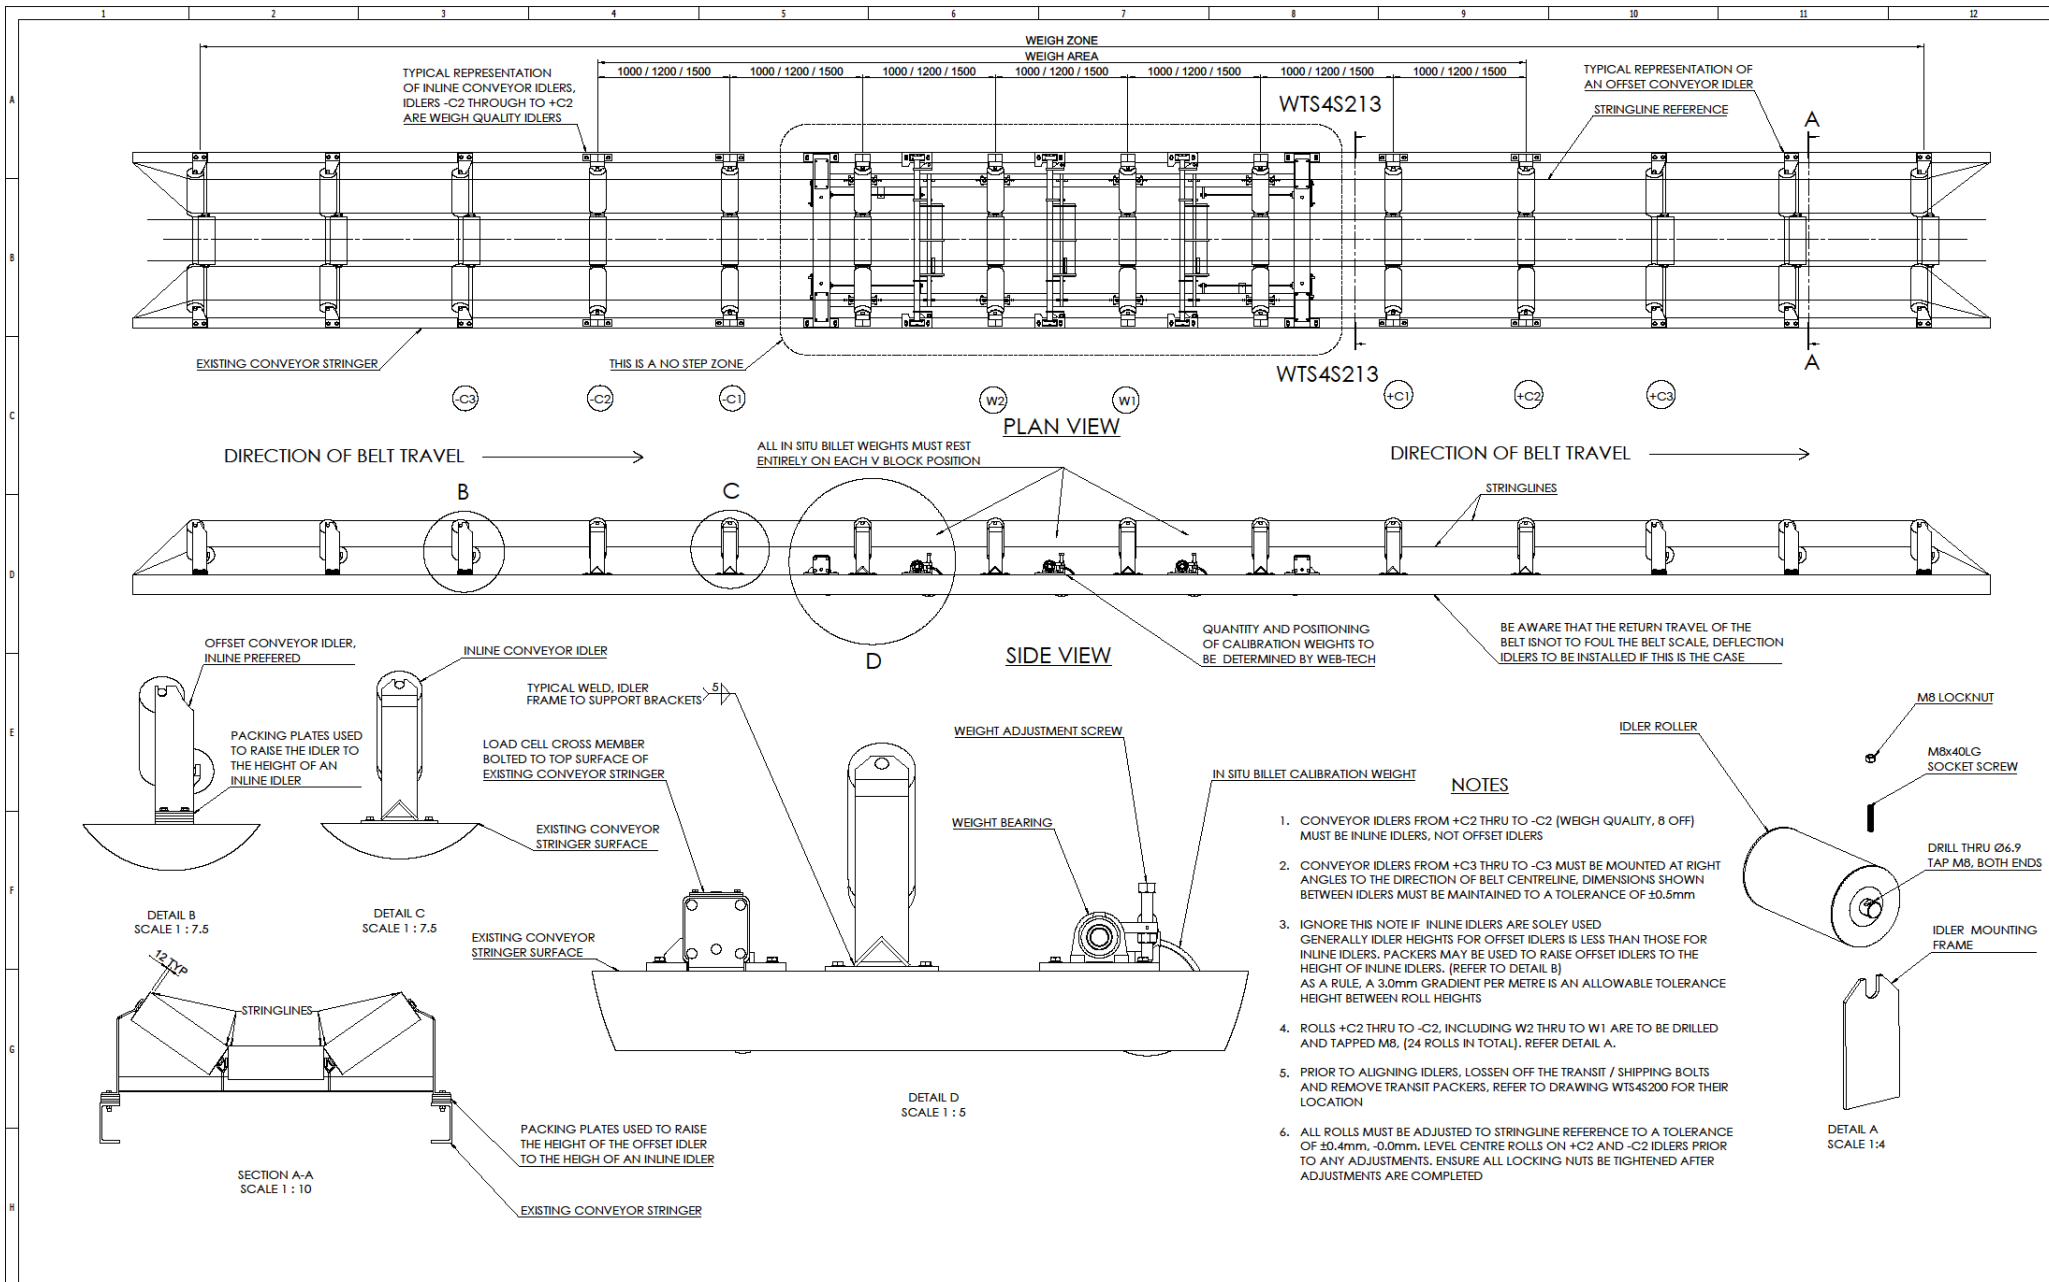
REVISIONS A. 12/06/12 ISSUED FOR APPROVAL B. 12/06/2016 B. ROBINSON CONVERTED TO SOLIDWORKS 4 LOAD CELL MODEL REARRANGED DRAWINGS	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN										DRAWN A.D.C.		 <div>WEB-TECH AUSTRALIA PTY. LTD. A.C.N. 610 394 410 11 ELECTRONICS STREET, EAST MELBOURNE, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 908, EAST MELBOURNE, QUEENSLAND, 4113, AUSTRALIA Phone: +61-3-9581 3844 Fax: +61-3-9581 0885</div>	SIZE A1	DRAWING No. WTS2S212		REV. B
	APPROVED LANCE HARTLEY										CHECKED LANCE HARTLEY			NUMBER WTS2S212		CUSTOMER	
	DATE APPD 12/12/12										SCALE 1:20			PROJECT		CADD FILE	
	DO NOT SCALE IF IN DOUBT ASK										TITLE MODEL WTS2 SERIES II FULLY FLOATING WEIGHFRAME IN SITU CALIBRATION WEIGHTS INSTALLATION GENERAL ARRANGEMENT			WTS2S212-3 - In Situ Installation General Arrangement			
	ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED										The drawing and any alterations or descriptions under this title are the property of Web-Tech Australia Pty. Ltd. and shall remain the property of Web-Tech Australia Pty. Ltd. and shall not be used for any other purpose without the written permission of Web-Tech Australia Pty. Ltd.			©			



BELT WIDTH	A
500 mm	750mm
600 mm (24")	850mm
650 mm	900mm
750 mm (30")	1000mm
800 mm	1050mm
900 mm (36")	1150mm
1000 mm	1250mm
1050 mm (42")	1300mm
1200 mm (48")	1450mm
1350 mm (54")	1650mm
1400 mm	1700mm
1500 mm (60")	1800mm
1600 mm	2000mm
1800 mm (72")	2200mm
2000 mm	2400mm
2200 mm	2600mm

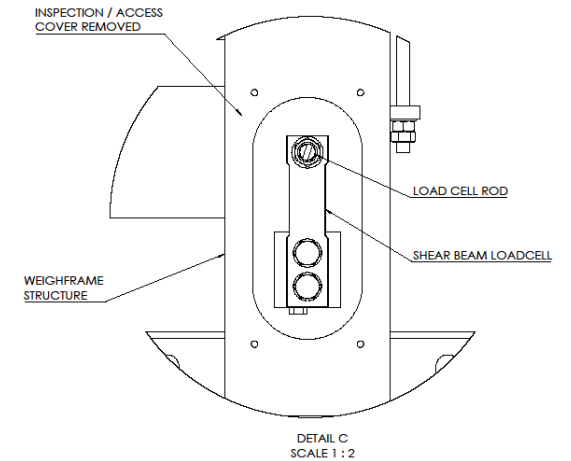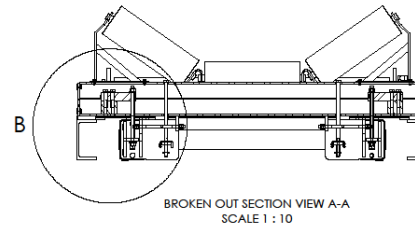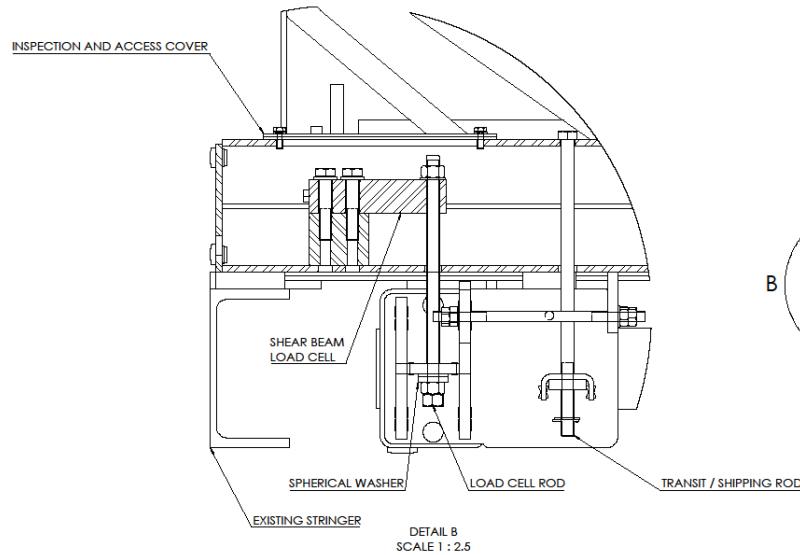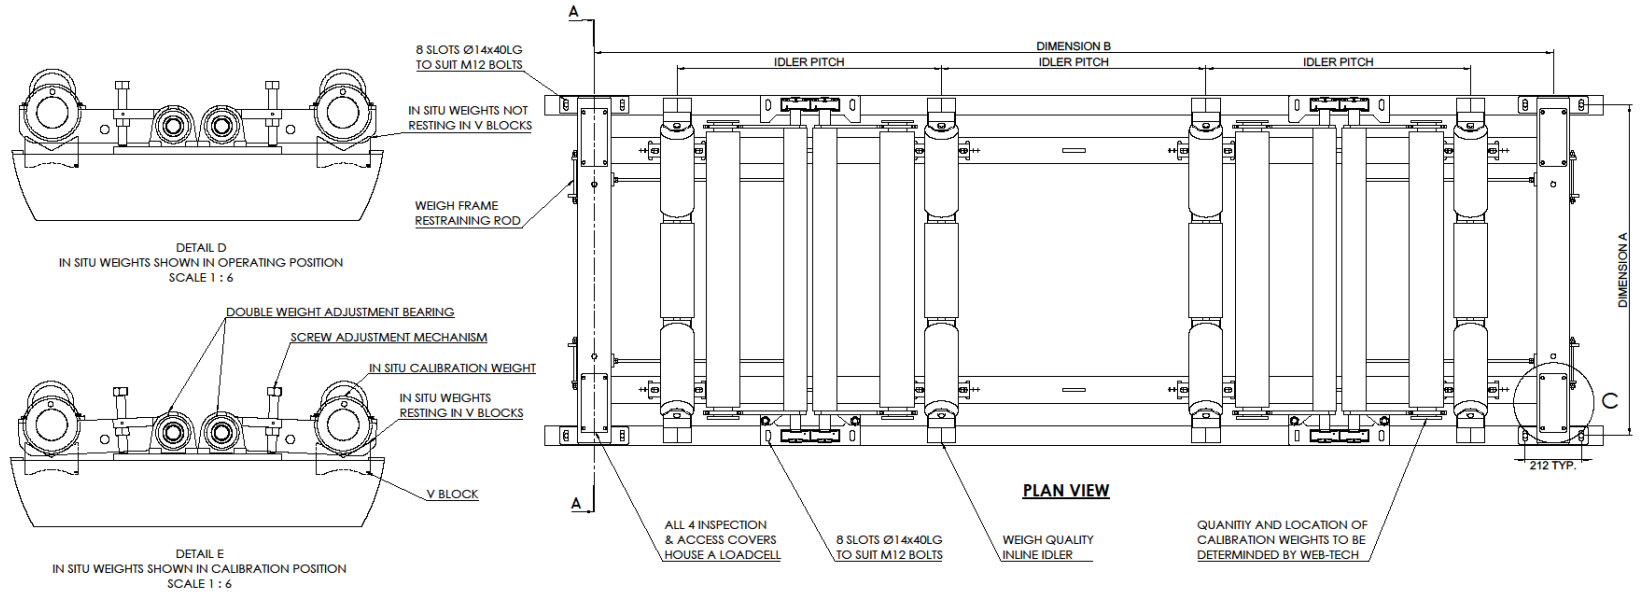IDLER PITCH	B
1000mm	3625mm
1200mm	4225mm
1500mm	5125mm









REVISIONS A: 08/01/01 ORIGINAL ISSUE B: 19/12/00 B. ROBINSON CONVERTED TO SCREWDRIVES AND ADJUSTMENT SCREWS 4 LOAD CELL MODEL REARRANGED DRAWINGS	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN					DRAWN T. BERNARD		 WEB-TECH AUSTRALIA PTY. LTD. A.C.N. 003 764 405 11 ELECTRONICS DRIVE BOONAH QUEENSLAND 4111 AUSTRALIA P.O. BOX 4008 BOONAH QUEENSLAND 4111 AUSTRALIA Phone 08 5381 3844 Fax 08 5381 3845	SIZE A1	DRAWING NO. NUMBER WTS4S211	REV. B
	HORIZONTAL SIZE A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17 A18 A19 A20 A21 A22 A23 A24 A25 A26 A27 A28 A29 A30 A31 A32 A33 A34 A35 A36 A37 A38 A39 A40 A41 A42 A43 A44 A45 A46 A47 A48 A49 A50 A51 A52 A53 A54 A55 A56 A57 A58 A59 A60 A61 A62 A63 A64 A65 A66 A67 A68 A69 A70 A71 A72 A73 A74 A75 A76 A77 A78 A79 A80 A81 A82 A83 A84 A85 A86 A87 A88 A89 A90 A91 A92 A93 A94 A95 A96 A97 A98 A99 A100 A101 A102 A103 A104 A105 A106 A107 A108 A109 A110 A111 A112 A113 A114 A115 A116 A117 A118 A119 A120 A121 A122 A123 A124 A125 A126 A127 A128 A129 A130 A131 A132 A133 A134 A135 A136 A137 A138 A139 A140 A141 A142 A143 A144 A145 A146 A147 A148 A149 A150 A151 A152 A153 A154 A155 A156 A157 A158 A159 A160 A161 A162 A163 A164 A165 A166 A167 A168 A169 A170 A171 A172 A173 A174 A175 A176 A177 A178 A179 A180 A181 A182 A183 A184 A185 A186 A187 A188 A189 A190 A191 A192 A193 A194 A195 A196 A197 A198 A199 A200 A201 A202 A203 A204 A205 A206 A207 A208 A209 A210 A211 A212 A213 A214 A215 A216 A217 A218 A219 A220 A221 A222 A223 A224 A225 A226 A227 A228 A229 A230 A231 A232 A233 A234 A235 A236 A237 A238 A239 A240 A241 A242 A243 A244 A245 A246 A247 A248 A249 A250 A251 A252 A253 A254 A255 A256 A257 A258 A259 A260 A261 A262 A263 A264 A265 A266 A267 A268 A269 A270 A271 A272 A273 A274 A275 A276 A277 A278 A279 A280 A281 A282 A283 A284 A285 A286 A287 A288 A289 A290 A291 A292 A293 A294 A295 A296 A297 A298 A299 A300 A301 A302 A303 A304 A305 A306 A307 A308 A309 A310 A311 A312 A313 A314 A315 A316 A317 A318 A319 A320 A321 A322 A323 A324 A325 A326 A327 A328 A329 A330 A331 A332 A333 A334 A335 A336 A337 A338 A339 A340 A341 A342 A343 A344 A345 A346 A347 A348 A349 A350 A351 A352 A353 A354 A355 A356 A357 A358 A359 A360 A361 A362 A363 A364 A365 A366 A367 A368 A369 A370 A371 A372 A373 A374 A375 A376 A377 A378 A379 A380 A381 A382 A383 A384 A385 A386 A387 A388 A389 A390 A391 A392 A393 A394 A395 A396 A397 A398 A399 A400 A401 A402 A403 A404 A405 A406 A407 A408 A409 A410 A411 A412 A413 A414 A415 A416 A417 A418 A419 A420 A421 A422 A423 A424 A425 A426 A427 A428 A429 A430 A431 A432 A433 A434 A435 A436 A437 A438 A439 A440 A441 A442 A443 A444 A445 A446 A447 A448 A449 A450 A451 A452 A453 A454 A455 A456 A457 A458 A459 A460 A461 A462 A463 A464 A465 A466 A467 A468 A469 A470 A471 A472 A473 A474 A475 A476 A477 A478 A479 A480 A481 A482 A483 A484 A485 A486 A487 A488 A489 A490 A491 A492 A493 A494 A495 A496 A497 A498 A499 A500 A501 A502 A503 A504 A505 A506 A507 A508 A509 A510 A511 A512 A513 A514 A515 A516 A517 A518 A519 A520 A521 A522 A523 A524 A525 A526 A527 A528 A529 A530 A531 A532 A533 A534 A535 A536 A537 A538 A539 A540 A541 A542 A543 A544 A545 A546 A547 A548 A549 A550 A551 A552 A553 A554 A555 A556 A557 A558 A559 A560 A561 A562 A563 A564 A565 A566 A567 A568 A569 A570 A571 A572 A573 A574 A575 A576 A577 A578 A579 A580 A581 A582 A583 A584 A585 A586 A587 A588 A589 A590 A591 A592 A593 A594 A595 A596 A597 A598 A599 A600 A601 A602 A603 A604 A605 A606 A607 A608 A609 A610 A611 A612 A613 A614 A615 A616 A617 A618 A619 A620 A621 A622 A623 A624 A625 A626 A627 A628 A629 A630 A631 A632 A633 A634 A635 A636 A637 A638 A639 A640 A641 A642 A643 A644 A645 A646 A647 A648 A649 A650 A651 A652 A653 A654 A655 A656 A657 A658 A659 A660 A661 A662 A663 A664 A665 A666 A667 A668 A669 A670 A671 A672 A673 A674 A675 A676 A677 A678 A679 A680 A681 A682 A683 A684 A685 A686 A687 A688 A689 A690 A691 A692 A693 A694 A695 A696 A697 A698 A699 A700 A701 A702 A703 A704 A705 A706 A707 A708 A709 A710 A711 A712 A713 A714 A715 A716 A717 A718 A719 A720 A721 A722 A723 A724 A725 A726 A727 A728 A729 A730 A731 A732 A733 A734 A735 A736 A737 A738 A739 A740 A741 A742 A743 A744 A745 A746 A747 A748 A749 A750 A751 A752 A753 A754 A755 A756 A757 A758 A759 A760 A761 A762 A763 A764 A765 A766 A767 A768 A769 A770 A771 A772 A773 A774 A775 A776 A777 A778 A779 A780 A781 A782 A783 A784 A785 A786 A787 A788 A789 A790 A791 A792 A793 A794 A795 A796 A797 A798 A799 A800 A801 A802 A803 A804 A805 A806 A807 A808 A809 A810 A811 A812 A813 A814 A815 A816 A817 A818 A819 A820 A821 A822 A823 A824 A825 A826 A827 A828 A829 A830 A831 A832 A833 A834 A835 A836 A837 A838 A839 A840 A841 A842 A843 A844 A845 A846 A847 A848 A849 A850 A851 A852 A853 A854 A855 A856 A857 A858 A859 A860 A861 A862 A863 A864 A865 A866 A867 A868 A869 A870 A871 A872 A873 A874 A875 A876 A877 A878 A879 A880 A881 A882 A883 A884 A885 A886 A887 A888 A889 A890 A891 A892 A893 A894 A895 A896 A897 A898 A899 A900 A901 A902 A903 A904 A905 A906 A907 A908 A909 A910 A911 A912 A913 A914 A915 A916 A917 A918 A919 A920 A921 A922 A923 A924 A925 A926 A927 A928 A929 A930 A931 A932 A933 A934 A935 A936 A937 A938 A939 A940 A941 A942 A943 A944 A945 A946 A947 A948 A949 A950 A951 A952 A953 A954 A955 A956 A957 A958 A959 A960 A961 A962 A963 A964 A965 A966 A967 A968 A969 A970 A971 A972 A973 A974 A975 A976 A977 A978 A979 A980 A981 A982 A983 A984 A985 A986 A987 A988 A989 A990 A991 A992 A993 A994 A995 A996 A997 A998 A999 A1000 A1001 A1002 A1003 A1004 A1005 A1006 A1007 A1008 A1009 A1010 A1011 A1012 A1013 A1014 A1015 A1016 A1017 A1018 A1019 A1020 A1021 A1022 A1023 A1024 A1025 A1026 A1027 A1028 A1029 A1030 A1031 A1032 A1033 A1034 A1035 A1036 A1037 A1038 A1039 A1040 A1041 A1042 A1043 A1044 A1045 A1046 A1047 A1048 A1049 A1050 A1051 A1052 A1053 A1054 A1055 A1056 A1057 A1058 A1059 A1060 A1061 A1062 A1063 A1064 A1065 A1066 A1067 A1068 A1069 A1070 A1071 A1072 A1073 A1074 A1075 A1076 A1077 A1078 A1079 A1080 A1081 A1082 A1083 A1084 A1085 A1086 A1087 A1088 A1089 A1090 A1091 A1092 A1093 A1094 A1095 A1096 A1097 A1098 A1099 A1100 A1101 A1102 A1103 A1104 A1105 A1106 A1107 A1108 A1109 A1110 A1111 A1112 A1113 A1114 A1115 A1116 A1117 A1118 A1119 A1120 A1121 A1122 A1123 A1124 A1125 A1126 A1127 A1128 A1129 A1130 A1131 A1132 A1133 A1134 A1135 A1136 A1137 A1138 A1139 A1140 A1141 A1142 A1143 A1144 A1145 A1146 A1147 A1148 A1149 A1150 A1151 A1152 A1153 A1154 A1155 A1156 A1157 A1158 A1159 A1160 A1161 A1162 A1163 A1164 A1165 A1166 A1167 A1168 A1169 A1170 A1171 A1172 A1173 A1174 A1175 A1176 A1177 A1178 A1179 A1180 A1181 A1182 A1183 A1184 A1185 A1186 A1187 A1188 A1189 A1190 A1191 A1192 A1193 A1194 A1195 A1196 A1197 A1198 A1199 A1200 A1201 A1202 A1203 A1204 A1205 A1206 A1207 A1208 A1209 A1210 A1211 A1212 A1213 A1214 A1215 A1216 A1217 A1218 A1219 A1220 A1221 A1222 A1223 A1224 A1225 A1226 A1227 A1228 A1229 A1230 A1231 A1232 A1233 A1234 A1235 A1236 A1237 A1238 A1239 A1240 A1241 A1242 A1243 A1244 A1245 A1246 A1247 A1248 A1249 A1250 A1251 A1252 A1253 A1254 A1255 A1256 A1257 A1258 A1259 A1260 A1261 A1262 A1263 A1264 A1265 A1266 A1267 A1268 A1269 A1270 A1271 A1272 A1273 A1274 A1275 A1276 A1277 A1278 A1279 A1280 A1281 A1282 A1283 A1284 A1285 A1286 A1287 A1288 A1289 A1290 A1291 A1292 A1293 A1294 A1295 A1296 A1297 A1298 A1299 A1300 A1301 A1302 A1303 A1304 A1305 A1306 A1307 A1308 A1309 A1310 A1311 A1312 A1313 A1314 A1315 A1316 A1317 A1318 A1319 A1320 A1321 A1322 A1323 A1324 A1325 A1326 A1327 A1328 A1329 A1330 A1331 A1332 A1333 A1334 A1335 A1336 A1337 A1338 A1339 A1340 A1341 A1342 A1343 A1344 A1345 A1346 A1347 A1348 A1349 A1350 A1351 A1352 A1353 A1354 A1355 A1356 A1357 A1358 A1359 A1360 A1361 A1362 A1363 A1364 A1365 A1366 A1367 A1368 A1369 A1370 A1371 A1372 A1373 A1374 A1375 A1376 A1377 A1378 A1379 A1380 A1381 A1382 A1383 A1384 A1385 A1386 A1387 A1388 A1389 A1390 A1391 A1392 A1393 A1394 A1395 A1396 A1397 A1398 A1399 A1400 A1401 A1402 A1403 A1404 A1405 A1406 A1407 A1408 A1409 A1410 A1411 A1412 A1413 A1414 A1415 A1416 A1417 A1418 A1419 A1420 A1421 A1422 A1423 A1424 A1425 A1426 A1427 A1428 A1429 A1430 A1431 A1432 A1433 A1434 A1435 A1436 A1437 A1438 A1439 A1440 A1441 A1442 A1443 A1444 A1445 A1446 A1447 A1448 A1449 A1450 A1451 A1452 A1453 A1454 A1455 A1456 A1457 A1458 A1459 A1460 A1461 A1462 A1463 A1464 A1465 A1466 A1467 A1468 A1469 A1470 A1471 A1472 A1473 A1474 A1475 A1476 A1477 A1478 A1479 A1480 A1481 A1482 A1483 A1484 A1485 A1486 A1487 A1488 A1489 A1490 A1491 A1492 A1493 A1494 A1495 A1496 A1497 A1498 A1499 A1500 A1501 A1502 A1503 A1504 A1505 A1506 A1507 A1508 A1509 A1510 A1511 A1512 A1513 A1514 A1515 A1516 A1517 A1518 A1519 A1520 A1521 A1522 A1523 A1524 A1525 A1526 A1527 A1528 A1529 A1530 A1531 A1532 A1533 A1534 A1535 A1536 A1537 A1538 A1539 A1540 A1541 A1542 A1543 A1544 A1545 A1546 A1547 A1548 A1549 A1550 A1551 A1552 A1553 A1554 A1555 A1556 A1557 A1558 A1559 A1560 A1561 A1562 A1563 A1564 A1565 A1566 A1567 A1568 A1569 A1570 A1571 A1572 A1573 A1574 A1575 A1576 A1577 A1578 A1579 A1580 A1581 A1582 A1583 A1584 A1585 A1586 A1587 A1588 A1589 A1590 A1591 A1592 A1593 A1594 A1595 A1596 A1597 A1598 A1599 A1600 A1601 A1602 A1603 A1604 A1605 A1606 A1607 A1608 A1609 A1610 A1611 A1612 A1613 A1614 A1615 A1616 A1617 A1618 A1619 A1620 A1621 A1622 A1623 A1624 A1625 A1626 A1627 A1628 A1629 A1630 A1631 A1632 A1633 A1634 A1635 A1636 A1637 A1638 A1639 A1640 A1641 A1642 A1643 A1644 A1645 A1646 A1647 A1648 A1649 A1650 A1651 A1652 A1653 A1654 A1655 A1656 A1657 A1658 A1659 A1660 A1661 A1662 A1663 A1664 A1665 A1666 A1667 A1668 A1669 A1670 A1671 A1672 A1673 A1674 A1675 A1676 A1677 A1678 A1679 A1680 A1681 A1682 A1683 A1684 A1685 A1686 A1687 A1688 A1689 A1690 A1691 A1692 A1693 A1694 A1695 A1696 A1697 A1698 A1699 A1700 A1701 A1702 A1703 A1704 A1705 A1706 A1707 A1708 A1709 A1710 A1711 A1712 A1713 A1714 A1715 A1716 A1717 A1718 A1719 A1720 A1721 A1722 A1723 A1724 A1725 A1726 A1727 A1728 A1729 A1730 A1731 A1732 A1733 A1734 A1735 A1736 A1737 A1738 A1739 A1740 A1741 A1742 A1743 A1744 A1745 A1746 A1747 A1748 A1749 A1750 A1751 A1752 A1753 A1754 A1755 A1756 A1757 A1758 A1759 A1760 A1761 A1762 A1763 A1764 A1765 A1766 A1767 A1768 A1769 A1770 A1771 A1772 A1773 A1774 A1775 A1776 A1777 A1778 A1779 A1780 A1781 A1782 A1783 A1784 A1785 A1786 A1787 A1788 A1789 A1790 A1791 A1792 A1793 A1794 A1795 A1796 A1797 A1798 A1799 A1800 A1801 A1802 A1803 A1804 A1805 A1806 A1807 A1808 A1809 A1810 A1811 A1812 A1813 A1814 A1815 A1816 A1817 A1818 A1819 A1820 A1821 A1822 A1823 A1824 A1825 A1826 A1827 A1828 A1829 A1830 A1831 A1832 A1833 A1834 A1835 A1836 A1837 A1838 A1839 A1840 A1841 A1842 A1843 A1844 A1845 A1846 A1847 A1848 A1849 A1850 A1851 A1852 A1853 A1854 A1855 A1856 A1857 A1858 A1859 A1860 A1861 A1862 A1863 A1864 A1865 A1866 A1867 A1868 A1869 A1870 A1871 A1872 A1873 A1874 A1875 A1876 A1877 A1878 A1879 										



REVISIONS A: 08/06/16 - B. ROBINSON ISSUED FOR APPROVAL	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN				DRAWN CHECKED		B. ROBINSON			WEB-TECH AUSTRALIA PTY. LTD. A.C.N. 613 364 942 11 ELECTRONICS STREET (STREET FIVE) PLANE, QUEENSLAND, 4111 AUSTRALIA P.O. BOX 408 (STREET FIVE PLANE, QUEENSLAND, 4111 AUSTRALIA) Phone: +61 (0) 7 3861 2886 Fax: +61 (0) 7 3861 8885				SIZE A1	DRAWING No. NUMBER WTS2S214		REV. A
	NOMINAL SIZE UP TO 30 ABOVE 30 TO 50 ABOVE 50 TO 75 ABOVE 75 TO 100 ABOVE 100				APPROVED					MODEL WTS2 SERIES II FULLY FLOATING WEIGHFRAME IN SITU BILLET WEIGHTS INSTALLATION GENERAL ARRANGEMENT				CUSTOMER			
	MACHINING ± 0.1 ± 0.2 ± 0.3 ± 0.5 ± 1.0				DATE APP'D					PROJECT							
	FABRICATION ± 0.5 ± 0.5 ± 0.5 ± 1.0 ± 2.0				SCALE 1:20		DO NOT SCALE IF IN DOUBT ASK			DATE FILED WTS4S214 - In Situ Billet Weighing General Arrangement							
	ASSEMBLIES ± 0.5 ± 0.5 ± 0.5 ± 1.0 ± 2.0									ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED				The design is the property of Web-Tech Australia Pty. Ltd. and is to be used only for the purpose for which it was designed. It is not to be used for any other purpose without the written permission of Web-Tech Australia Pty. Ltd.			

BELT WIDTH	A
500 mm	750mm
600 mm (24")	850mm
650 mm	900mm
750 mm (30")	1000mm
800 mm	1050mm
900 mm (36")	1150mm
1000 mm	1250mm
1050 mm (42")	1300mm
1200 mm (48")	1450mm
1350 mm (54")	1650mm
1400 mm	1700mm
1500 mm (60")	1800mm
1600 mm	2000mm
1800 mm (72")	2200mm
2000 mm	2400mm
2200 mm	2600mm

IDLER PITCH	B
1000mm	3625mm
1200mm	4225mm
1500mm	5125mm

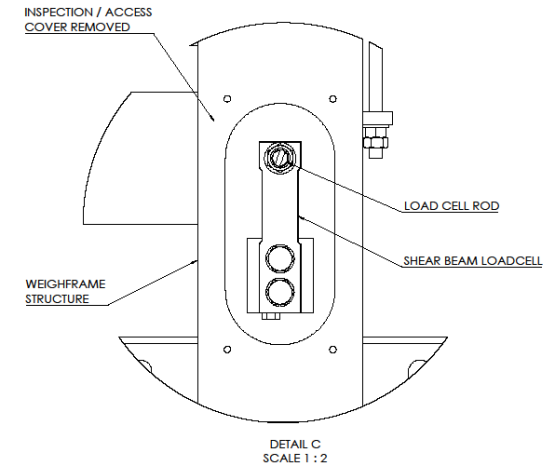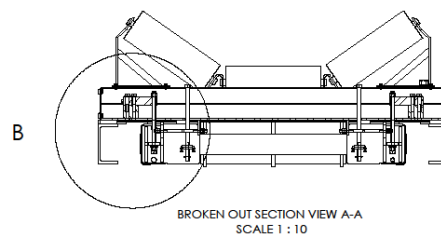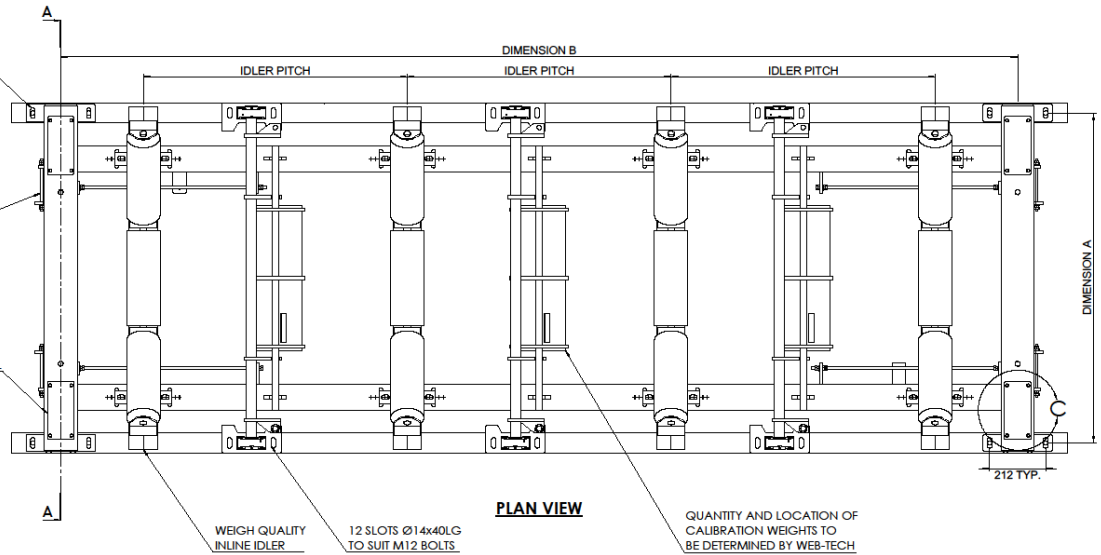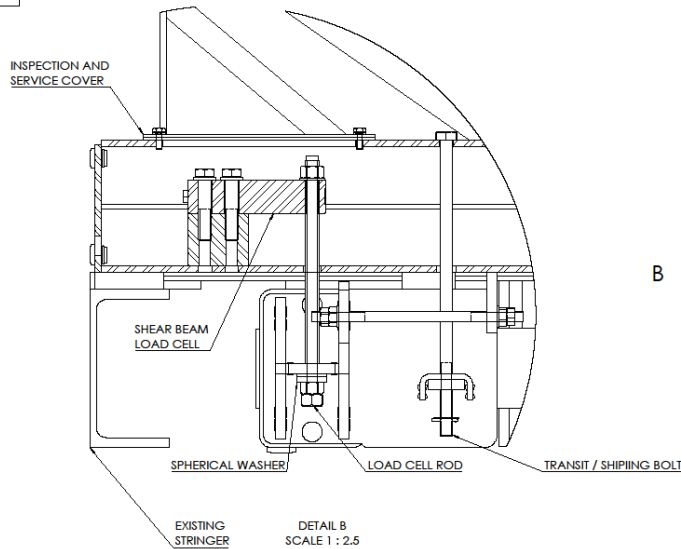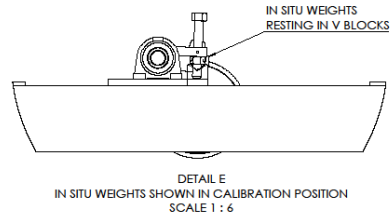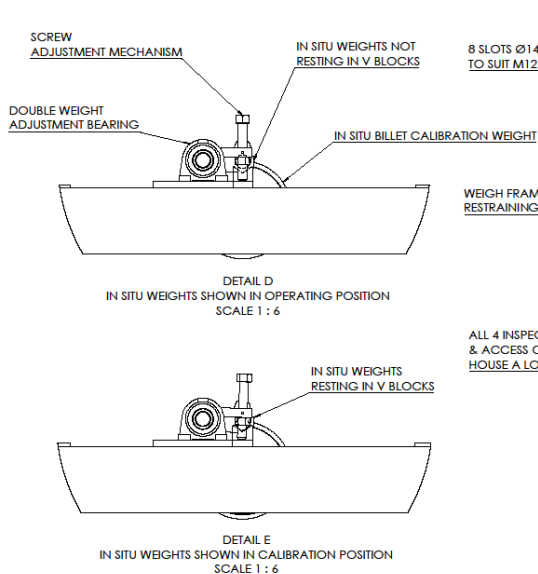

REVISIONS
A1: ORIGINAL & ROBINSON
ORIGINAL ISSUE

UNLESS OTHERWISE STATED UNTOUCHED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN					
NOMINAL SIZE	MM	IN	MM	IN	MM
MACHINING	± 0.1	± 0.02	± 0.3	± 0.01	± 1.0
FABRICATION	± 0.5	± 0.05	± 0.5	± 1.0	± 0.0
ASSEMBLY	± 0.5	± 0.5	± 0.5	± 1.0	± 0.0



WEB-TECH AUSTRALIA PTY. LTD.
A/CN 910 TH QD
11 ELECTRONICS DRIVE SOUTH BRISBANE, QUEENSLAND, 4101 AUSTRALIA
P.O. BOX 4008 SOUTH BRISBANE, QUEENSLAND, 4101 AUSTRALIA
Phone: 08-5384 3844 Fax: 08-5384 3885

MODEL WTS4 SERIES II
FULLY FLOATING WEIGHFRAME WITH IN SITU BILLET CALIBRATION WEIGHT
CALIBRATION WEIGHTS GENERAL ARRANGEMENT


ALL DIMENSIONS IN MILLIMETRES
UNLESS OTHERWISE SPECIFIED


No liability is accepted for any loss or damage to property or equipment, or for any injury to persons, arising from the use of this equipment, or from any defect in the equipment, or from any defect in the equipment, or from any defect in the equipment.


SIZE	DRAWING NO.	NUMBER	REV.
A1	WTS4S213	A	
CUSTOMER			
PROJECT			
C/D/R/E			
WTS4S213 - Model WTS4S213 Fully Floating Weighframe General Arrangement in Situ Weights			

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Appendix B – Wiring Diagrams

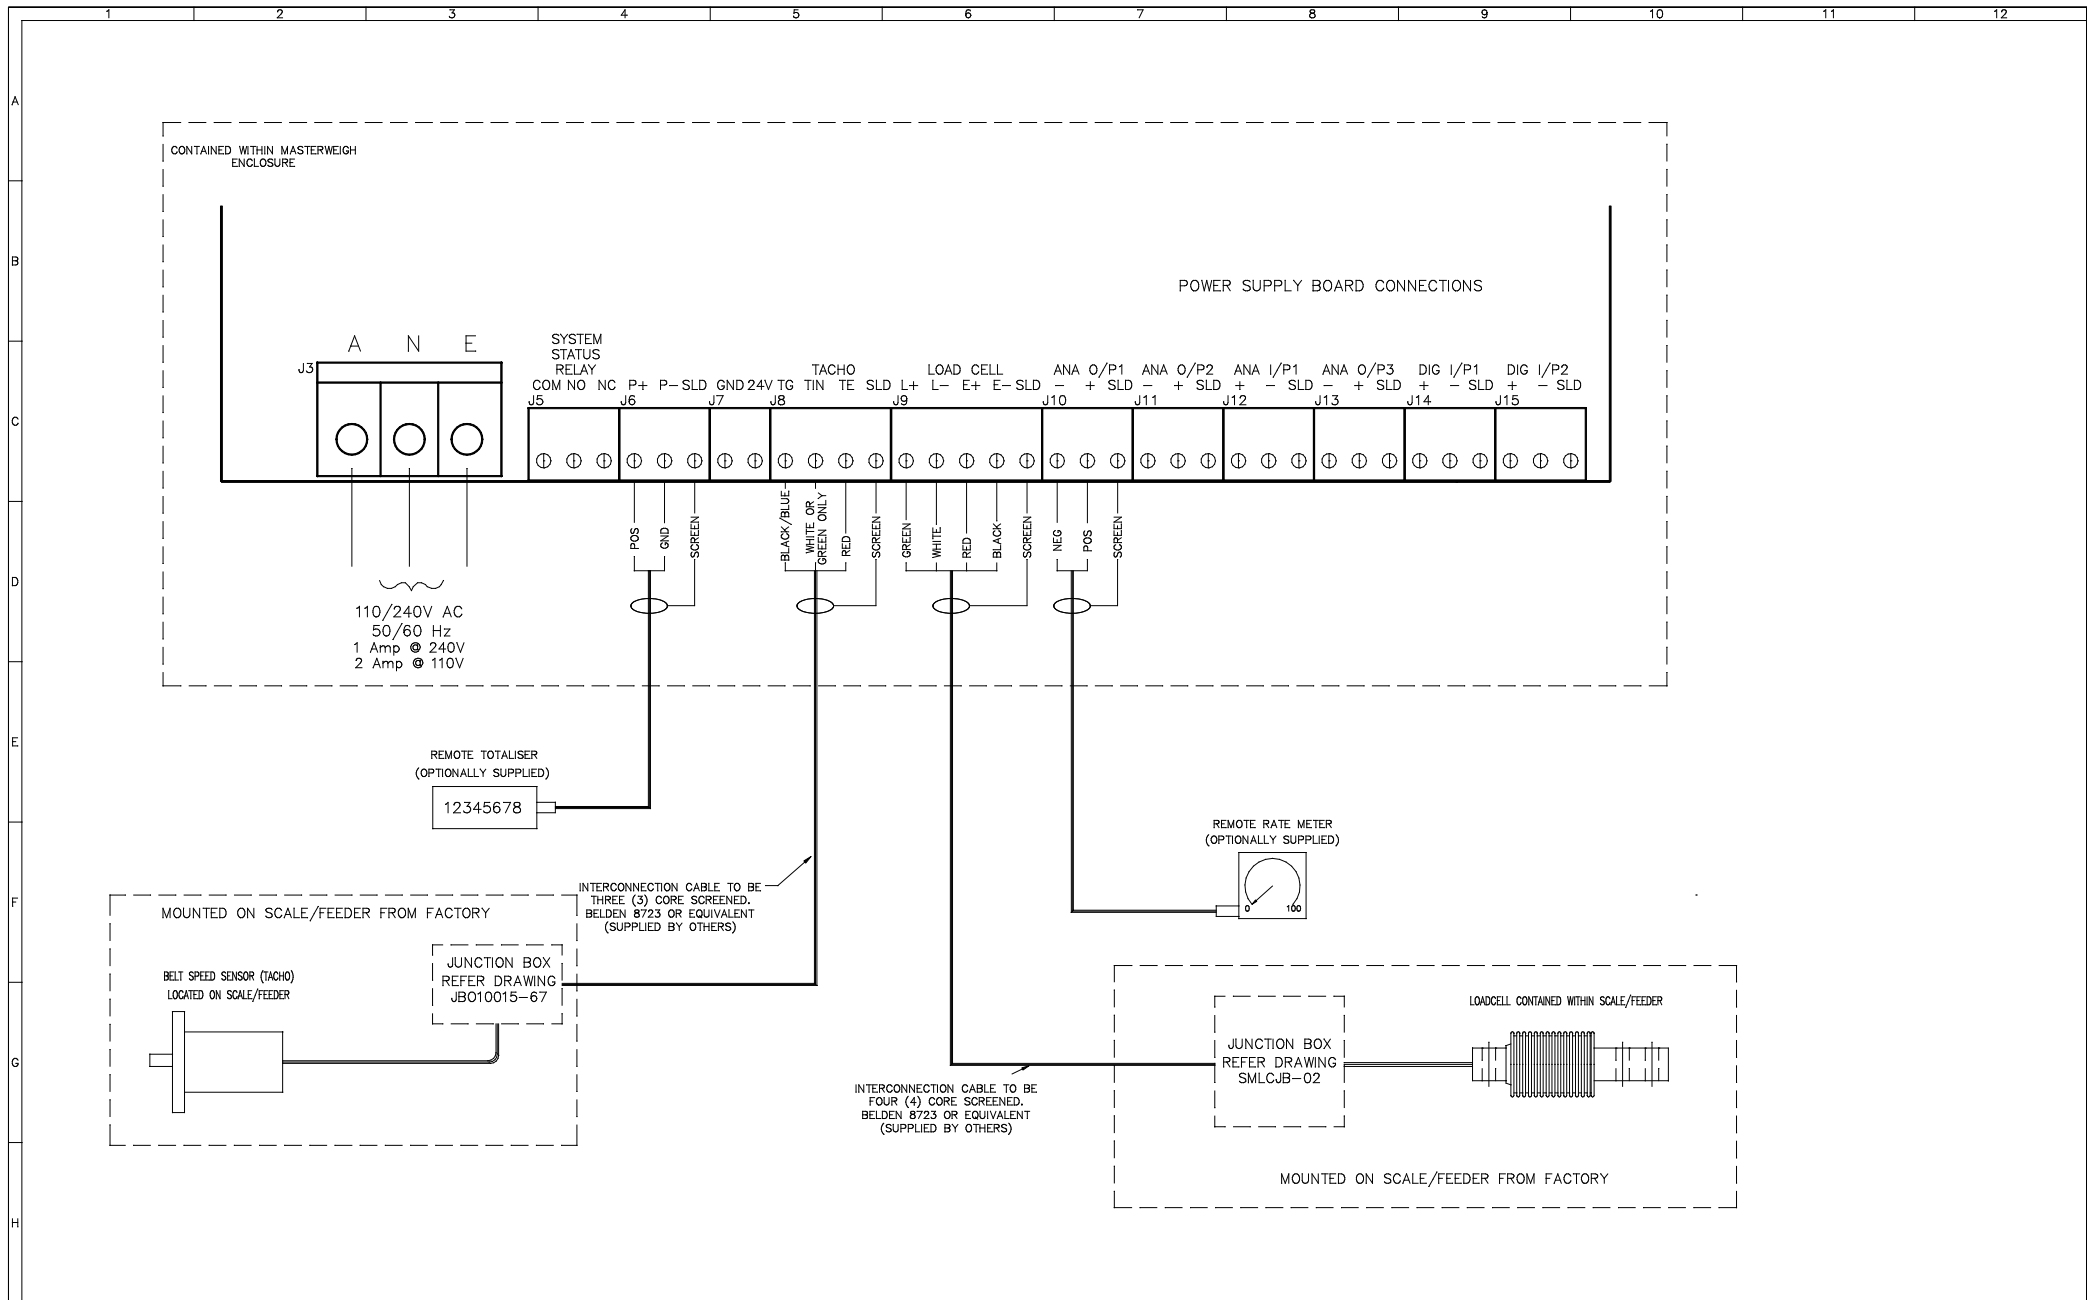

REVISIONS A: 16/08/2011 ORIGINAL ISSUE B: 10/02/15 ADJUSTED REFERENCE DRAWINGS -JR	CERTIFICATION WEB-TECH AUSTRALIA PTY. LTD. CUSTOMER No.: CUSTOMER ORDER No.: <input type="checkbox"/> RETURN OF APPROVAL NOT REQUIRED <input type="checkbox"/> RETURN APPROVAL FOR RECORD <input type="checkbox"/> BEFORE MANUFACTURING PROCEEDS WEB-TECH AUSTRALIA PTY. LTD. CERTIFIED BY: DWE CUSTOMER APPROVAL DWE //		UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN		DRAWN M. WILDE	 WEB-TECH AUSTRALIA PTY. LTD. ACN: 010 784 431 11 ELECTRONICS STREET EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4008 EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone +61-7-3841 2844 Fax +61-7-3841 0000	SIZE A1	DRAWING No. NUMBER WTMW6			SHT. 01	REV. B	
	MACHINING ± 0.1 ± 0.2 ± 0.3 ± 0.5 ± 1.0		APPROVED		DATE APP'D		TITLE ELECTRICAL CONNECTION DIAGRAM FOR MASTERWEIGH 6			CONTRACT			
	FABRICATION ± 0.5 ± 0.5 ± 0.5 ± 1.0 ± 2.0		SCALE		N.T.S.		CAD FILE WTMW7			PROJECT			
	ASSEMBLY ± 0.5 ± 0.5 ± 0.5 ± 1.0 ± 2.0		DO NOT SCALE IF IN DOUBT ASK		ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED			This drawing and any information or descriptive matter set out herein are the confidential and copyright property of WEB-TECH AUSTRALIA PTY. LTD. (B) and must not be disclosed, copied, copied or used for manufacturing / tendering or for any other purpose without their written permission.					

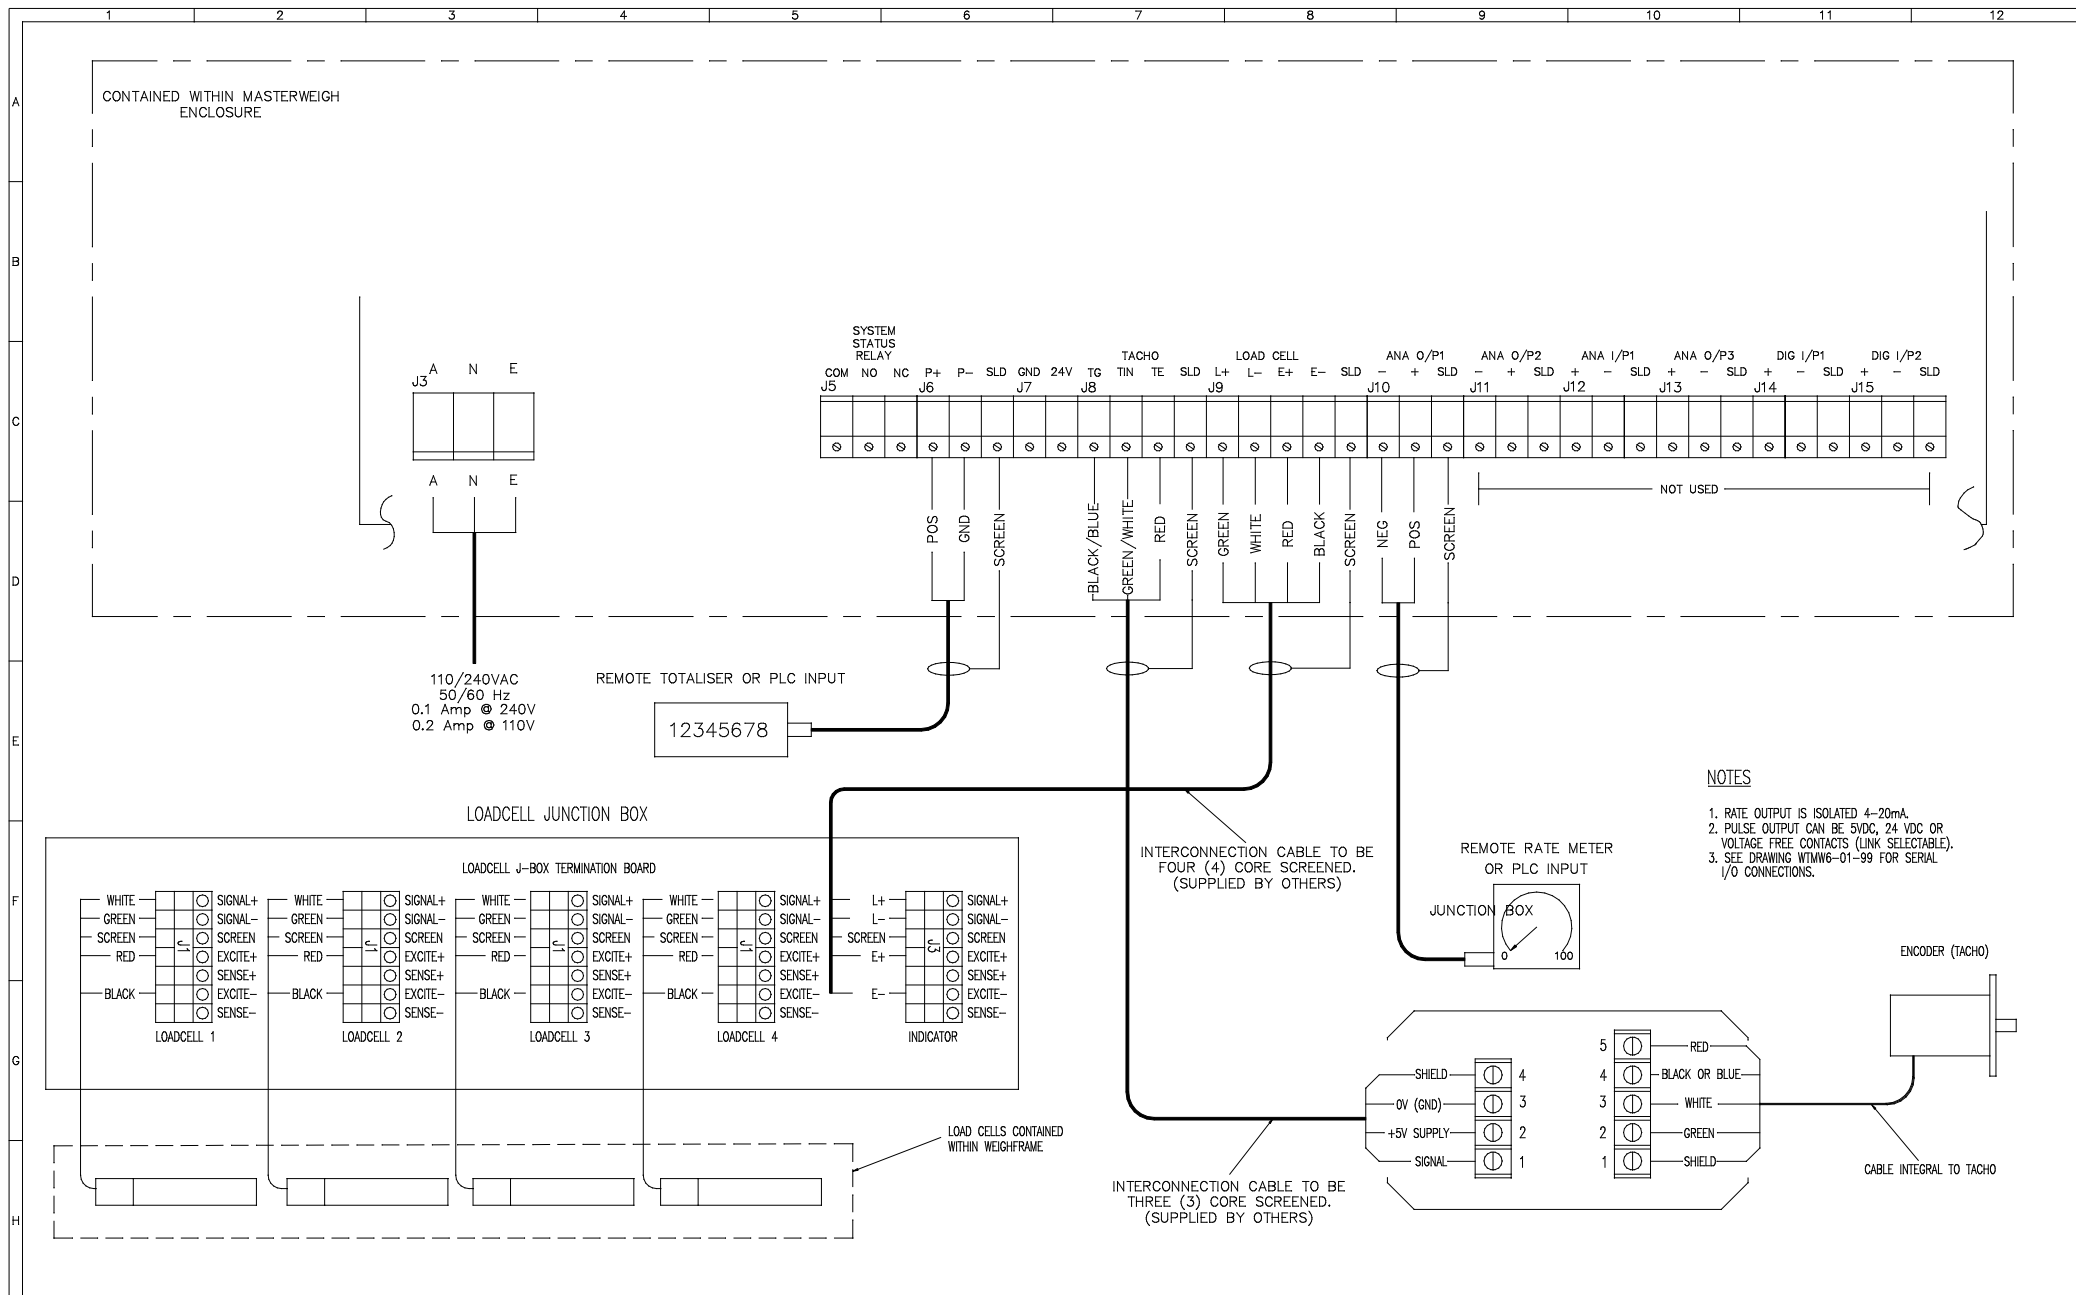


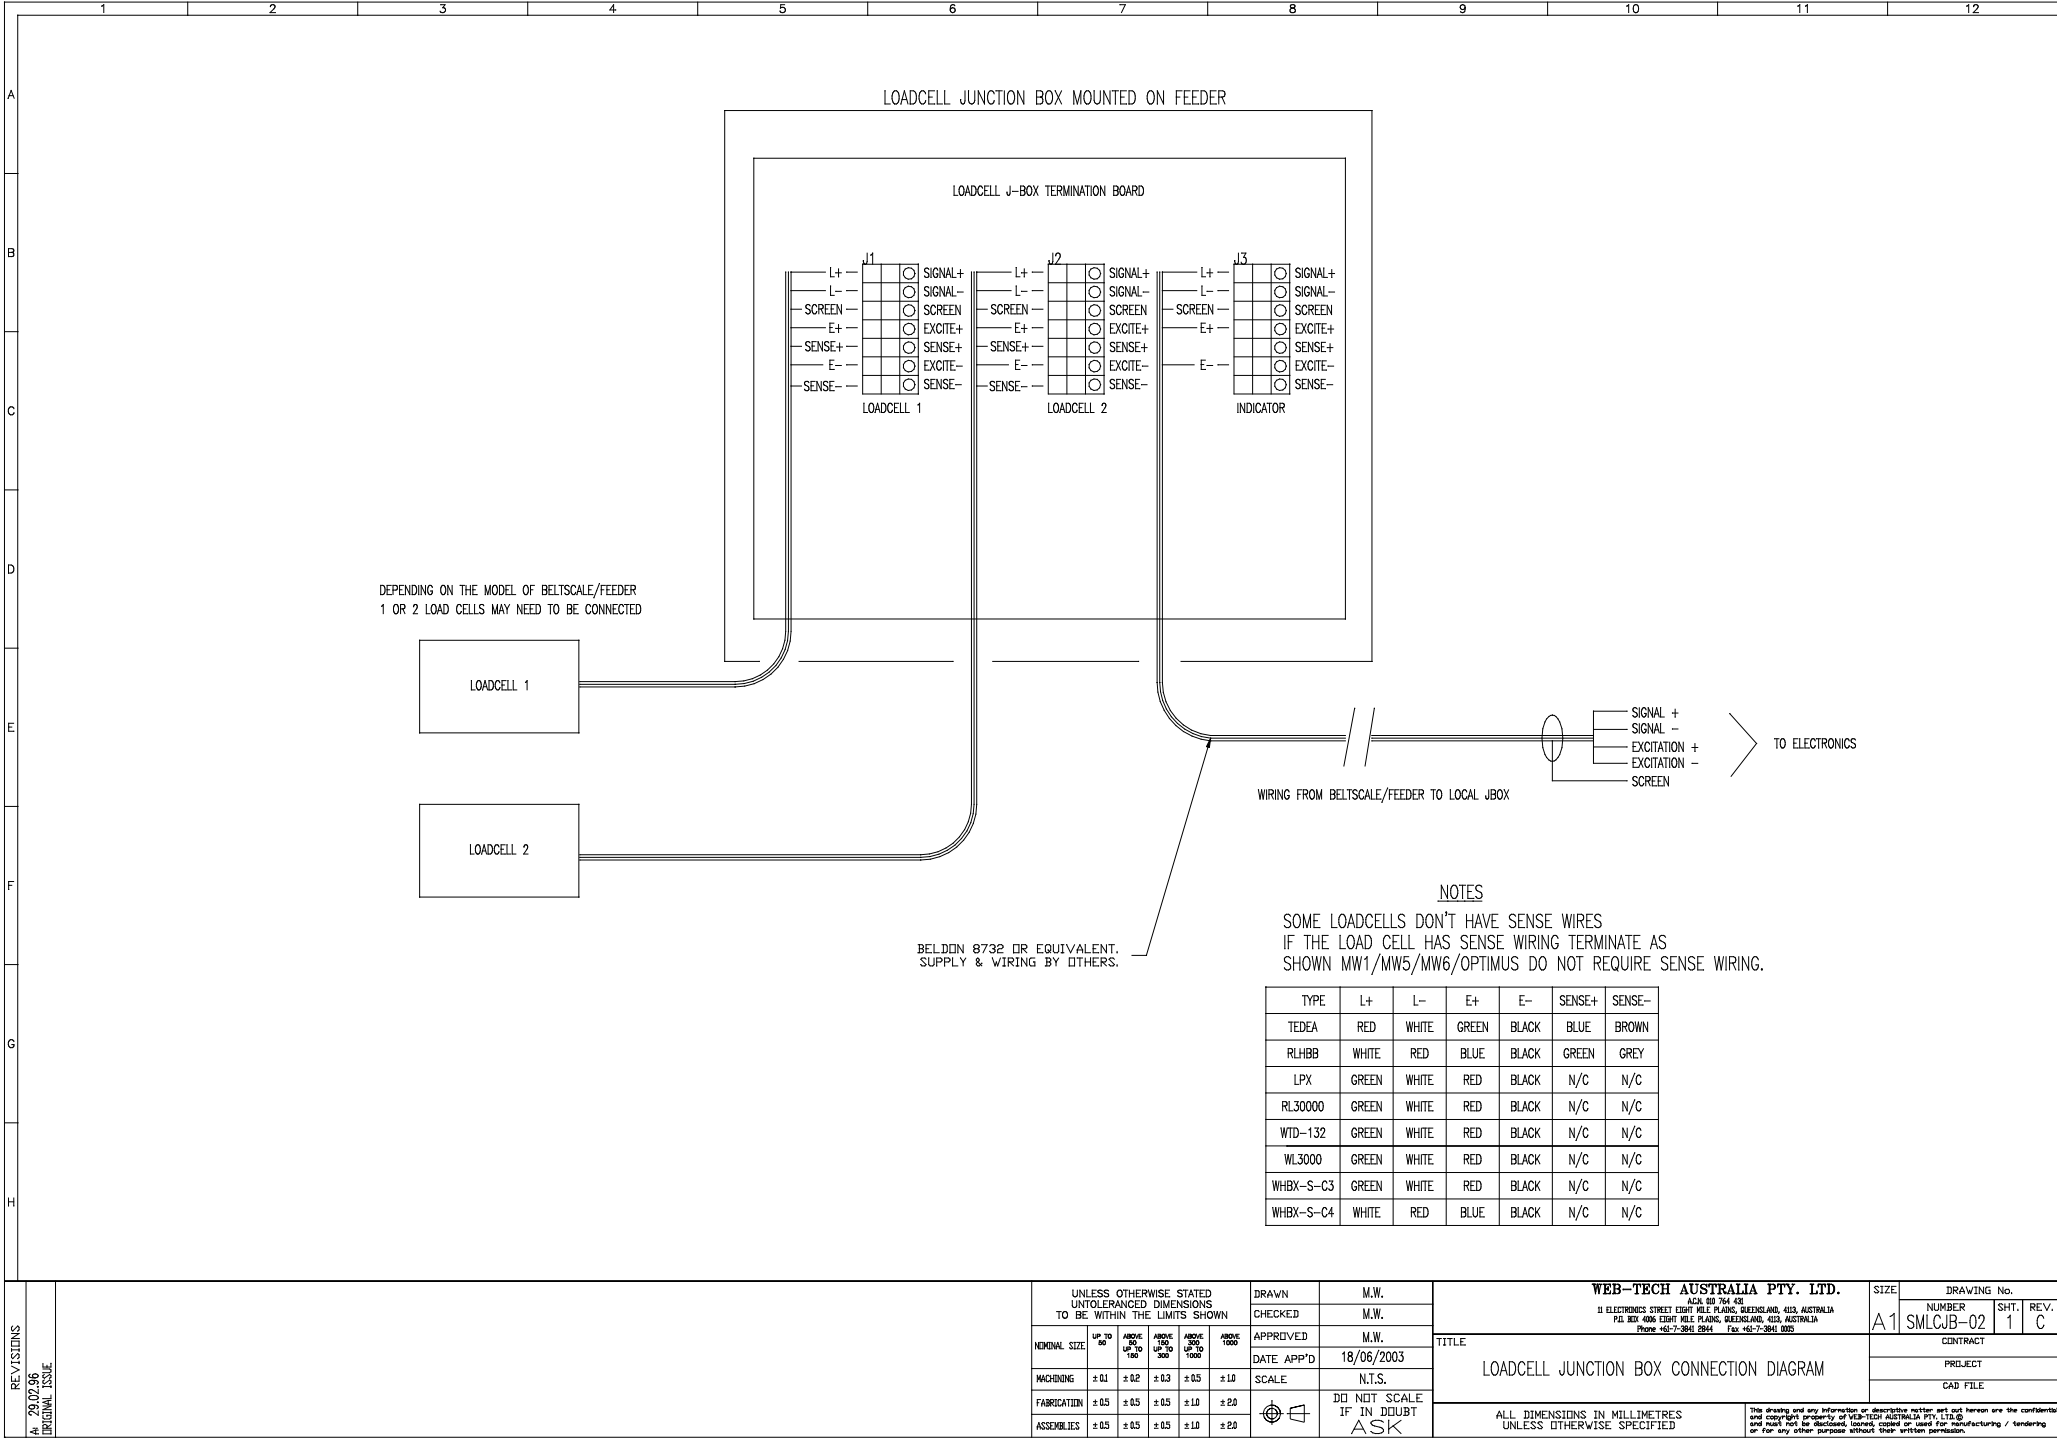
REVISIONS A- 6/3/12 ORIGINAL ISSUE	DRAWN	L.H.	WEB-TECH AUSTRALIA PTY. LTD. A/CAL 010 784 431 11 ELECTRONICS STREET EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 1008 EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone +61-7-3841 2844 Fax +61-7-3841 0005	SIZE	DRAWING No.	
	CHECKED			A1	WTMW6-01-15	REV.
	APPROVED					NUMBER
	DATE APP'D					CUSTOMER
	SCALE	N.T.S				PROJECT
	DO NOT SCALE IF IN DOUBT	ASK	TITLE ELECTRICAL CONNECTION DIAGRAM FOR FOUR LOAD CELL BELT SCALES INCORP. MASTERWEIGH 6 & TACHO (ENCODER).			GAD FILE
	ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED		This drawing and any information or descriptive matter and not herein are the confidential and proprietary property of WEB-TECH AUSTRALIA PTY. LTD. (W) and must not be disclosed, copied, altered or used for manufacturing / tendering or for any other purpose without their written permission.			

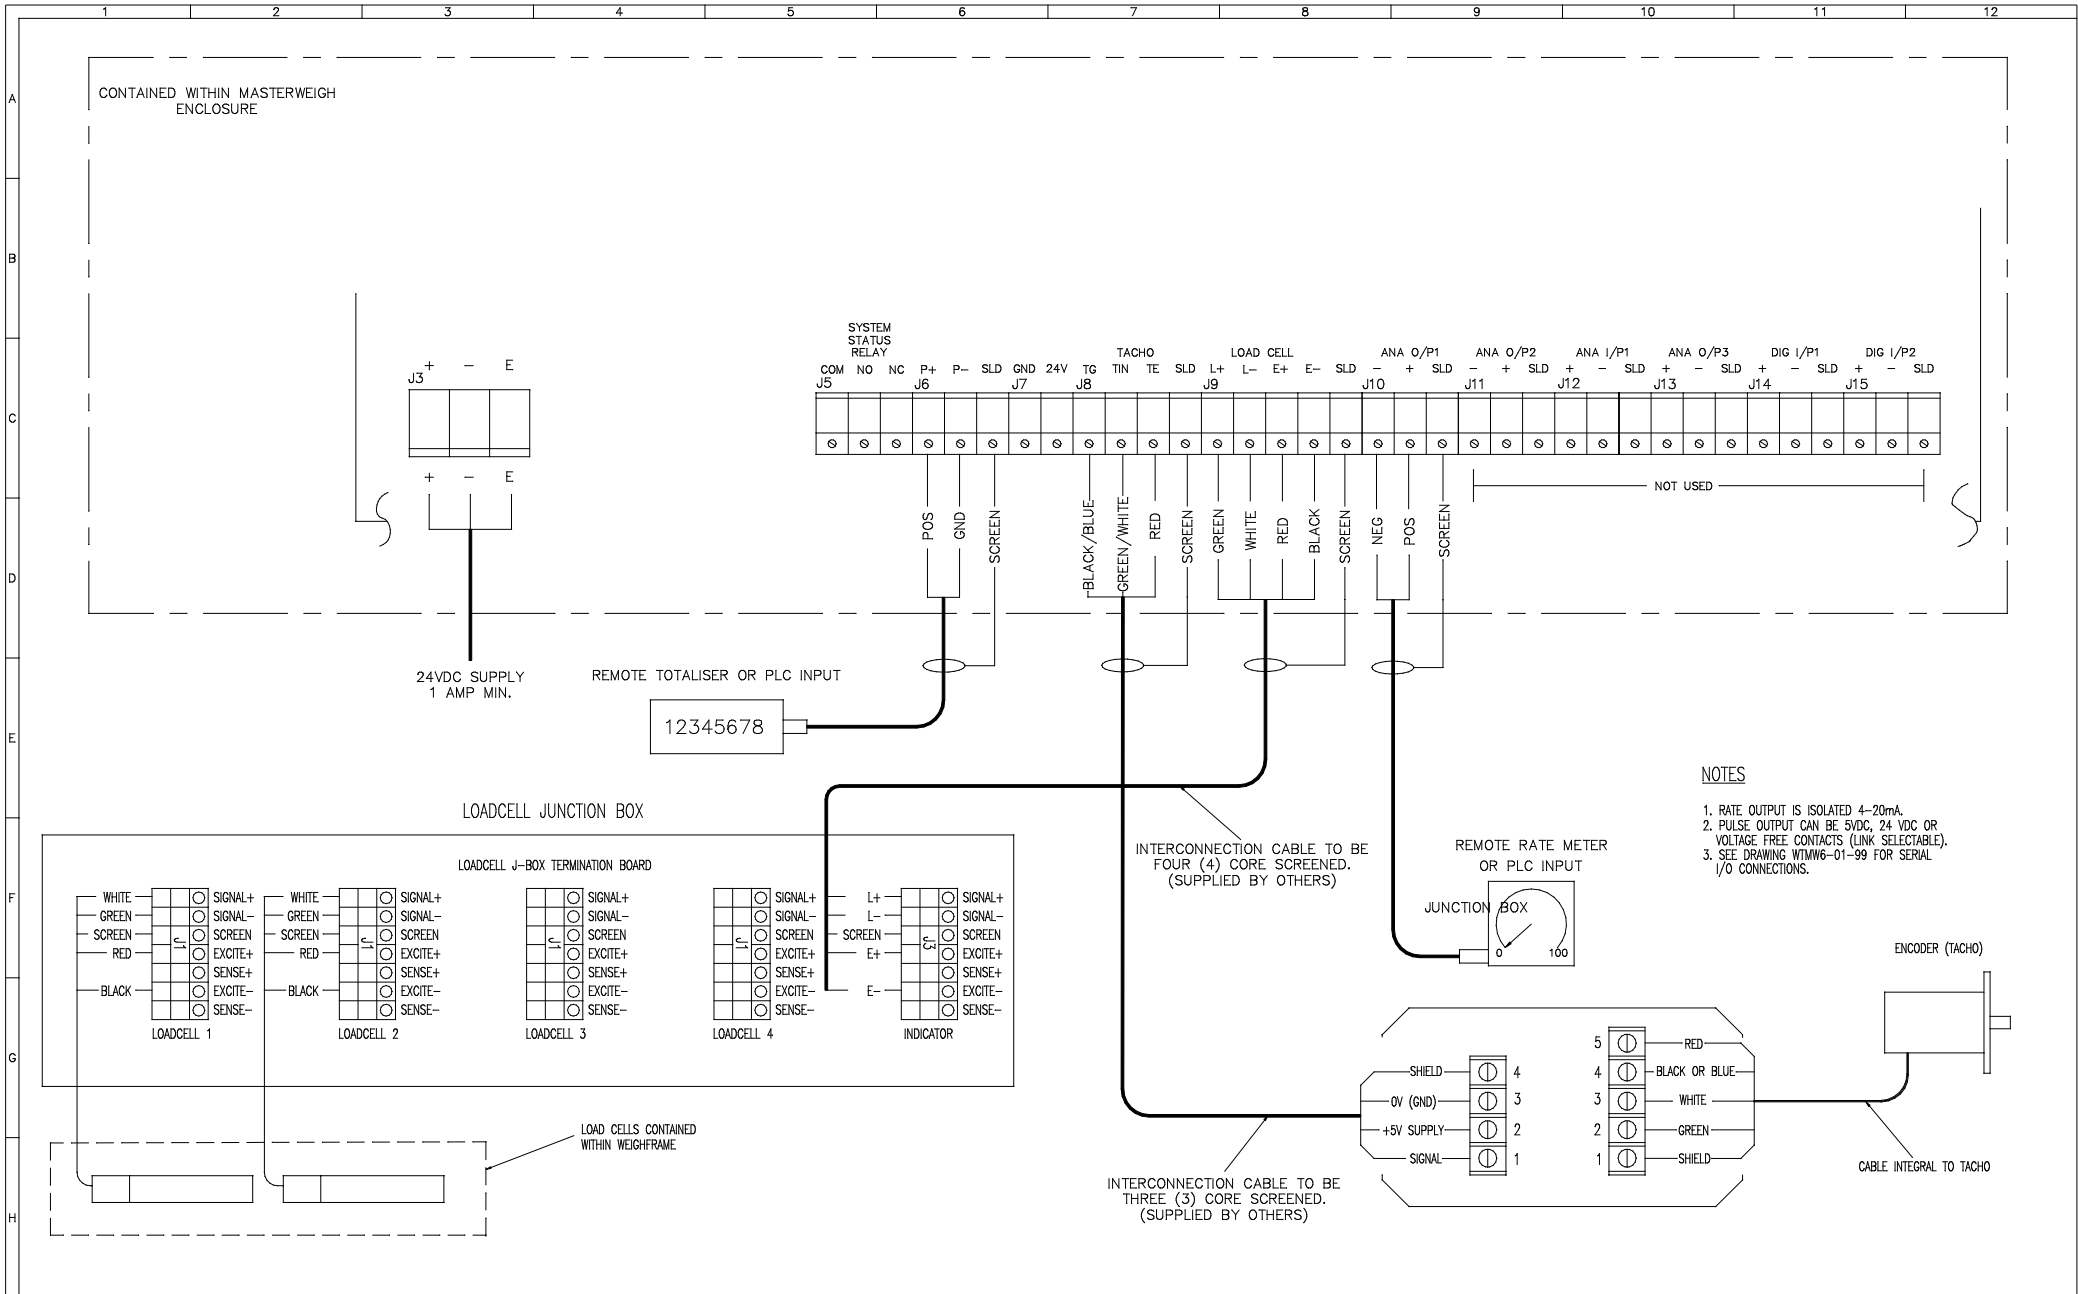


NOTES


1. RATE OUTPUT IS ISOLATED 4-20mA.
2. PULSE OUTPUT CAN BE 5VDC, 24 VDC OR VOLTAGE FREE CONTACTS (LINK SELECTABLE).
3. SEE DRAWING WTMW6-01-99 FOR SERIAL I/O CONNECTIONS.

REVISIONS A: 15/3/12 ORIGINAL ISSUE	DRAWN	L.H.	 WEB-TECH AUSTRALIA PTY. LTD. ACN 910 764 031 11 ELECTRONICS STREET, 1907 MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4006, EDGE HILL MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone +61-7-3841 2844 Fax +61-7-3841 0005	SIZE	DRAWING No.	
	CHECKED			A1	WTMW6-01-12	REV. A
	APPROVED					CUSTOMER
	DATE APP'D					PROJECT
	SCALE	NTS				CAD FILE
		DO NOT SCALE IF IN DOUBT ASK			ELECTRICAL CONNECTION DIAGRAM FOR DUAL LOAD CELL BELT SCALES INCORP. MASTERWEIGH 6 (24VDC) & TACHO SENSOR.	
			ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED			
			This drawing and any information or descriptive matter set out herein are the confidential and copyright property of WEB-TECH AUSTRALIA PTY. LTD. ® and must not be disclosed, copied or used for manufacturing / tendering or for any other purpose without their written permission.			



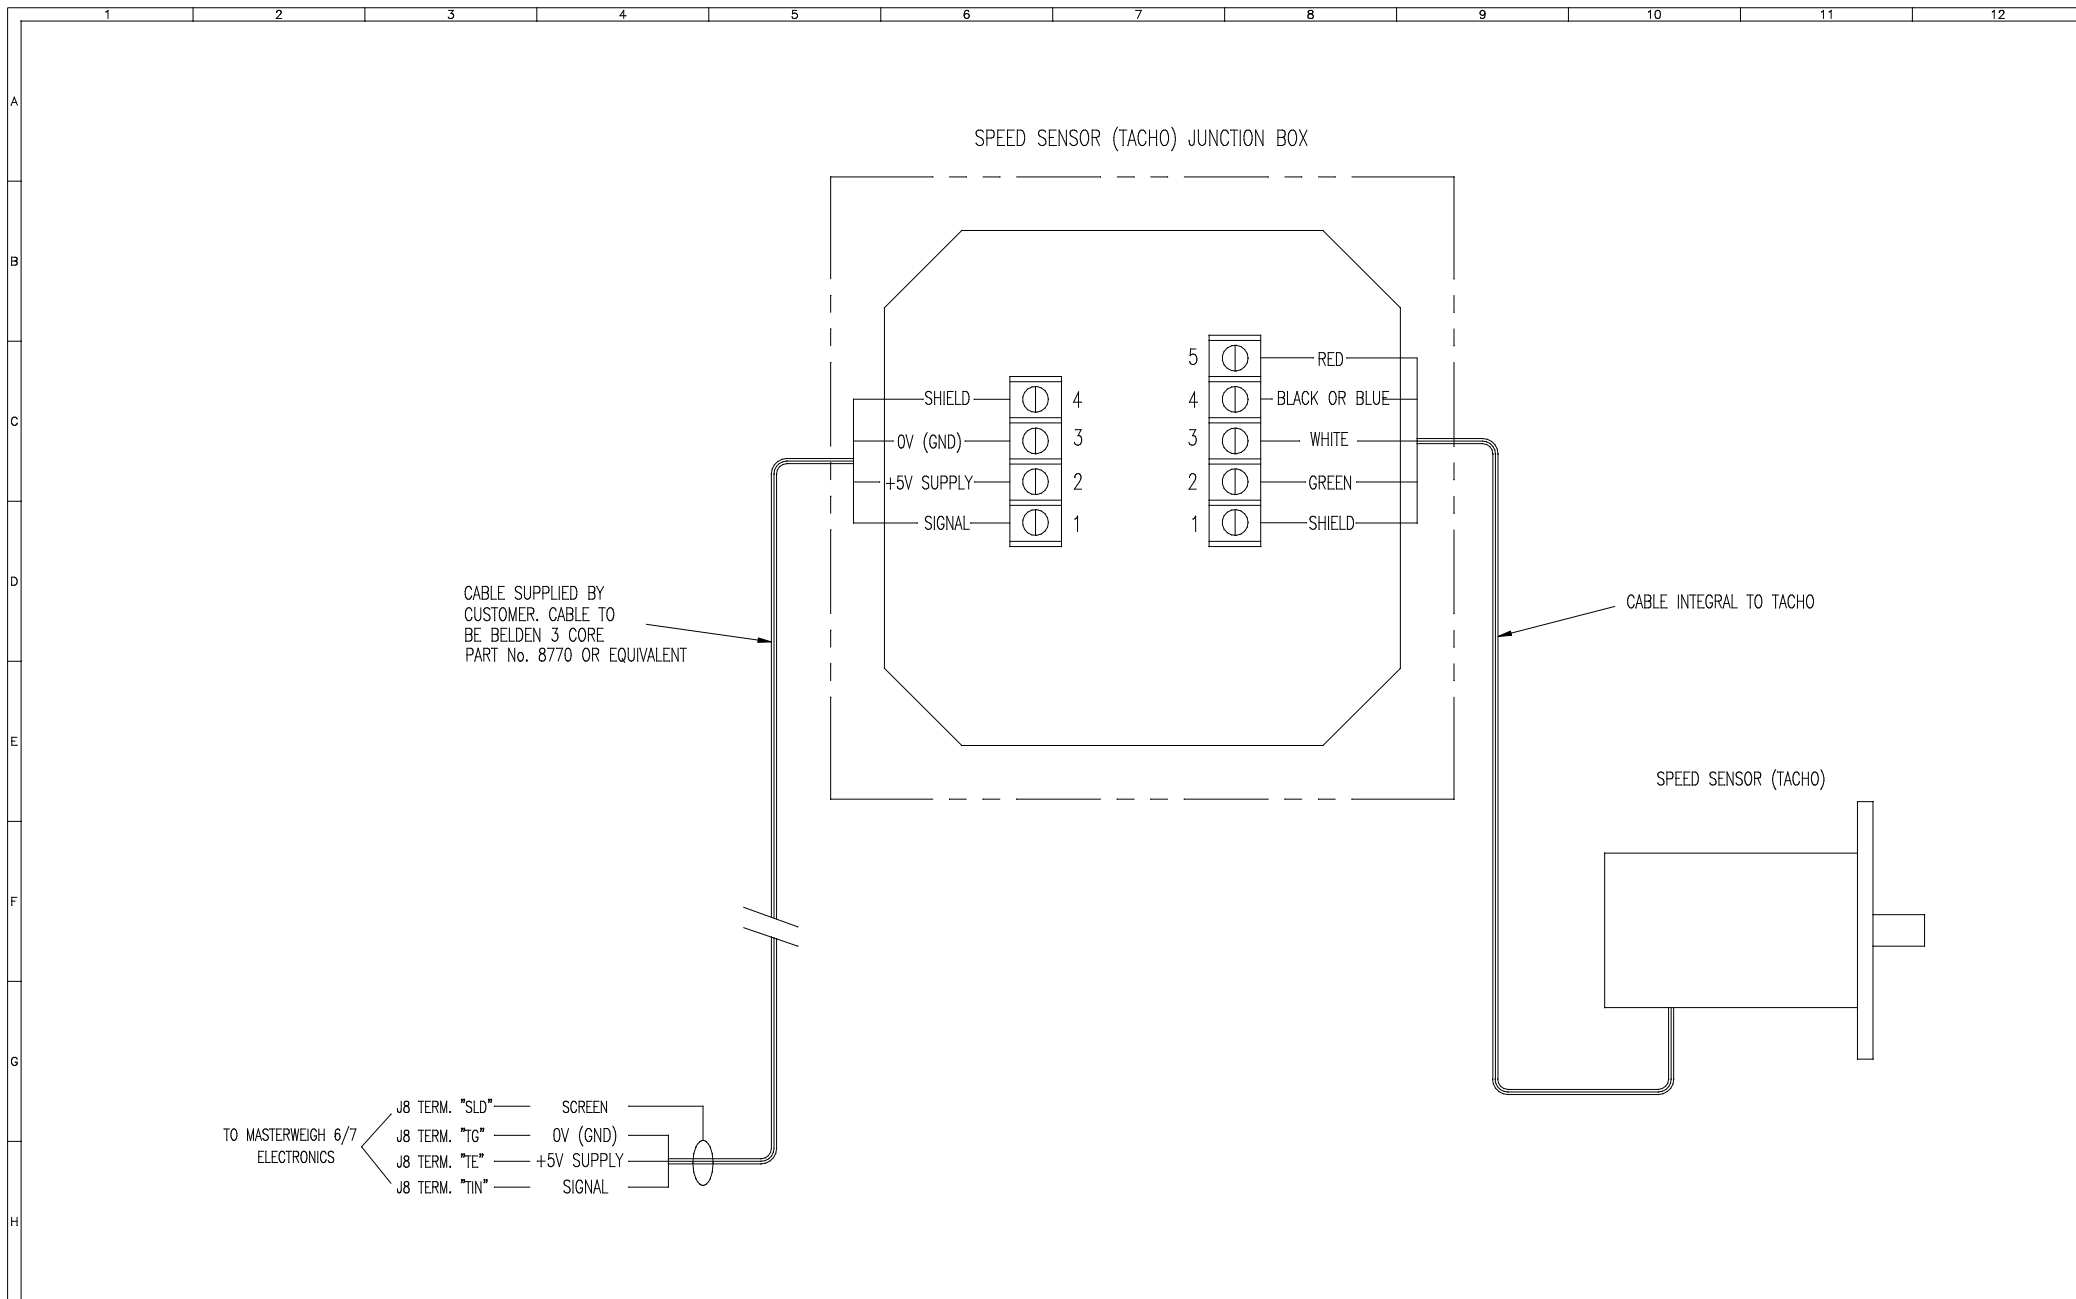


REVISIONS	DRAWN		L.HARTLEY		WEB-TECH AUSTRALIA PTY. LTD.		SIZE	DRAWING No.	
	CHECKED		L.HARTLEY		11 ELECTRONICS STREET, 8087 MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4008, 8087 MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone +61-7-3841 2844 Fax +61-7-3841 0005			NUMBER	REV.
	APPROVED		L.HARTLEY		TITLE			CUSTOMER	
	DATE APP'D		26/10/98		TACHO (S/S) JUNCTION BOX WIRING (WITHOUT MULTIPLICATION) MASTERWEIGH 6/7 INTEGRATOR			PROJECT	
	SCALE		N.T.S.		DO NOT SCALE IF IN DOUBT ASK			CAD FILE JB010014	
	A: 26/10/98 ORIGINAL ISSUE				ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED			This drawing and any information or descriptive matter set out herein are the confidential and copyright property of WEB-TECH AUSTRALIA PTY. LTD. (Pty. Ltd.) and must not be disclosed, copied or used for manufacturing / tendering or for any other purpose without their written permission.	

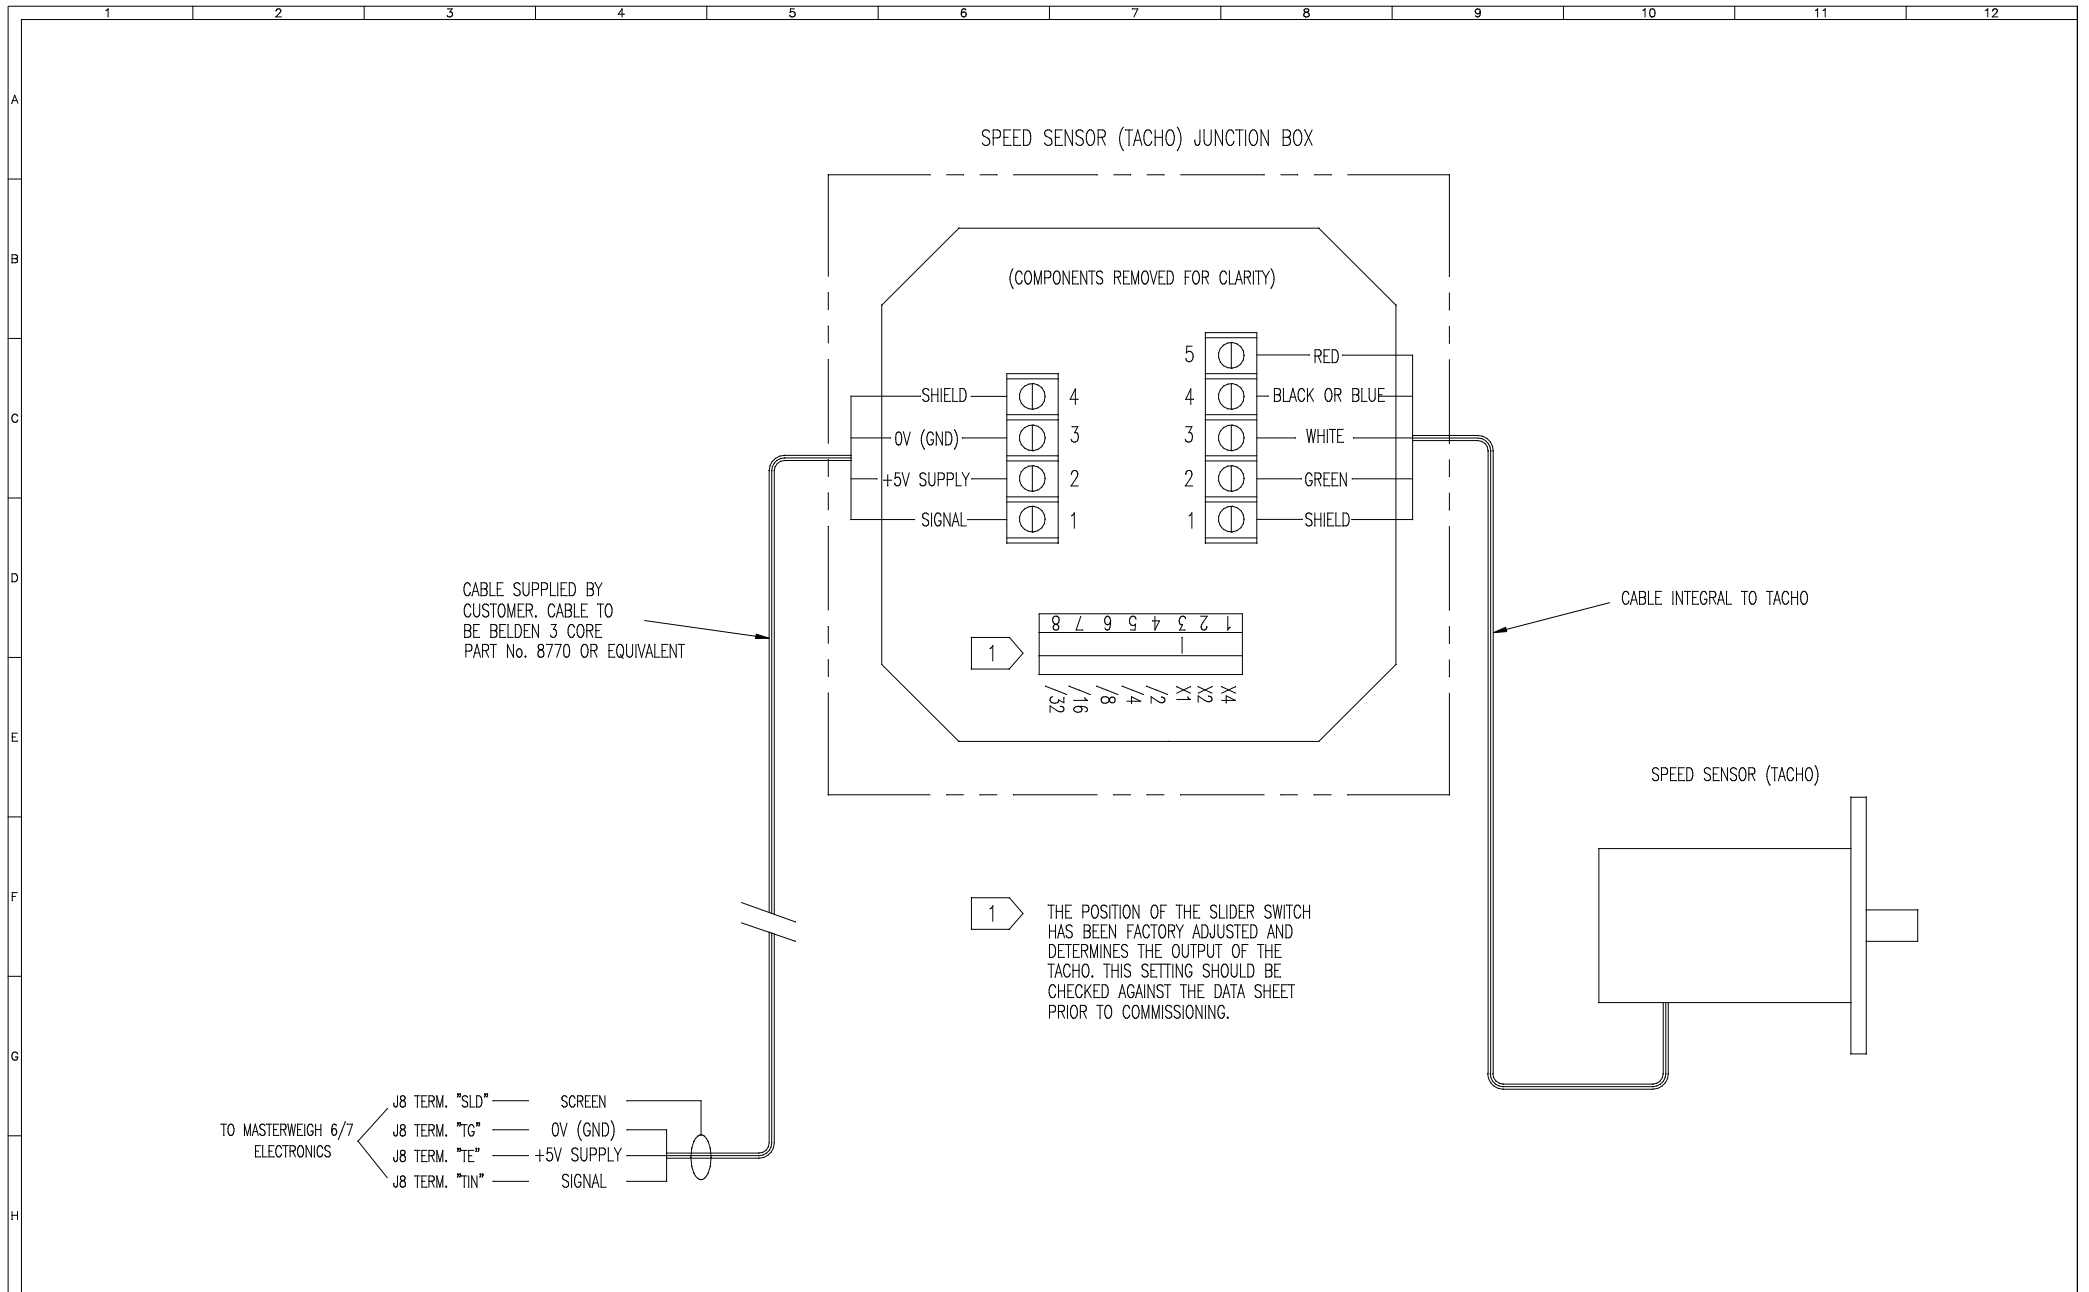


REVISIONS A. 26/10/98 ORIGINAL ISSUE	DRAWN L.HARTLEY		 WEB-TECH AUSTRALIA PTY. LTD. AGL 010 784 431 11 ELECTRONICS STREET EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4008 EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone 481-77-3847 2844 Fax 481-77-3847 0030	SIZE	DRAWING No.	
	CHECKED L.HARTLEY			NUMBER		REV.
	APPROVED L.HARTLEY			A1		JB010015-67 A
	DATE APP'D 26/10/98			CUSTOMER		
	SCALE N.T.S.			PROJECT		
 DO NOT SCALE IF IN DOUBT ASK		TITLE		CAD FILE JB010015-67		
		TACHO (S/S) JUNCTION BOX WIRING (WITH MULTIPLICATION) MASTERWEIGH 6/7 INTEGRATOR				
		ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED		This drawing and any information or descriptive matter and not herein are the confidential and copyright property of WEB-TECH AUSTRALIA PTY. LTD. and must not be disclosed, copied or used for manufacturing / tendering or for any other purpose without their written permission.		


WTS4S2 – INSTALLATION AND OPERATION MANUAL

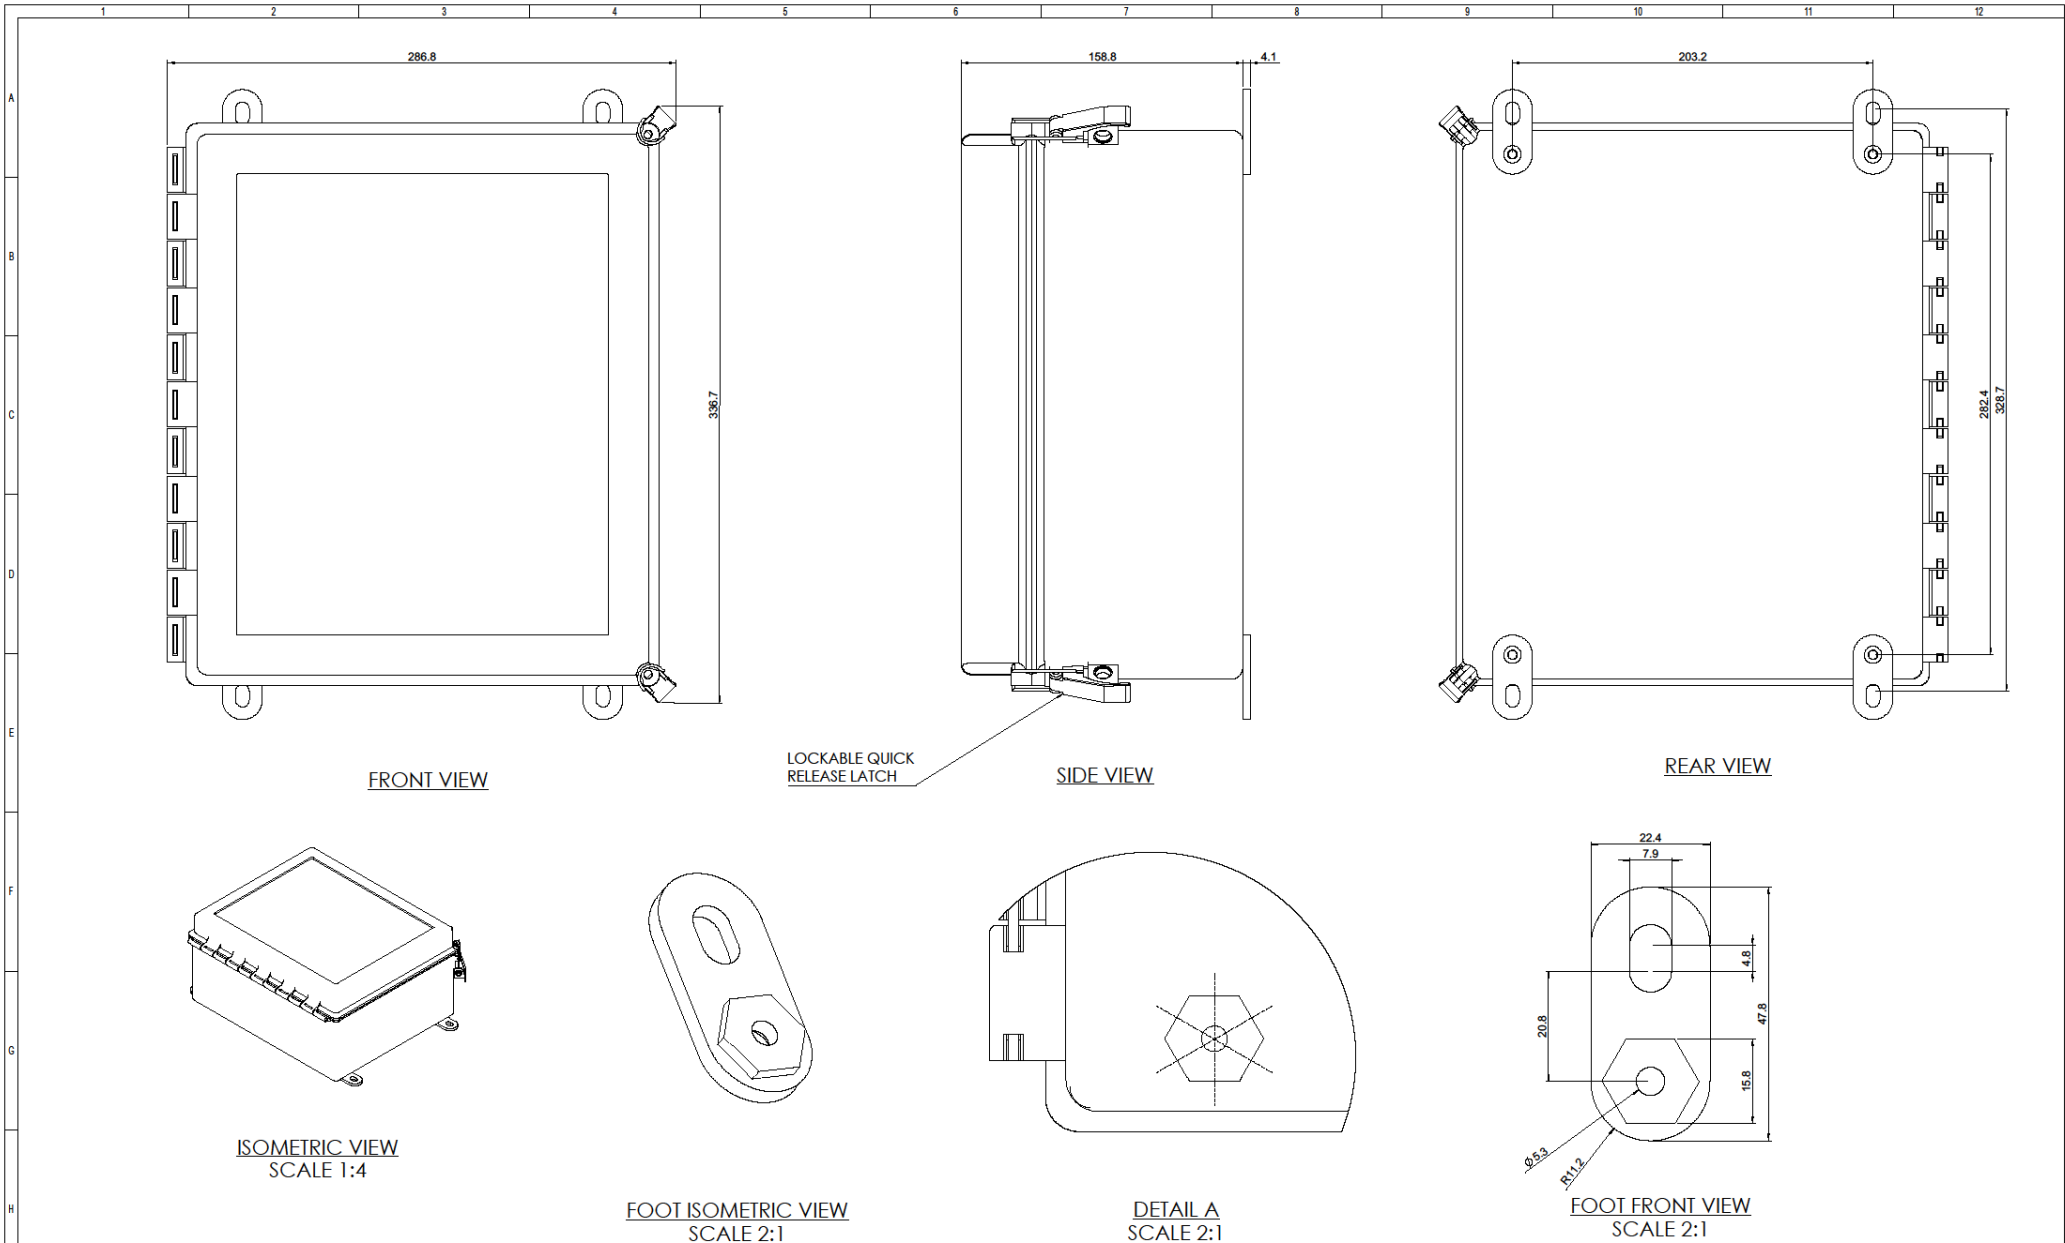


Appendix C – Electrical Enclosure GAs




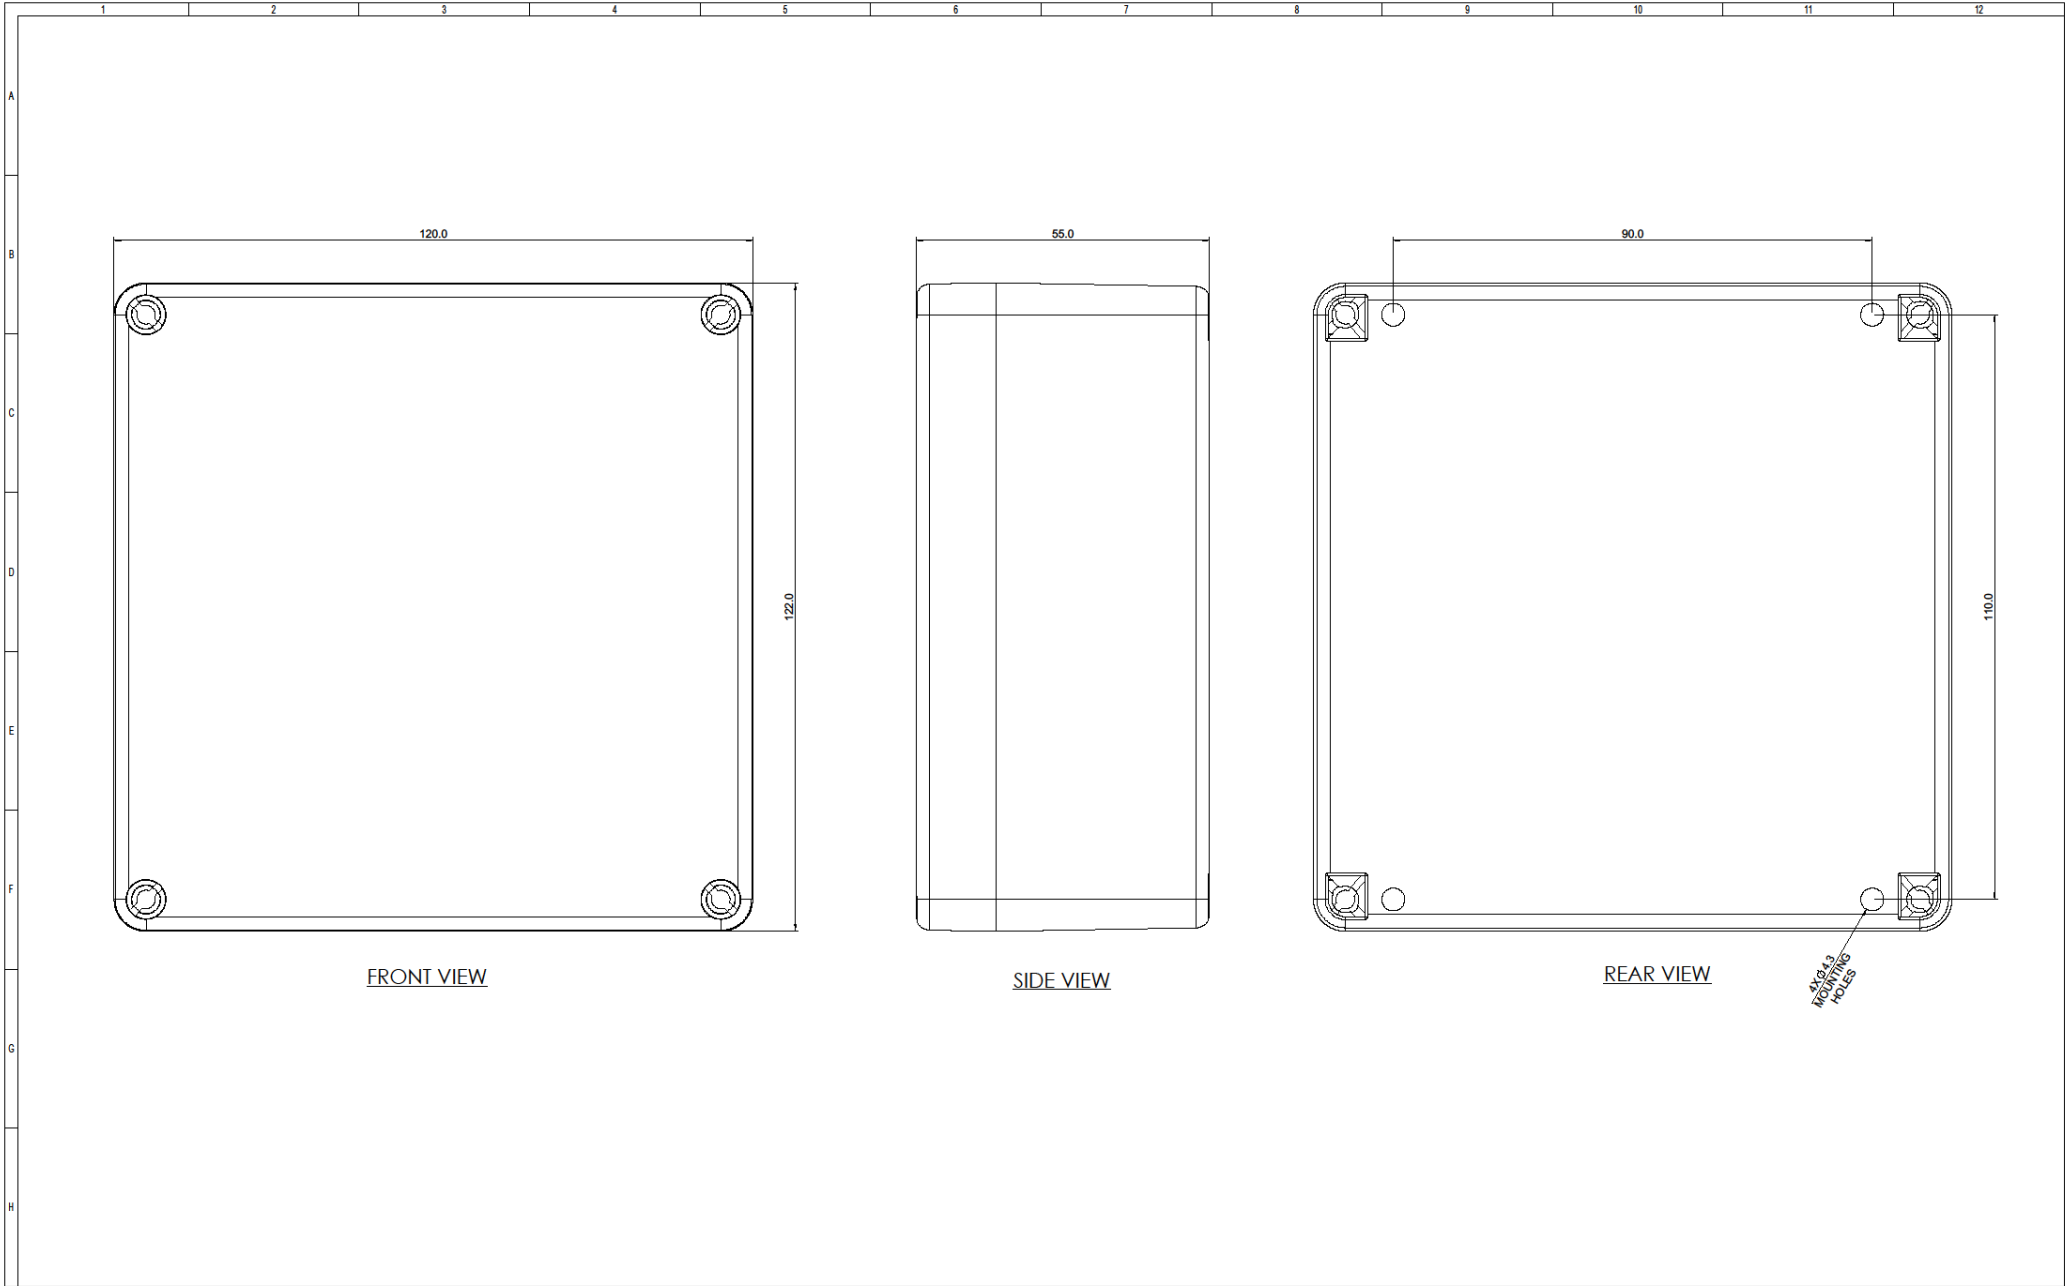

IP66, IEC 60529

REVISIONS A - 24/07/14 B. ROBINSON ORIGINAL ISSUE	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN					DRAWN	B. ROBINSON	 WEB-TECH AUSTRALIA PTY. LTD. A/CN 810 TM 401 11 ELECTRONICS STREET, SOUTH WICKHAM, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4088, SOUTH WICKHAM, QUEENSLAND, 4113, AUSTRALIA Phone 4617 3867 2844 Fax 4617 3867 1886	SIZE	DRAWING No.	
	APPROVED					CHECKED			A1	NUMBER	REV.
	DATE APPD					SCALE	1:2			MW651	A
	DO NOT SCALE IF IN DOUBT ASK					TITLE			CUSTOMER		
						MW6 ENCLOSURE TYPICAL DIMENSIONS IP66, IEC 60529			PROJECT		
ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED						C/D FILE MW61a - Enclosure DR					
						This drawing and any information or description made on it are the property of the contributor and are not to be reproduced, stored, copied or used in any form without the written permission of Web-Tech Australia Pty. Ltd. It is the policy of Web-Tech Australia Pty. Ltd. to ensure the proper control of all drawings.					

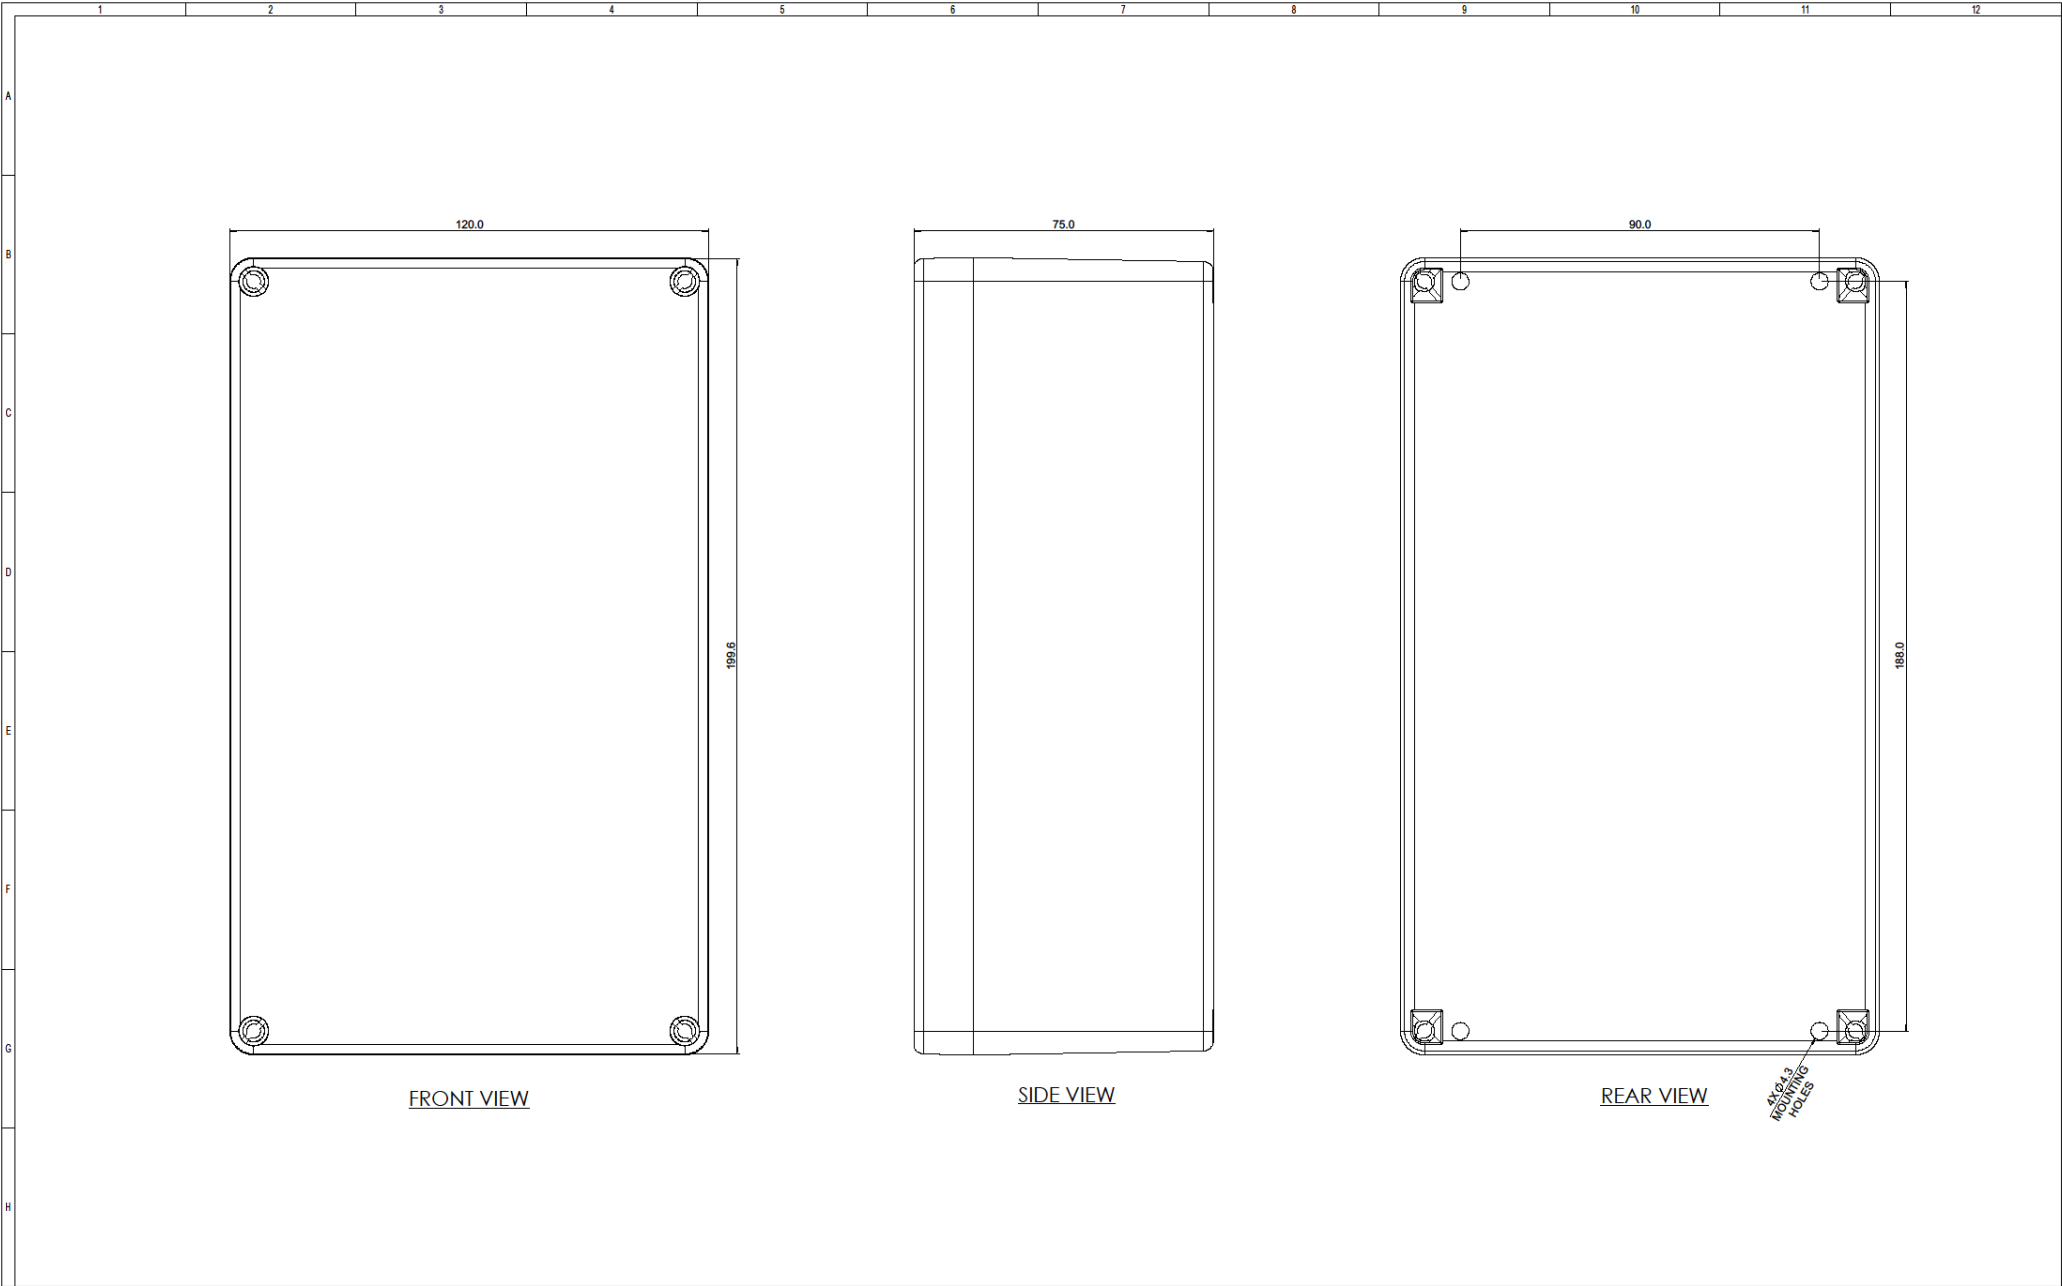


REVISIONS A: 07/07/14 B.ROBINSON ORIGINAL ISSUE	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN					DRAWN	B.ROBINSON	 <div>WEB-TECH AUSTRALIA PTY. LTD. A/CN 810 704 431 11 ELECTRONICS STREET, EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4088, EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone 4517 3360 2844 Fax 4517 3361 1885</div>	SIZE	A1	DRAWING No.	NUMBER	REV.
	NOMINAL SIZE	UP TO 16	16 TO 25	25 TO 50	50 TO 100	APPROVED			LG.LC.JB-03GA		A		
	MACHINING	± 0.1	± 0.2	± 0.3	± 0.5	± 1.0	DATE APP'D			CUSTOMER			
	FABRICATION	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0	SCALE	2:1		PROJECT			
	ASSEMBLIES	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0		DO NOT SCALE IF IN DOUBT ASK		C/D FILE LG.LC.JB-03GA			
ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED								<div>This drawing and any information it describes shall not be released or otherwise used without the written permission of Web-Tech Australia Pty. Ltd. and is not to be disclosed, stored, copied or used in any way without the written permission of Web-Tech Australia Pty. Ltd.</div>					






REVISIONS A1 - 07/07/16 B. ROBINSON ORIGINAL ISSUE	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN					DRAWN	B. ROBINSON	 WEB-TECH AUSTRALIA PTY. LTD. A/CN 810 704 431 11 ELECTRONICS STREET, EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA P.O. BOX 4088, EIGHT MILE PLAINS, QUEENSLAND, 4113, AUSTRALIA Phone: 4517 3360, 2844 Fax: 4517 3361, 1885	SIZE	DRAWING No.	
	NOMINAL SIZE	UP TO 16	MORE 16 TO 25	MORE 25 TO 50	MORE 50 TO 100	APPROVED			A1	NUMBER	REV.
	MACHINING	± 0.1	± 0.2	± 0.3	± 0.5	DATE APPD				LGLCJB-04GA	A
	FABRICATION	± 0.5	± 0.5	± 0.5	± 1.0	SCALE	1:1			CUSTOMER	
	ASSEMBLY	± 0.5	± 0.5	± 0.5	± 1.0	DO NOT SCALE IF IN DOUBT ASK				PROJECT	
4 LOAD CELL JUNCTION BOX GENERAL ARRANGEMENT								ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED			
								This drawing and any information it contains shall not be used for any other purpose without the written permission of Web-Tech Australia Pty. Ltd.			

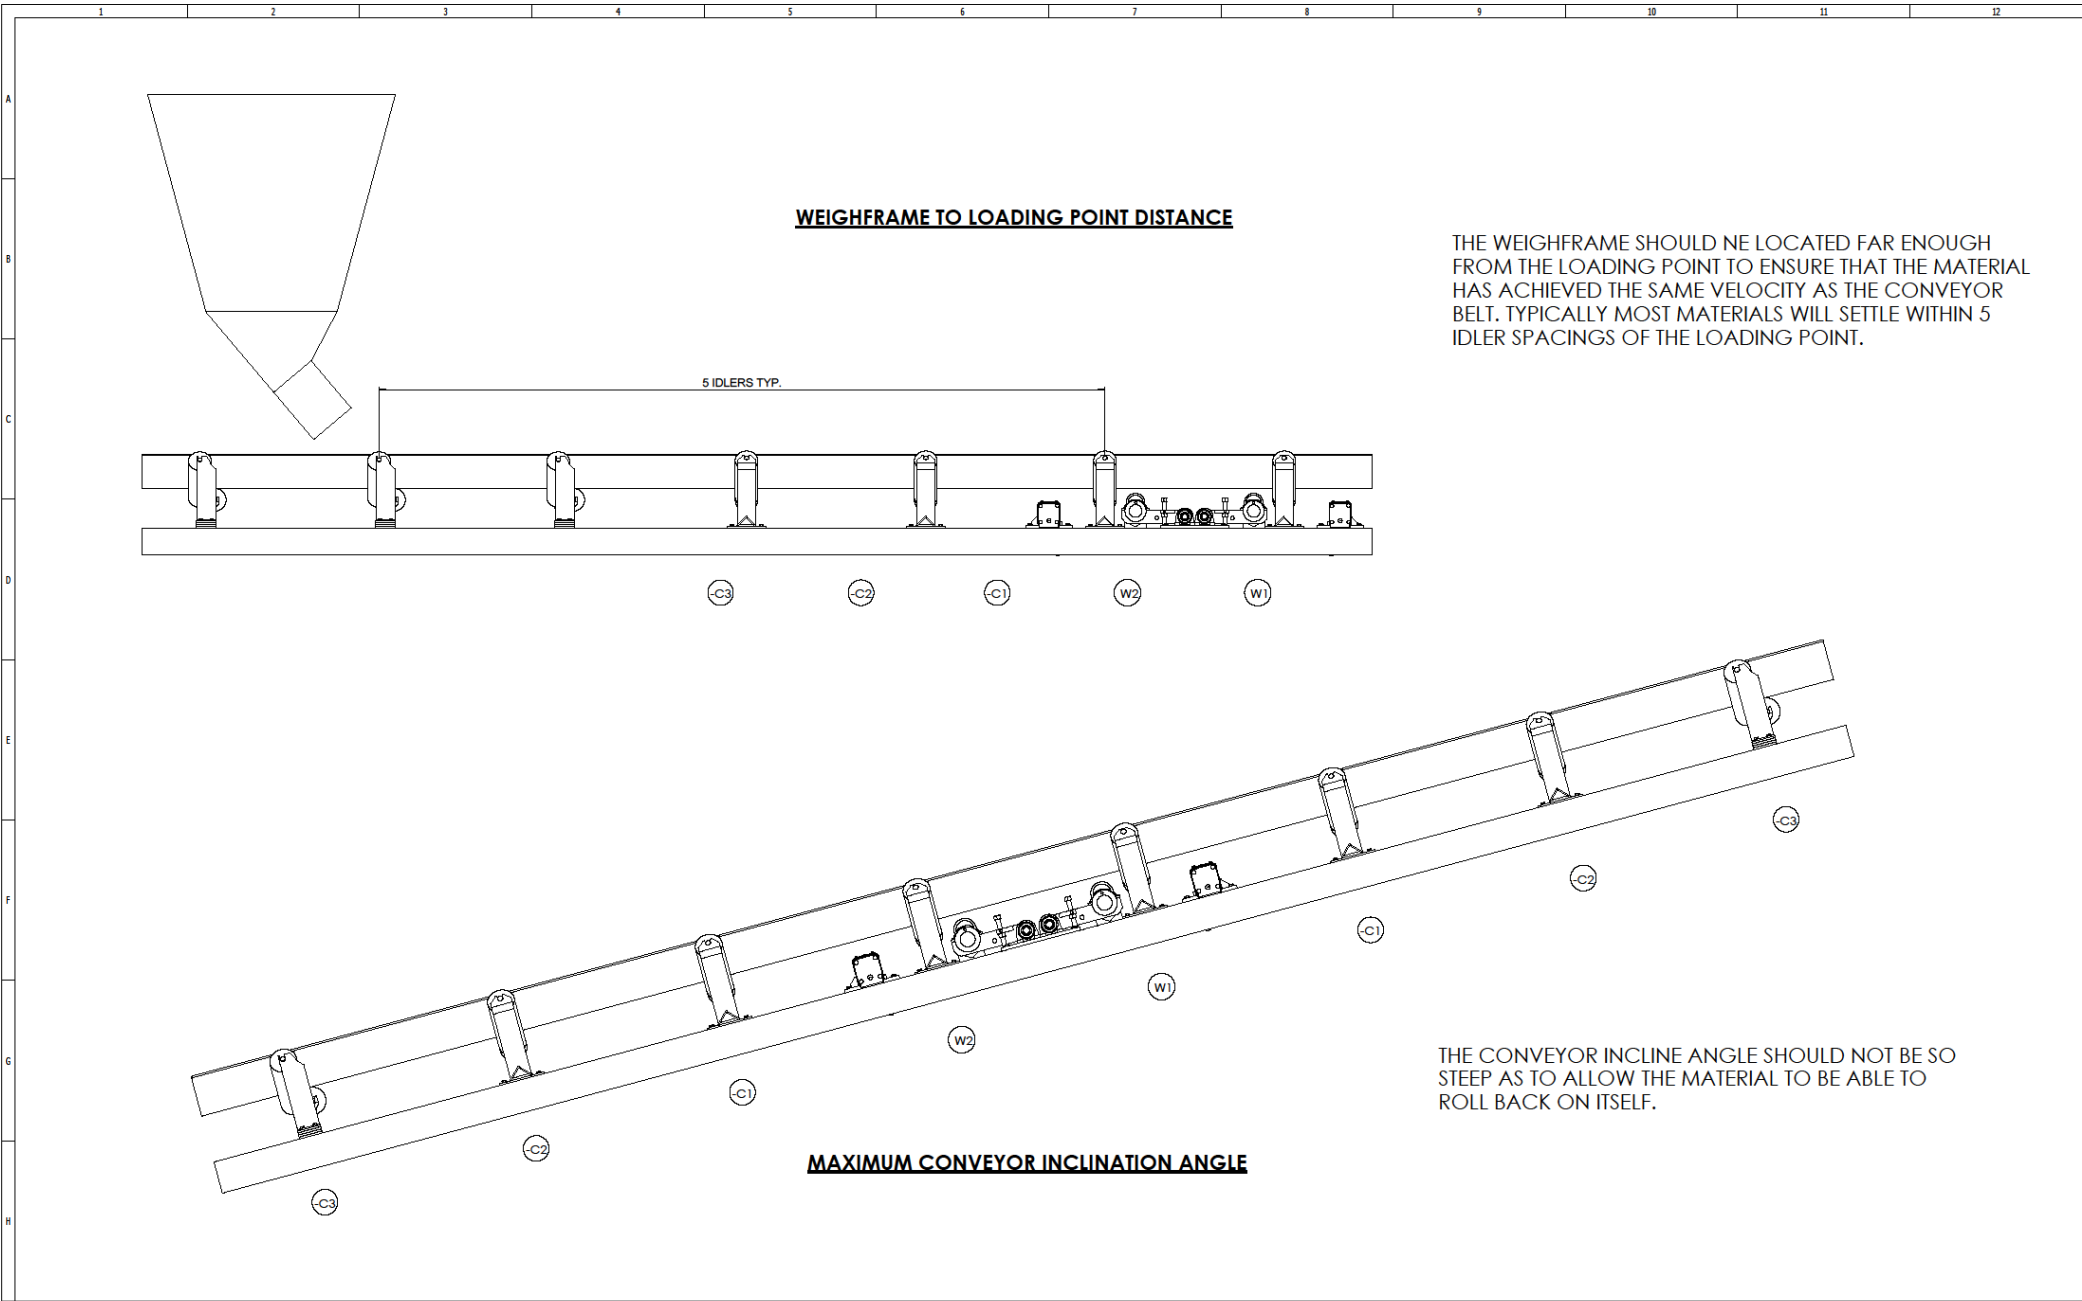

WTS4S2 – INSTALLATION AND OPERATION MANUAL


Appendix D – Belt Scale Positioning Guide

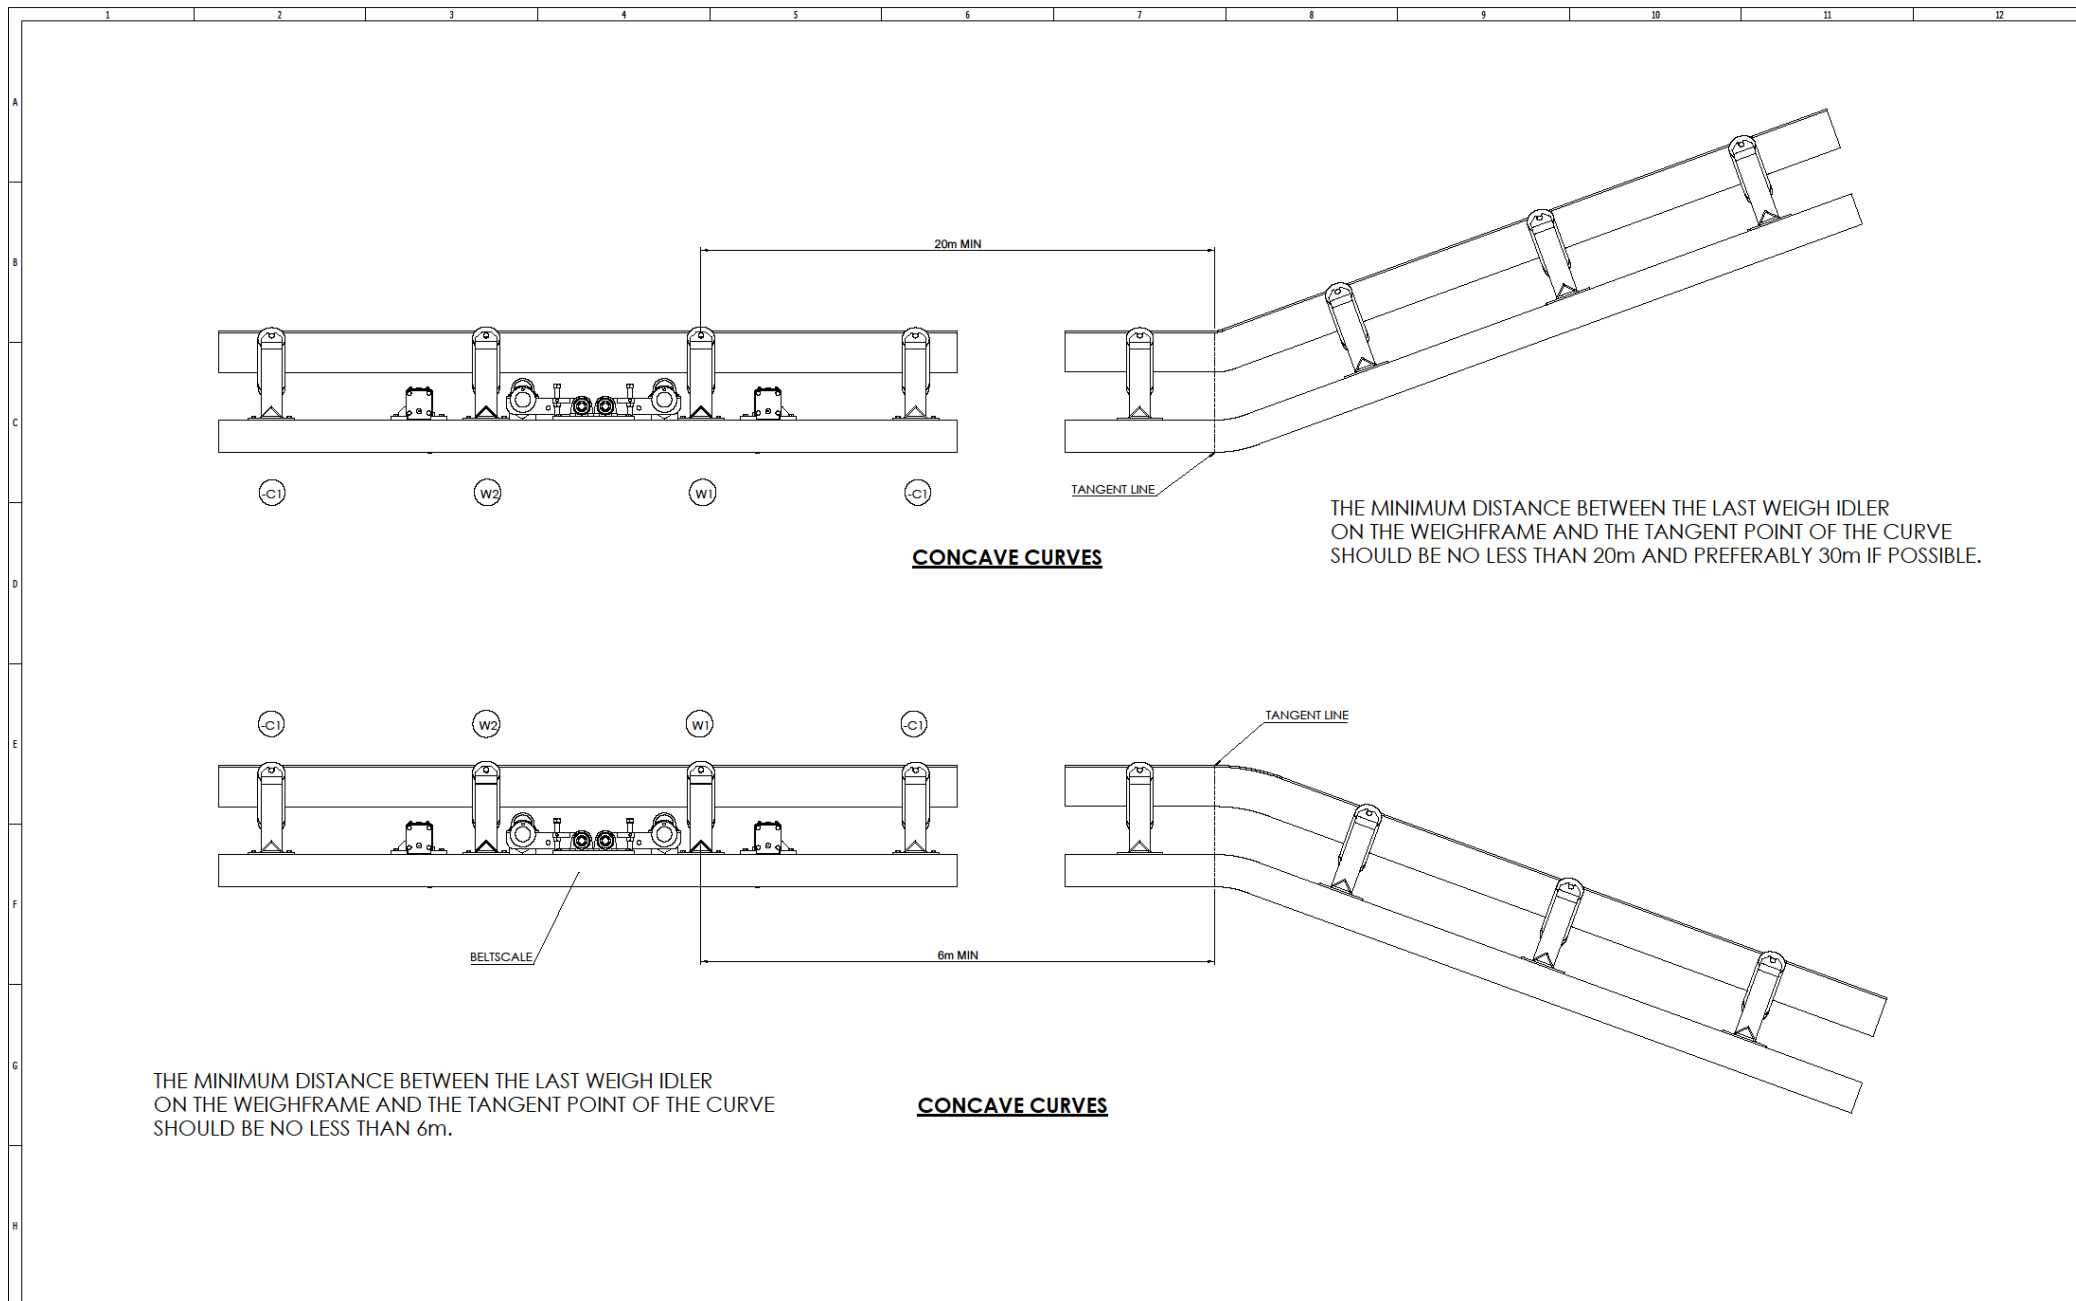

REVISIONS A: 30/06/16 B.ROBINSON ISSUED FOR APPROVAL	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN					DRAWN B.ROBINSON	 WEB-TECH AUSTRALIA PTY. LTD. ACR 600 7th FL 11 ELECTRONICS STREET GRAFT HILL PLAINS, QUEENSLAND, 4123 AUSTRALIA P.O. BOX 4088 GRAFT HILL PLAINS, QUEENSLAND, 4123 AUSTRALIA Phone +61 7 5561 2641 Fax +61 7 5561 2655	SIZE A1	DRAWING No. NUMBER BSSG01	REV. A	
	NOMINAL SIZE	UP TO 50	ABOVE 50	ABOVE 100	ABOVE 200	APPROVED		TITLE CONVEYOR LOADING DISTANCE MAXIMUM CONVEYOR INCLINATION	CUSTOMER		
	MAKING	± 0.1	± 0.2	± 0.3	± 0.5	± 1.0			PROJECT		
	FABRICATION	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0			C/D FILE BSSG01 - Loading Distance Plate Indication		
	ASSEMBLY	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0			 DO NOT SCALE IF IN DOUBT ASK		©
ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED							The design and any fabrication of this drawing is the sole responsibility of the designer and is not to be used for any other purpose without the written permission of the designer.				
UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN							WEB-TECH AUSTRALIA PTY. LTD.				
UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN							DATE APP'D				
UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN							SCALE				
UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE UNITS SHOWN							N.T.S.				




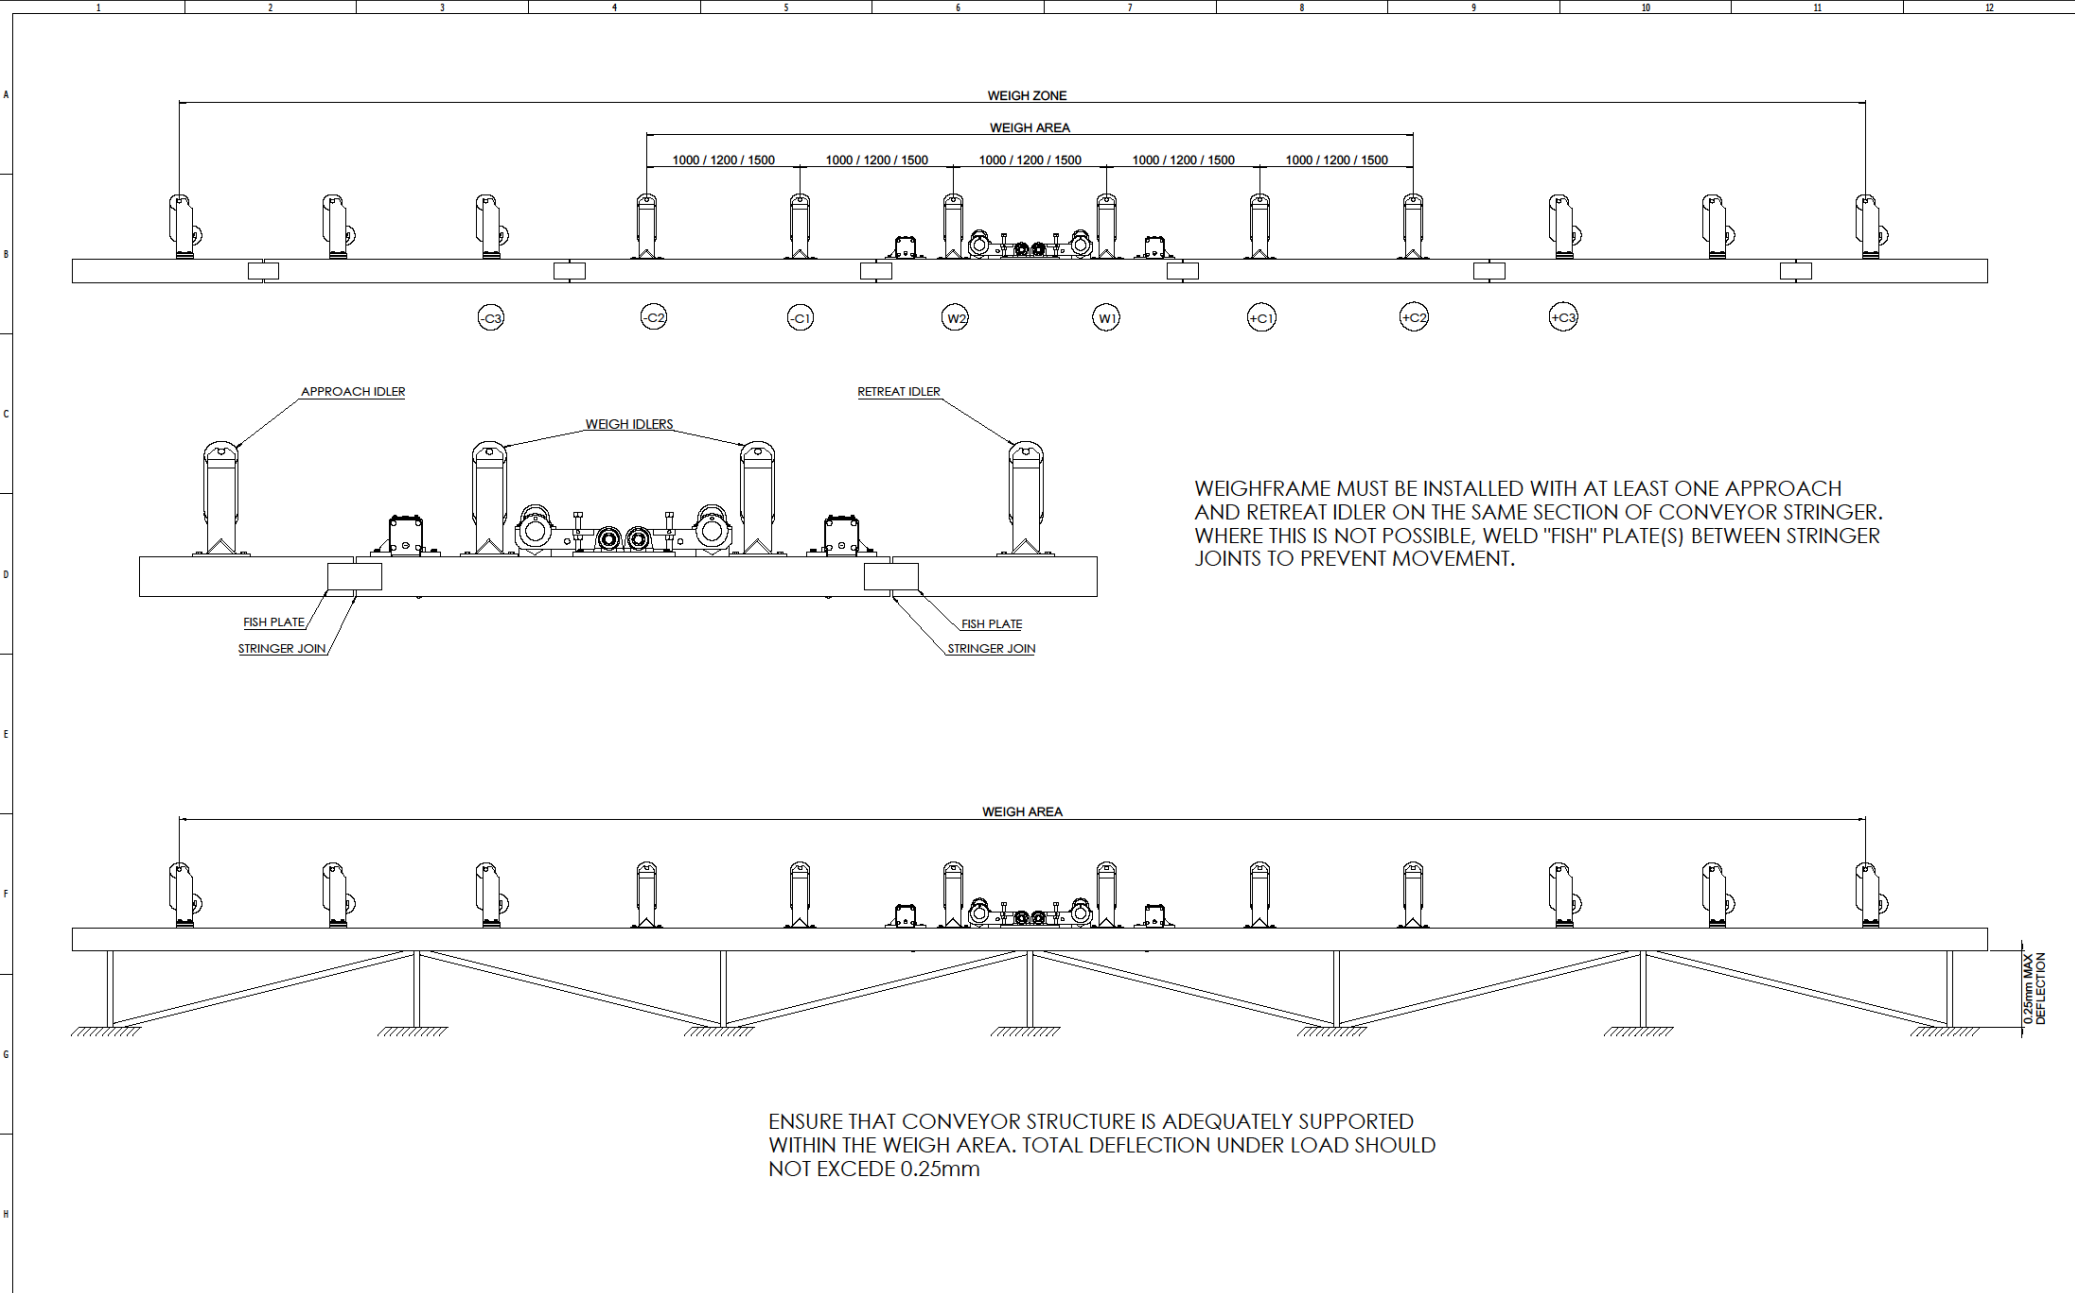
REVISIONS A. BARKLEY B. ROBINSON ISSUED FOR APPROVAL	UNLESS OTHERWISE STATED UNTOLERANCED DIMENSIONS TO BE WITHIN THE LIMITS SHOWN				DRAWN	BARKINSON	 WEB-TECH AUSTRALIA PTY. LTD. A.C.N. 610 564 412 12 ELECTRONICS STREET EAST MELBOURNE, QUEENSLAND, 4113 AUSTRALIA P.O. BOX 408 EAST MELBOURNE, QUEENSLAND, 4113 AUSTRALIA Phone +61 3 9462 2844 Fax +61 3 9462 1805	SIZE A1	DRAWING No.	
	NOMINAL SIZE	UP TO 50	ABOVE 50 UP TO 100	ABOVE 100 UP TO 200	ABOVE 200	ABOVE 300			NUMBER	REV.
	MACHINING	± 0.1	± 0.2	± 0.3	± 0.5	± 1.0			BSSG02	A
	FABRICATION	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0			CUSTOMER	
	ASSEMBLY	± 0.5	± 0.5	± 0.5	± 1.0	± 2.0	 DO NOT SCALE IF IN DOUBT ASK		PROJECT	
							BELTSCALE PLACEMENT CONCAVE CURVES, CONVEX CURVES		CAD FILE	
							ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED		ISSUED - Concave Curves Convex Curves	

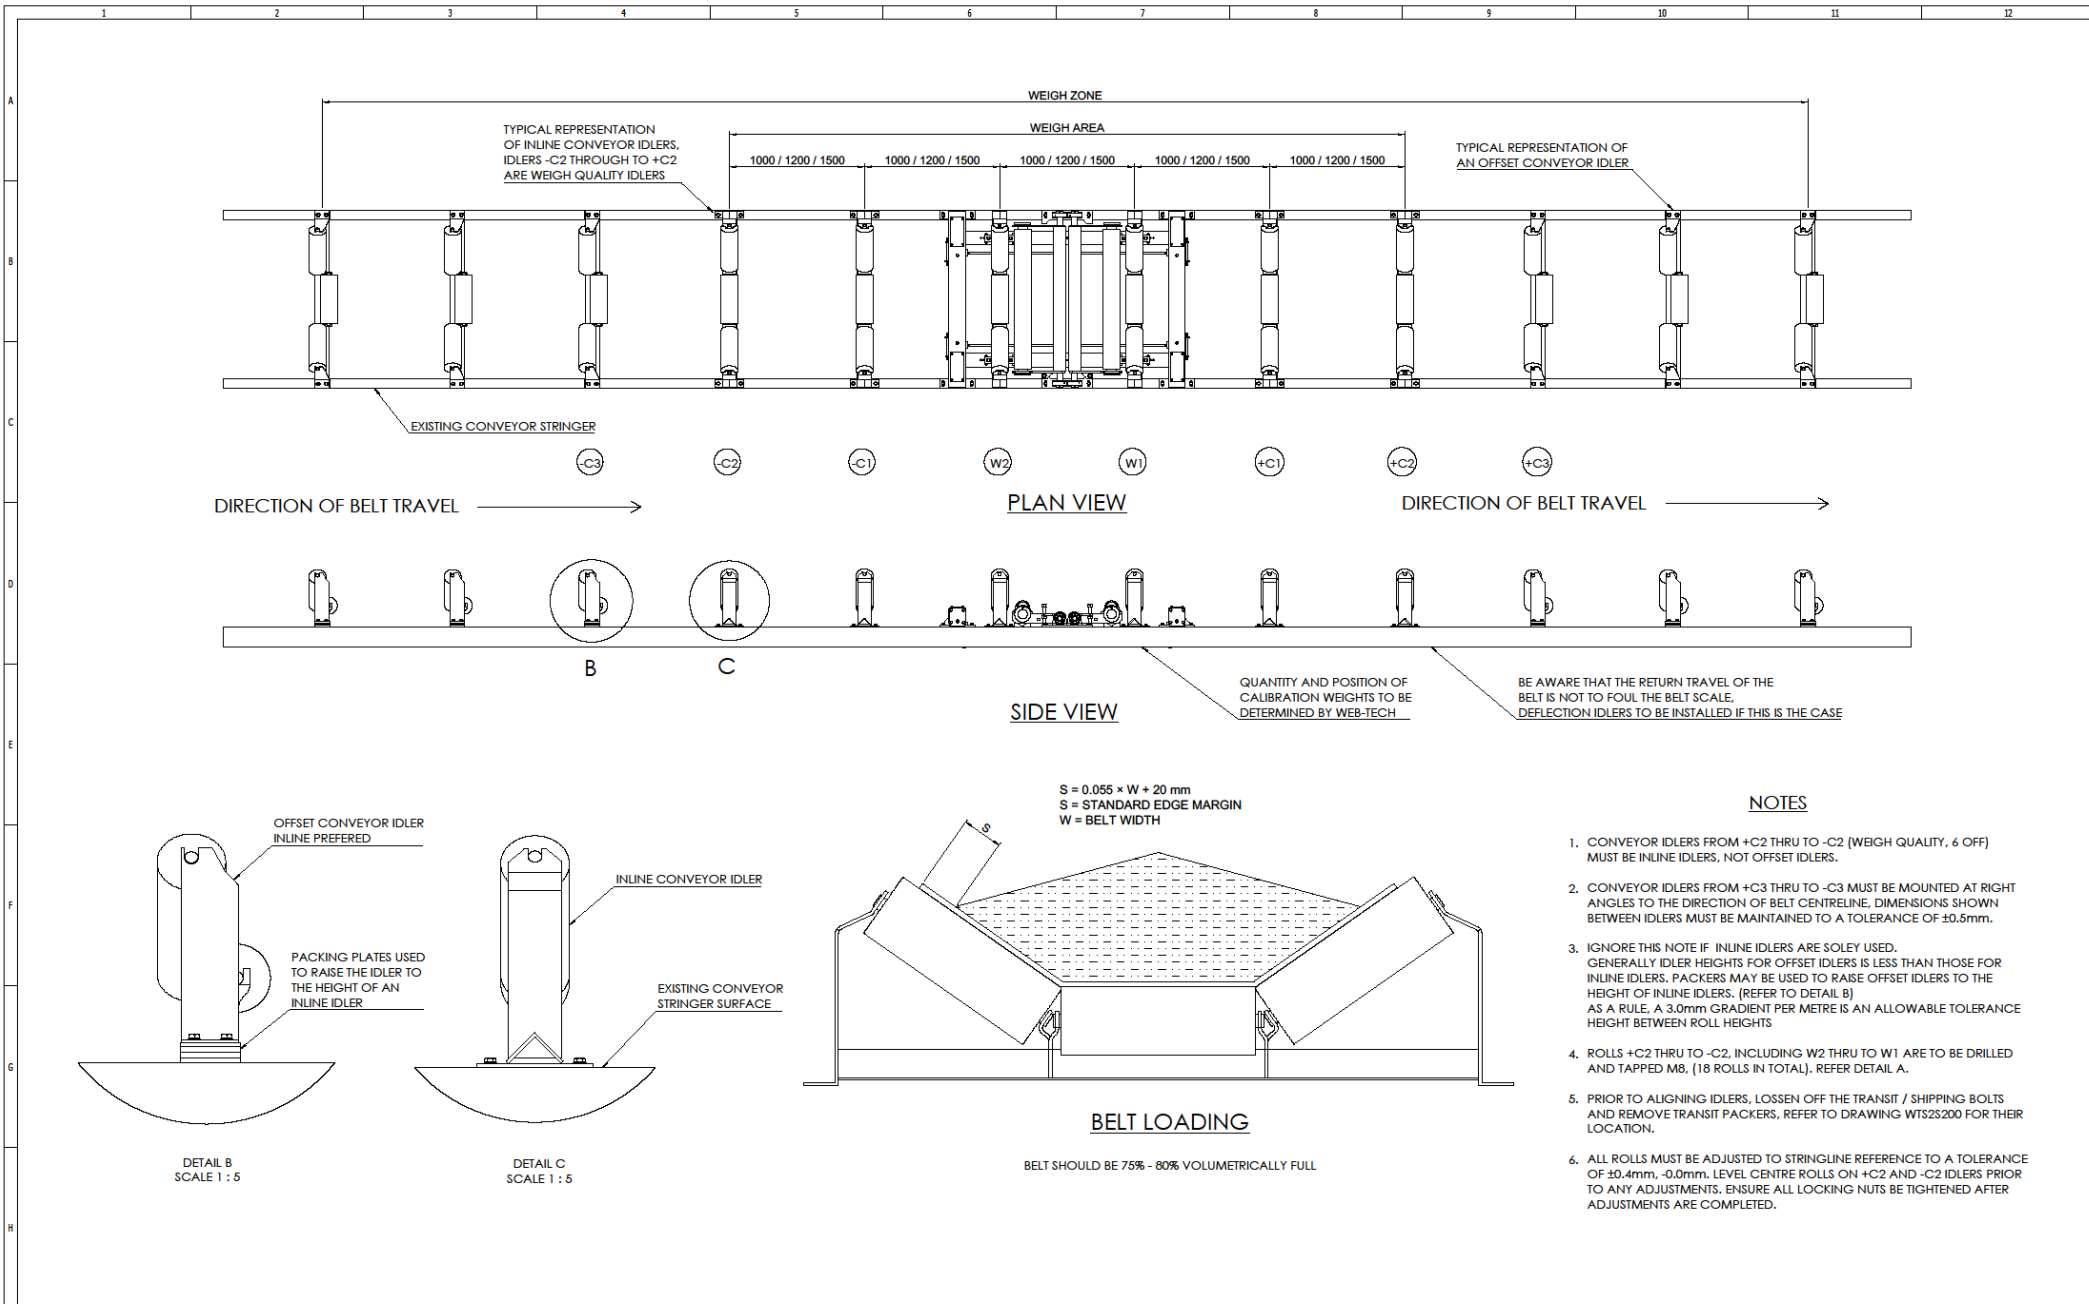


NOTES

- 1. CONVEYOR IDLERS FROM +C2 THRU TO -C2 (WEIGH QUALITY, 6 OFF) MUST BE INLINE IDLERS, NOT OFFSET IDLERS.
- 2. CONVEYOR IDLERS FROM +C3 THRU TO -C3 MUST BE MOUNTED AT RIGHT ANGLES TO THE DIRECTION OF BELT CENTRELINE, DIMENSIONS SHOWN BETWEEN IDLERS MUST BE MAINTAINED TO A TOLERANCE OF ±0.5mm.
- 3. IGNORE THIS NOTE IF INLINE IDLERS ARE SOLEY USED. GENERALLY IDLER HEIGHTS FOR OFFSET IDLERS IS LESS THAN THOSE FOR INLINE IDLERS. PACKERS MAY BE USED TO RAISE OFFSET IDLERS TO THE HEIGHT OF INLINE IDLERS. (REFER TO DETAIL B) AS A RULE, A 3.0mm GRADIENT PER METRE IS AN ALLOWABLE TOLERANCE HEIGHT BETWEEN ROLL HEIGHTS
- 4. ROLLS +C2 THRU TO -C2, INCLUDING W2 THRU TO W1 ARE TO BE DRILLED AND TAPPED M8, (18 ROLLS IN TOTAL). REFER DETAIL A.
- 5. PRIOR TO ALIGNING IDLERS, LOSSEN OFF THE TRANSIT / SHIPPING BOLTS AND REMOVE TRANSIT PACKERS, REFER TO DRAWING WTS2S200 FOR THEIR LOCATION.
- 6. ALL ROLLS MUST BE ADJUSTED TO STRINGLINE REFERENCE TO A TOLERANCE OF ±0.4mm, -0.0mm. LEVEL CENTRE ROLLS ON +C2 AND -C2 IDLERS PRIOR TO ANY ADJUSTMENTS. ENSURE ALL LOCKING NUTS BE TIGHTENED AFTER ADJUSTMENTS ARE COMPLETED.

REVISIONS A: 20/06/16 B.ROBINSON ISSUED FOR APPROVAL	UNLESS OTHERWISE STATED UNLESS OTHERWISE SPECIFIED TO BE WITHIN THE LIMITS SHOWN					DRAWN CHECKED APPROVED DATE APPD		S.ROBINSON		 WEB-TECH AUSTRALIA PTY. LTD. A/CN 800 704 431 11 ELIZABETH STREET EAST MELB PLAINS, QUEENSLAND 4114 AUSTRALIA P.O. BOX 1000 EAST MELB PLAINS, QUEENSLAND 4114 AUSTRALIA Phone +61 7 3941 2044 Fax +61 7 3941 0805	SIZE A1	DRAWING No.		REV. A	
	NOMINAL SIZE					SCALE		TITLE				CUSTOMER	PROJECT		CNO FILE BSS003 - Weighspan and Belt Loading
	MACHINING					DO NOT SCALE IF IN DOUBT ASK		WEIGHSPAN, WEIGHZONE, WEIGH QUALITY IDLERS AND BELT LOADING							
	FABRICATION					ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE SPECIFIED		The drawing and any fabrication or construction details are not to be used for any other purpose without the written permission of the drawing owner.							
	ASSEMBLIES														

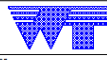

REVISIONS	UNLESS OTHERWISE STATED DIMENSIONS ARE TO BE WITHIN THE LIMITS SHOWN				DRAWN		B.ROBINSON			WEB-TECH AUSTRALIA PTY. LTD.		SIZE A1	DRAWING No.			
	NOMINAL SIZE				CHECKED					11 ELECTRONICS STREET (EAST) MELBOURNE, QUEENSLAND, 4111, AUSTRALIA P.O. BOX 408 (EAST) MELBOURNE, QUEENSLAND, 4111, AUSTRALIA Phone: +61 (0) 3 9581 2881 Fax: +61 (0) 3 9581 2882			NUMBER			
	TOLERANCES				APPROVED					PROJECT			BSSG04			
	ASSEMBLY				DATE APPO		SCALE			CUSTOMER			REV.			
							N.T.S.									
A	30/06/16	B.ROBINSON	ISSUED FOR APPROVAL						TITLE CONVEYOR STIFFENING							
B	22/07/16	B.ROBINSON	REMOVED WEIGHT IDLER NUMBERS													
C	22/07/16	B.ROBINSON	REMOVED WEIGHT IDLER NUMBERS													
D	22/07/16	B.ROBINSON	REMOVED WEIGHT IDLER NUMBERS													

WTS4S2 – INSTALLATION AND OPERATION MANUAL

Appendix E – MW6 Datasheets

MW6 DATA SHEET					
Customer:			Conveyor Designation:		
Model:			Date:		
Load Cell Cap/Type:			Data by:		
Tare:		Serial No:		Material:	
Contract No.			Order No:		
Software version No:			Board S/N:		
Tacho:		Ppr. Type:		Multiplier :	
Menu	MASTERWEIGH 6 DATA				
1	Parameter Setup			Pulse Width:	ms
	Capacity	Inc	Zero ref:	mV	Precision ref: mV
2	Pulses:		Per Belt Rev.	No. of Belt Revs:	
3	Zero Calibration:			mV.	Z Track: mV.
4	Fixed Weight Calibration		Calibration Weights :		
	Span:	Target Weight:		From <u>Chains</u> or Live Load Test	
5	Empirical Span:				
6	Null Level:		This value should be no more than 1 to 2% of design capacity.		
7	Autozero Tracking				
	Zero Track if <		For	Revs.	Delay Time: secs
8	Load Cell Output				
	Static (No Load):		mV.	Static (with Weights): mV.	
	Dynamic (No Load):		mV.	Dynamic (with Weights): mV.	
9	Tacho Frequency:		Hz.	@ Motor frequency =	Hz.
10	Filter Factors				
	Display:	secs.	Rate O/P:	secs.	Tacho I/P : secs.
	Fast Track Band:		%		
11	Displayed Units:		Kgs / Hr	Belt Serial Number :	
12	Belt Speed:		m /s	@ Motor freq. =	Hz.
				Belt Length :	m
Resets = Cleared to 1. Configures = Cleared to 1.					

WEB-TECH WEIGHFEEDER DESIGN DATA SHEET

CLIENT : _____

DATE : _____

DESIGNATION : _____

MODEL : _____

CALIBRATION METHOD : _____

CALIBRATION BAR(S)

1. CALIBRATION BAR QTY AND TOTAL WEIGHT _____ = _____ kg
2. IDLER PITCH _____
3. TOTAL WEIGH AREA _____ metres
4. EQUIVALENT LOADING/m WITH CAL BAR(S) (Item 1 / Item 3) = _____ kg/m
5. BELT SPEED _____ m/s
6. SIMULATED MASS RATE (Item 4 x Item 5 x 60) = _____ kg/min
7. BELT LENGTH _____ metres
8. No. OF BELT REVOLUTIONS FOR TEST _____
9. TARGET WEIGHT (Item 4 x Item 7 x Item 8) = _____
10. TARGET WEIGHT after material tests = _____

CALIBRATION CHAIN

1. WEIGHT OF CALIBRATION CHAIN PER STRAND _____ kg/m
2. No. OF STRANDS _____
3. TOTAL WEIGHT OF CALIBRATION CHAIN (Item 1 x Item 2) _____ kg/m
4. BELT LENGTH _____ m
5. No. OF BELT REVOLUTIONS FOR TEST _____
6. TARGET WEIGHT (Item 3 x Item 4 x Item 5) = _____
7. TARGET WEIGHT after material tests = _____

SETTINGS

1. SHEARGATE OPENING (@ CENTRE) _____ mm
2. MIN. FREQUENCY ON VVVF DRIVE _____ Hz
2. MAX. FREQUENCY ON VVVF DRIVE _____ Hz